


RISOGRAPH R. A. SERIES ADVISORY MESSAGES.

<u>LOCATION</u>	<u>CODE</u>	<u>DESCRIPTION</u>	<u>ACTION</u>
1	E 36	Original Miss-feed.	Remove original & reload it.
1	E 37	Original jam at entrance of ADF unit.	Open ADF unit, remove jammed original and reload.
1	E 38	Original jam in ADF unit.	Open ADF unit, remove jammed original and reload.
1	E 39	Original jam at exit of ADF unit.	Open ADF unit, remove jammed original and reload.
1	E 59	ADF unit is not closed.	Close ADF unit securely.
2	NONE	Disposal box is full.	Empty disposal box.
3	E 26	Used master stuck at entrance of disposal box.	Pull out disposal box and remove jammed master.
3 4 12	E 25	Used master remains on drum.	Pull out drum, remove master, replace drum and restart.
4 9 12	E 31	Paper jam in paper feed area.	Pull out drum, remove paper, replace drum and restart.
4 10 12	E 32	Paper jam in paper exit area.	Pull out drum, remove paper replace drum and restart.
4 11	E 24	Remove cut master strip.	Open original feed table and remove cut master strip from the top of the drum.
4 12	E 23	Master not cut correctly.	Pull out drum, check that master is loaded. If not, restart master making operation.
4 12	E 27	There is no master on the drum.	Place an original in the ADF and press start button.
4 12	E 34	Paper stuck to drum.	Pull out drum, remove paper and restart.
4 12	E 52	Drum not correctly fitted.	Push drum securely into place and lower green handle.
4 12	E 61	Drum unit is wrong size.	Fit correct size drum.

RISOGRAPH R. A. SERIES ADVISORY MESSAGES.

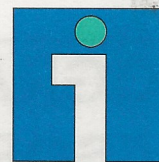

<u>LOCATION</u>	<u>CODE</u>	<u>DESCRIPTION</u>	<u>ACTION</u>
5 11 14	E 21	Master not loaded on drum correctly.	Refit master roll and restart.
5 11 14	E 22	Master miss-feed.	Refit master roll and restart.
5 11 14	E 54	Master roll not fitted correctly.	Refit master roll.
6 11	NONE	No more masters on master roll.	Replace master roll.
7 12	NONE	Ink bottle is empty.	Replace ink bottle.
7 12	E 53	Ink bottle not fitted correctly.	Insert ink bottle firmly, and latch locking lever into place.
8	NONE	No paper on feed tray.	Add paper.
8	E 60	Feed tray jammed.	Restack paper on feed tray.
9	E 33	Paper miss-feed from feed tray.	Check paper feed area, restack paper and restart.
11	E 56	Original feed table not closed.	Close original feed table.
12	E 55	Front door not closed.	Close front door.
13	E 57	Disposal box not fitted correctly.	Refit the disposal box.
14	E 58	Master loading unit is open.	Close master loading unit securely.
15	E 51	No card inserted in card counter.	Insert card.

*If the red spanner on the control panel flashes with an error code displayed, contact **INTERFAX** for a service technician to attend.*

FOR SERVICE AND SUPPLIES
PHONE INTERFAX SYSTEMS P.L.C. 071-231-4026