

RZ 9 SERIES

PARTS LIST

Version 1.0

October, 2005

Published by
RISO KAGAKU CORPORATION
Overseas Technical Department

MACHINE MODELS

Refer to the chart below for the "Remark" column in this parts list.

The "REF" alphabets in the chart below is marked in the "Remark" column within the parts list where applicable.

<i>RZ 9 Series</i>			
Area & Voltage	Model Name	Dpi	REF
USA 100-240 volts	RZ990U	D600	U
	RZ997U	D600	U
Europe 200 volts	RZ970E	D600	E
	RZ977E	D600	E
Asia 100-240 volts	RZ970A	D600	A
	RZ977A	D600	A
China 200 volts	RV9690C	D600	C
	RV9698C	D600	C

I. PARTS LIST

	<u>Page No.</u>
Fig.1 Main Body Area	2
Fig.2 Scraper Area	4
Fig.3 Elevator - Safety SW Area	6
Fig.4 Paper - Feed Tray	8
Fig.5 Drive Mechanism Area (1)	10
Fig.6 Drive Mechanism Area (2)	12
Fig.7 Drive Mechanism Area (3)	14
Fig.8 Roller System Area	17
Fig.9 Drum Area (1)	19
Fig.10 Drum Area (2)	21
Fig.11 Drum Area (3)	23
Fig.12 Drum Area (4)	25
Fig.13 Drum - Rail Area	27
Fig.14 Clamp Area	29
Fig.15 Separator Area	31
Fig.16 Suction Area	33
Fig.17 Paper Receiving Tray Area	35
Fig.18 Scanner Area (1)	37
Fig.19 Scanner Area (2)	39
Fig.20 Master-Making Area (1)	41
Fig.21 Master-Making Area (2)	43,44
Fig.22 Master-Making Area (3)	46
Fig.23 Master-Making Area (4)	48
Fig.24 Master-Removal Area (1)	50
Fig.25 Master-Removal Area (2)	52
Fig.26 Master-Removal Area (3)	54
Fig.27 Electrical Component Area (1)	56
Fig.28 Electrical Component Area (2)	58
Fig.29 Electrical Component Area (3)	60
Fig.30 Electrical Component Area (4)	62
Fig.31 Stage Cover Area	64
Fig.32 Exterior Cover Area	66

Fig.33	Auto Control Stacking Tray (1)	68
Fig.34	Auto Control Stacking Tray (2)	70
Fig.35	Auto Control Stacking Tray (3)	72
Fig.36	Multi Tray Paper Feeder (1)	74
Fig.37	Multi Tray Paper Feeder (2)	76,77
Fig.38	Multi Tray Paper Feeder (3)	79
Fig.39	Multi Tray Paper Feeder (4)	81
Fig.40	Multi Tray Paper Feeder (5)	83,84
Fig.41	Multi Tray Paper Feeder (6)	86
Fig.42	Multi Tray Paper Feeder (7)	88
	INDEX (RZ9).....	II -1
	INDEX (Auto Control Stacking Tray/ Multi Tray Paper Feeder).....	III -1

Amended note (Version comparison)

 
 Yellow marked parts are RZ9 new parts or modification parts.

Fig.1 Main Body Area

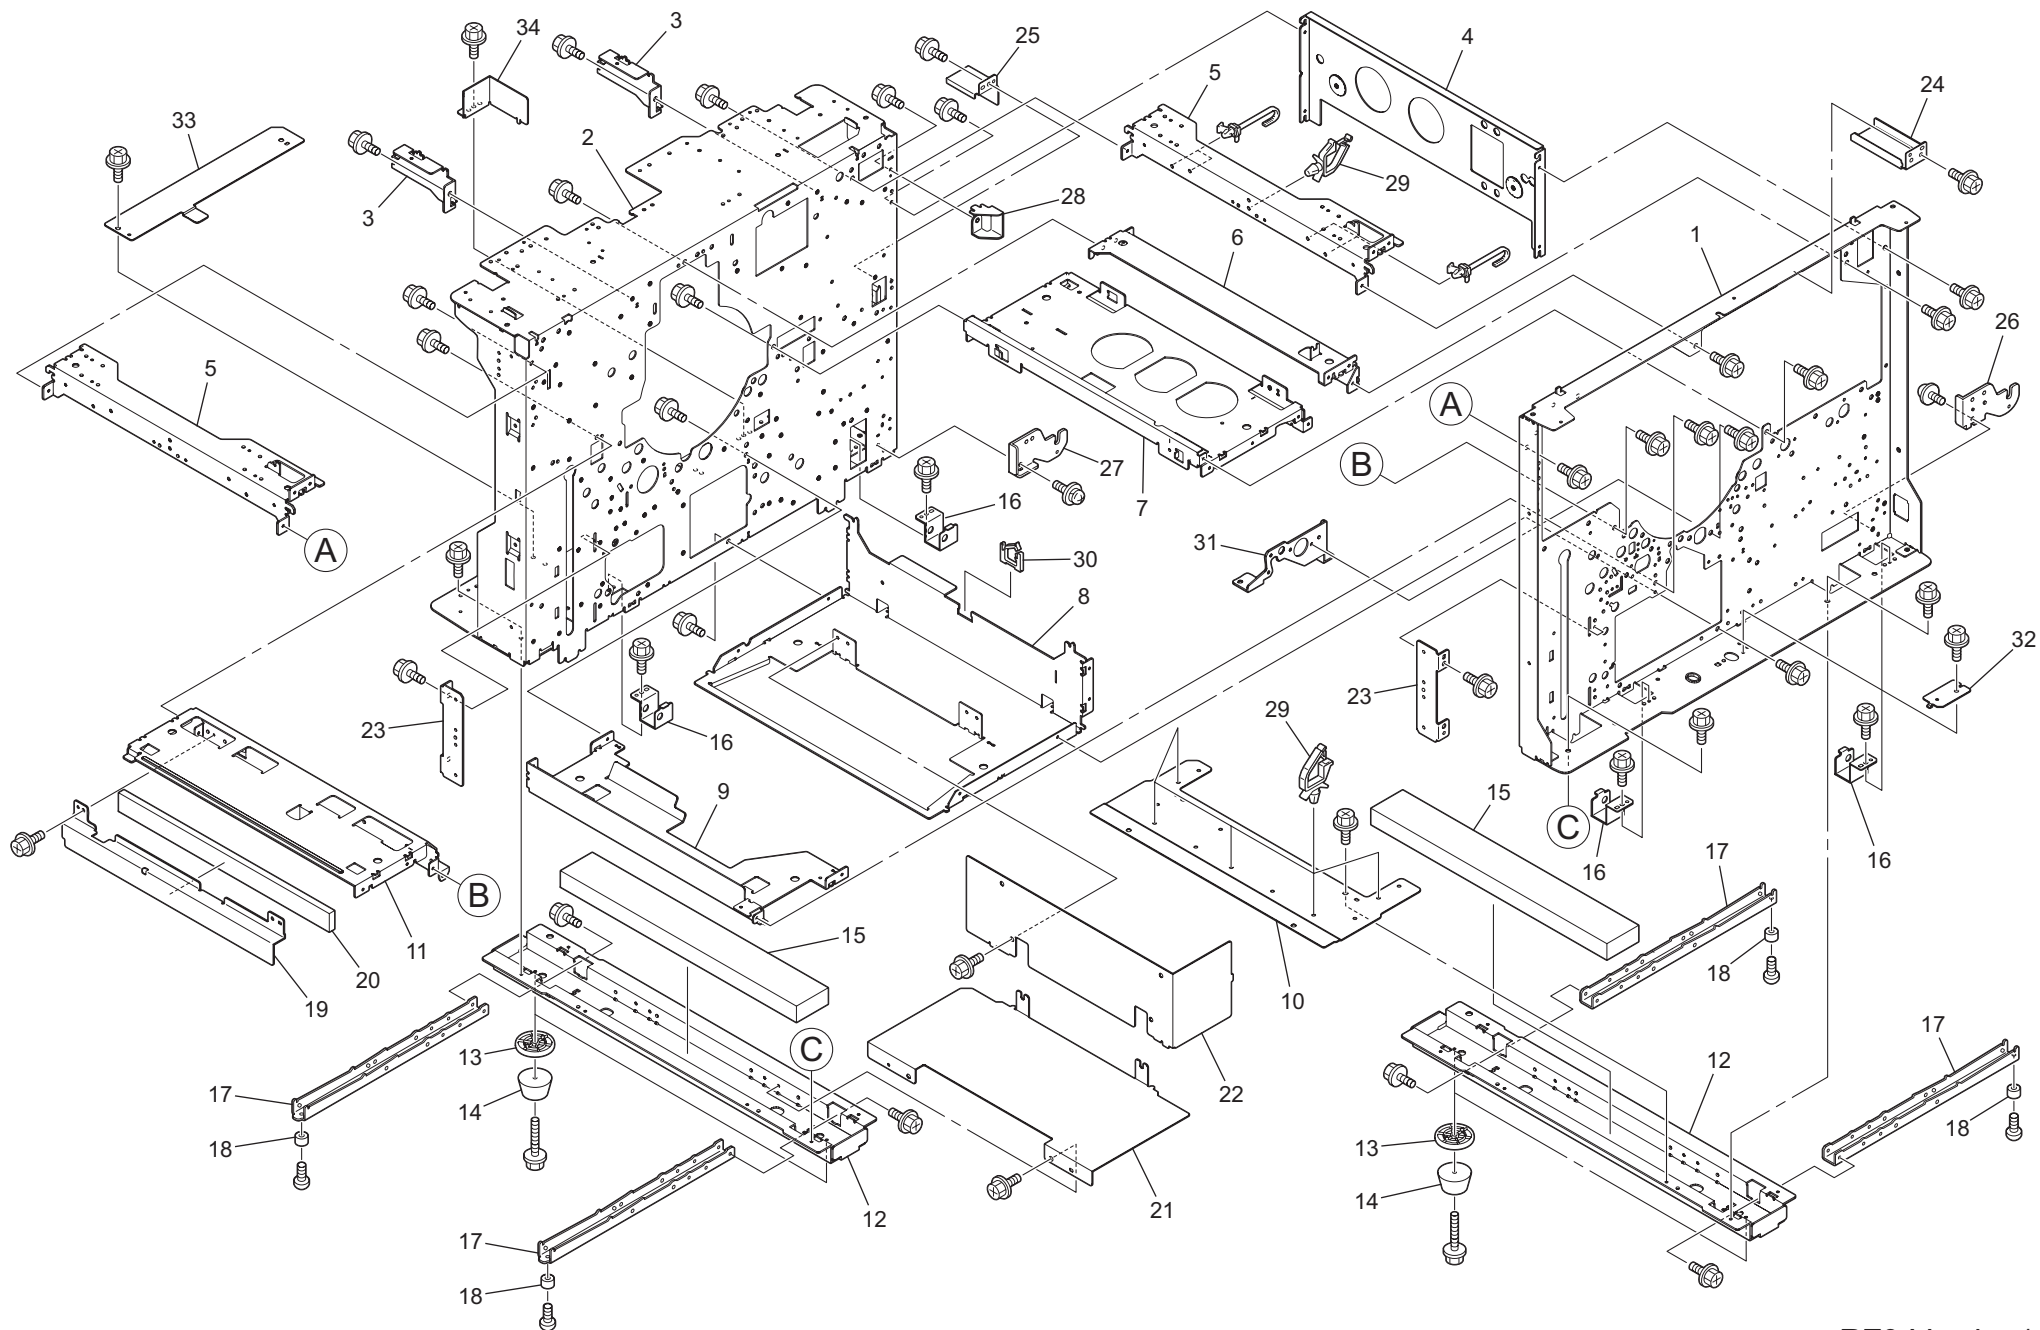


Fig.1. Main Body Area

No.	Part No.	Part Name	Q'ty	Remark
1		Side Frame; Front	1	
2		Side Frame; Rear	1	
3	045-10009-008	Support Bracket; FB Scanner	2	
4	023-10010-106	Panel Board; Main Frame	1	
5	023-10007-008	Scanner Stay; Main Frame	2	
6	023-10012-109	Upper Stay; Drum	1	
7	045-10004-006	Stay; Master Making; Main Frame	1	
8	045-10006-106	Main Stay; Main Frame	1	
9	045-10005-002	Lower Stay; Drum	1	
10	045-10007-005	Bottom Plate; Main Frame	1	
11	023-10005-005	Stay; Paper Feeding; Main Frame	1	
12	023-10003-002	Bottom Stay; Main Frame	2	
13	023-10018-000	Spacer; Rubber Foot	4	
14	660-01015-100	Rubber Foot	4	
15	023-10024-000	Noise Absorber; Bottom; Main Frame	2	
16	023-10008-004	Transportation Support Plate	4	
17	023-10017-100	Lifting Handle	4	
18	023-10030-000	Stopper; Lifting Handle	4	
19	023-12542-202	Cover; Guide Roller	1	
20	023-12544-108	Noise Absorber; Guide Roller Cover	1	
21	045-10013-005	Lower Cover; Paper Feed	1	
22	045-10011-002	Cover; Main Motor	1	
23	023-12536-105	Stay; Guide Plate	2	
24	023-28358-002	Stopper; M.-M. Unit	1	
25	023-28408-000	Protection Plate; Wire Harness; M.-M.	1	
26	023-21641-400	Support Plate F; P.-Rcv.-T.	1	
27	023-21642-406	Support Plate R; P.-Rcv.-T.	1	
28	023-21622-006	Magnet Catch; P.-Rcv.-T.	1	
29	665-02043-006	Wire Saddle;LWS-1316	6	
30	665-00308-002	Edging Saddle;LES-25L	1	
31	045-10008-001	Reinforce Plate; Pressure Roller Frame	1	
32	045-10014-001	Guide Cover; Front	1	
33	045-10015-008	Guide Cover; Rear	1	
34	045-10017-000	Cover; Wire Harness	1	

[illegible]

Fig.2 Scraper Area

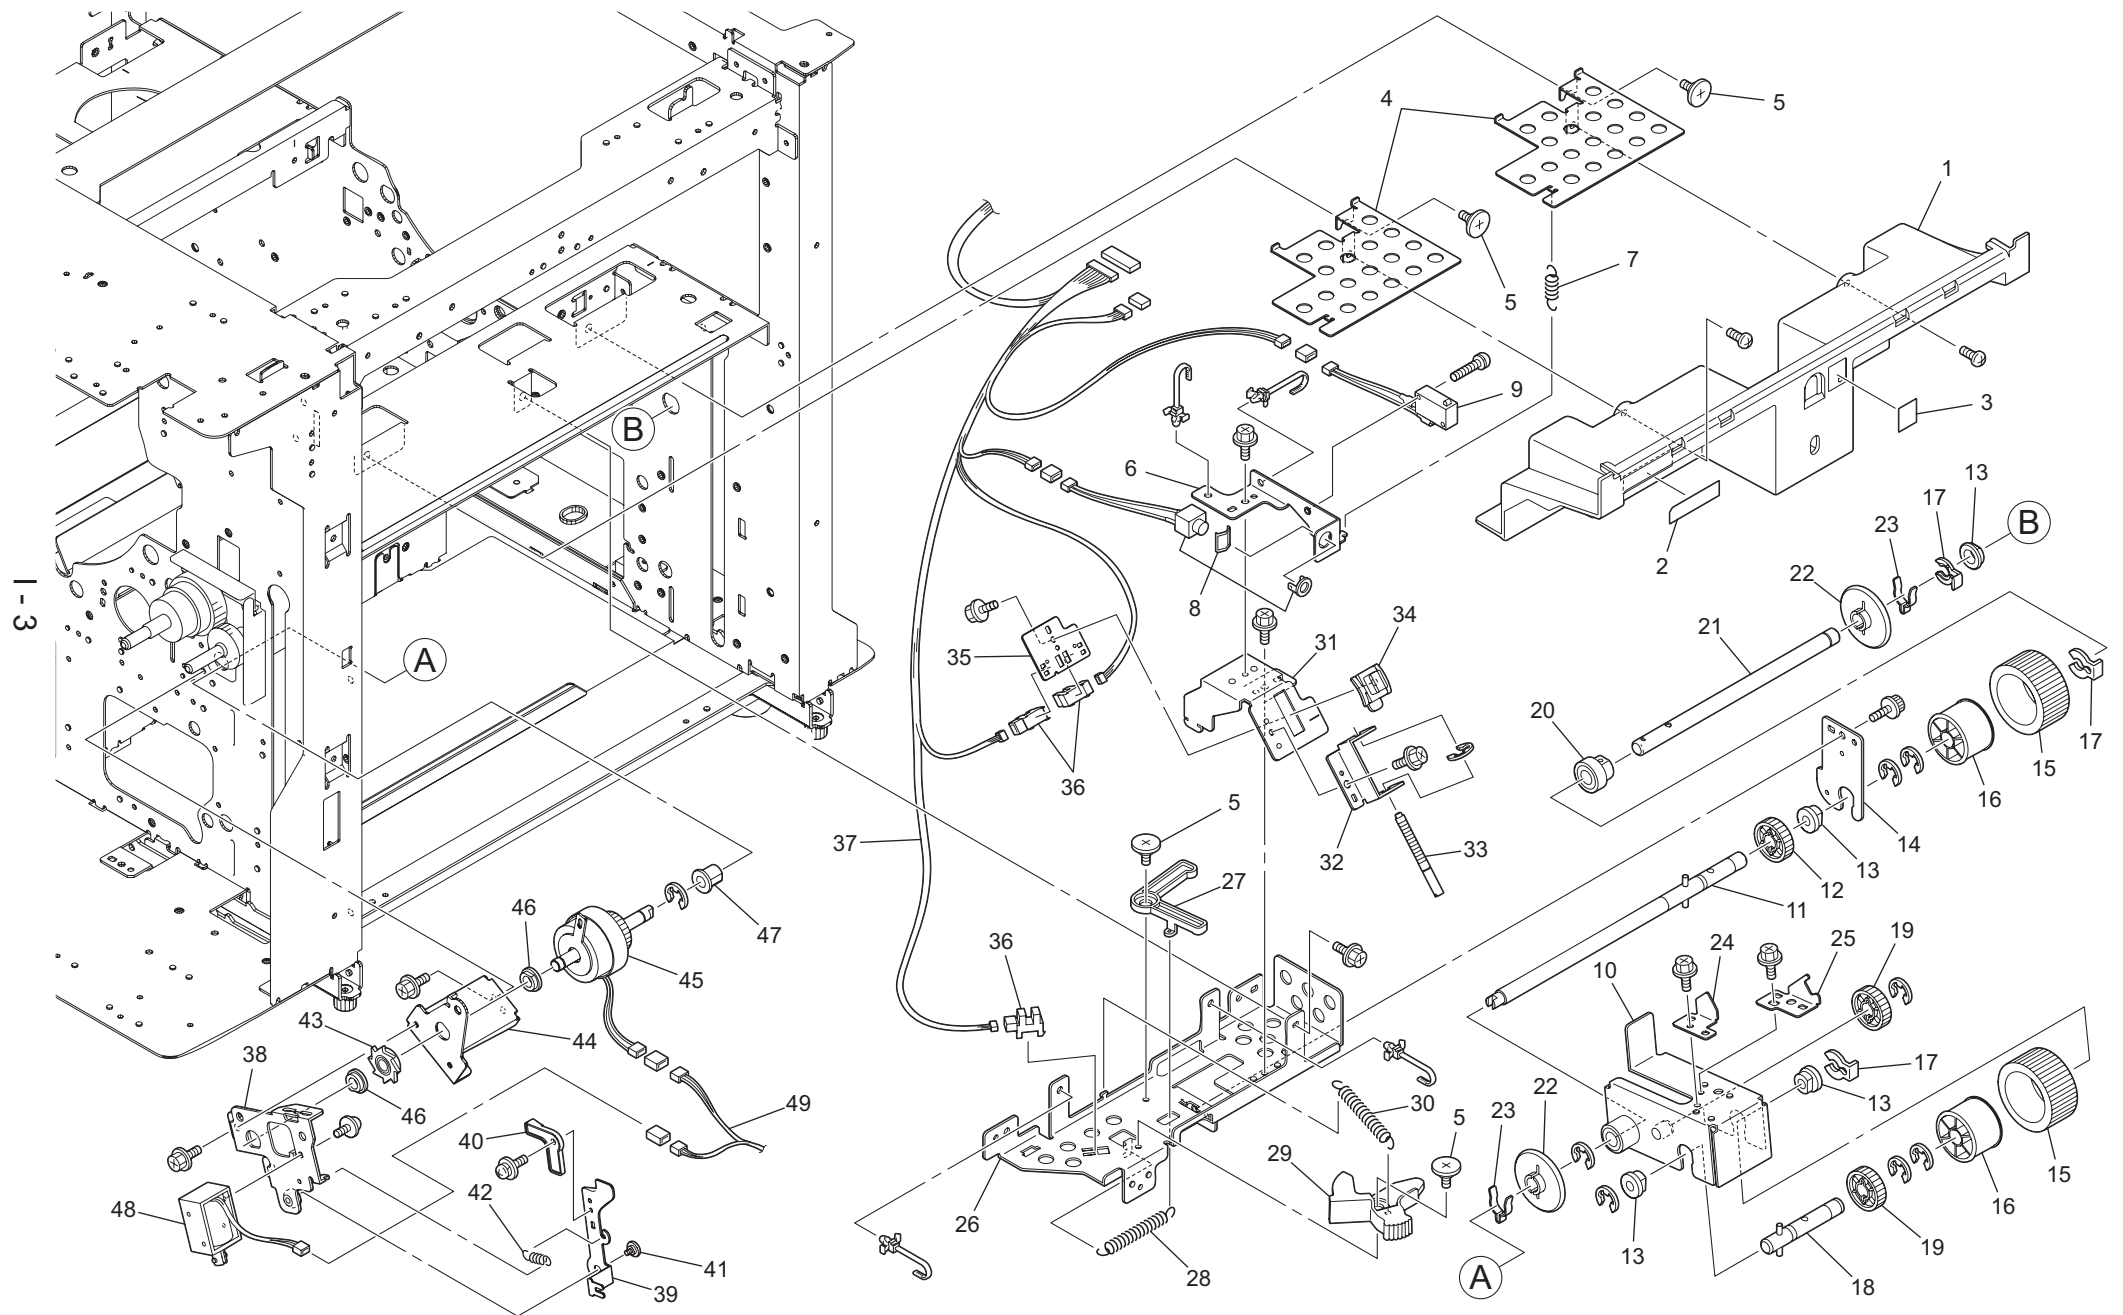


Fig 2. Scraper Area

No.	Part No.	Part Name	Q'ty	Remark
1	023-12316-105	Cover; P.-Feed	1	
2	550-21173-001	Seal; P.-Feed Pressure; Pic.	1	
3	030-04034-006	Seal; P.-F.-T. Down	1	
4	023-12319-007	Upper Guard	2	
5	635-17824-005	Stepped Screw;F8X2.3;M4X4.4	4	
6	023-12315-001	E Switch Plate	1	
7	023-12344-001	Spring; Elevator Safety SW; Upper	1	
8	021-51029-208	Elevator SW Ass'y	1	
9	023-53023-007	Elevator Safety SW	1	
10	023-12333-204	Frame Bracket; Pick-Up	1	
11	023-12329-002	Shaft; Pick-Up Roller	1	
12	612-10021-107	Gear;M0.8X33X7.4	1	
13	607-16001-000	Metal;F10X15/14X6;18X2	4	
14	023-12328-103	Support; Pick-Up Roller Shaft	1	
	023-12305-006	Pick-Up Roller; RZ (15-16)	2	
15	035-14303-001	*Rubber; Pick-Up Roller	2	
16	023-12306-002	*Core; Pick-up Roller	2	
17	019-11812-106	Lock Ring	3	
18	023-12330-000	Scraper Shaft; Pickup	1	
19	612-11300-107	Gear;M0.8X34X8.5	2	
20	023-12338-001	Joint Shaft Assy	1	
21	023-12337-102	Extention Shaft; Pick-Up Roller	1	
22	011-11522-100	Paper Guide Roller	2	
23	000-06123-007	Stopper;Paper Guide Roller	2	
24	023-12334-006	Actuator; Upper limit; Std; P.-F.-T.	1	
25	023-12308-005	Actuator; Upper limit; Card; P.-F.-T.	1	
26	023-12310-000	Stay; Paper Feed	1	
27	020-11813-006	Arm;P.-F.Pressure Adj.	1	
28	020-11811-100	Spring B;P.-F.Pressure Adj.	1	
29	023-12312-100	P.-F.Pressure Adj. Lever	1	
30	023-12313-009	Spring;Pf Pressure Adj. Lever	1	
31	023-12314-005	Bracket A; Upper Limit Sensor	1	
32	030-14342-205	Support Plate B; Upper Limit	1	
33	030-14346-103	Upper Limit Adj. Screw	1	

[illegible]

Fig.3 Elevator - Safety SW Area

I-5

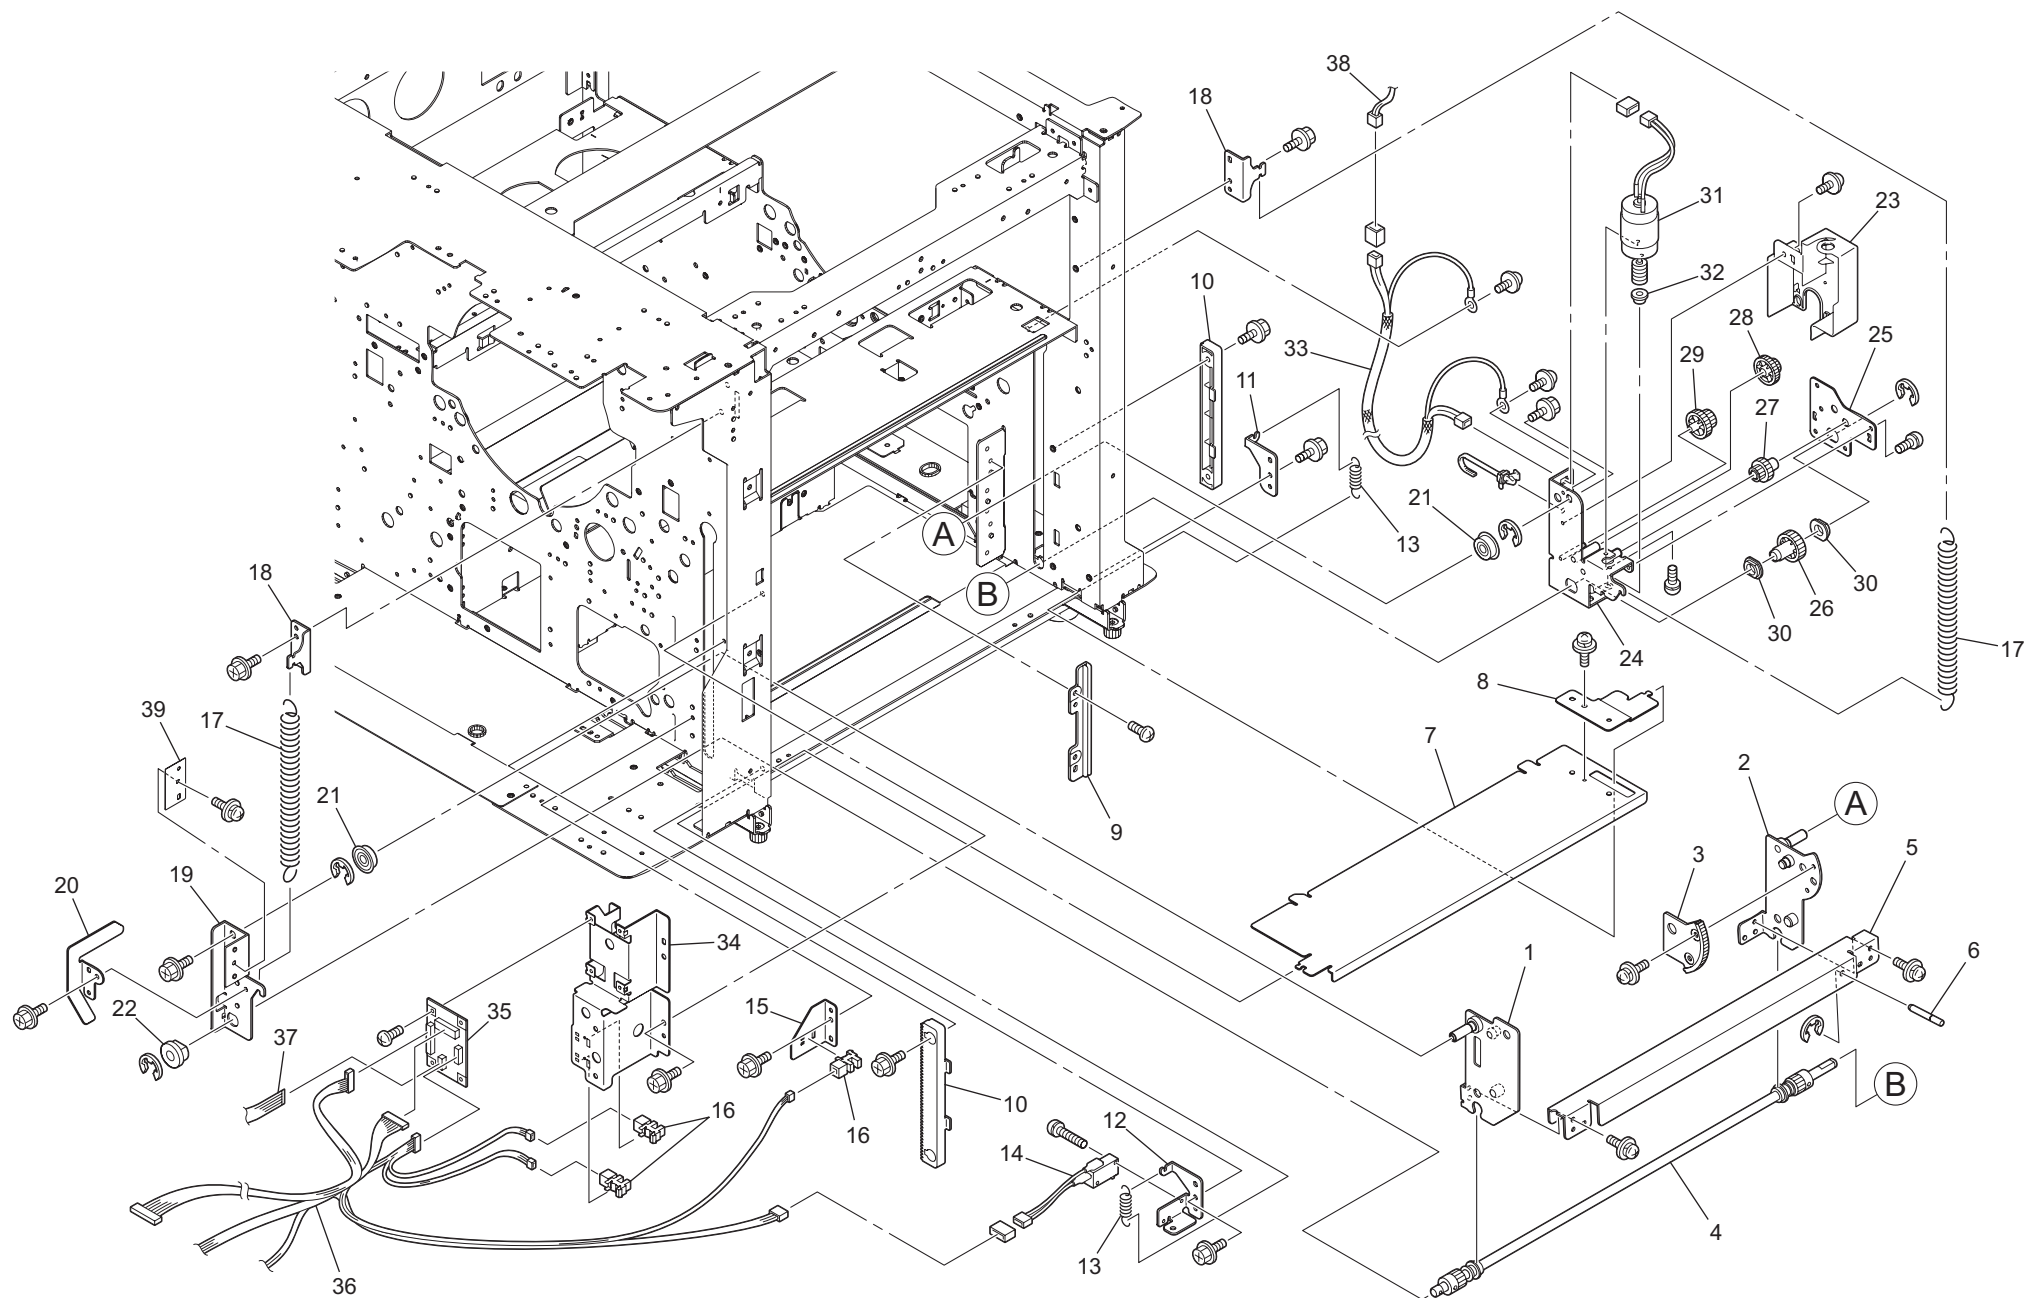


Fig 3. Elevator-Safety SW Area

No.	Part No.	Part Name	Q'ty	Remark
1	024-12207-109	Plate;Elevator R	1	
2	024-12201-100	Plate;Elevator F	1	
3	024-12206-005	Absorber Gear	1	
4	023-75159-050	Elevator Shaft Ass'y	1	
5	024-12210-002	Reinforce Elevator	1	
6	024-12211-009	Guide Shaft	1	
7	023-12205-001	Lower Limit Frame; P.-F.	1	
8	023-12206-008	Support; Lower Limit Frame; P.-F.	1	
9	024-12213-001	Elevator Guide	1	
10	023-12201-006	Elevator Rack; P.-F.	2	
11	023-12251-003	Bracket F; Spring; Lower Safety SW	1	
12	023-12252-000	Bracket R; Spring; Lower Safety SW	1	
13	023-12237-000	Spring; Elevator Safety SW; Lower	2	
14	023-53023-007	Elevator Safety SW	1	
15	023-12233-102	Bracket; Lower Limit Sensor	1	
16	444-30008-100	Sensor;LG-248NI1	3	
17	023-12202-002	Spring; Elevator	2	
18	023-12203-009	Bracket; Elevator Spring; P.-F.	2	
19	024-12215-101	E Spring Hook R	1	
20	024-12214-008	FFC GUIDE	1	
21	600-50057-006	Bearing;Flaw678ZZA	2	
22	607-15000-000	Metal; F8X13/12X5;16X2	1	
	023-75078-050	Elevator Motor Assy (23-32)	1	
23	023-12247-006	*Cover; Elevator Motor	1	
24	023-12234-109	*Motor Chassis; Elevator Motor	1	
25	023-12223-000	*Gear Cover; Elevator Motor	1	
26	612-10009-107	*Gear; M1X24	1	
27	612-80011-001	*Gear; M0.8X23+M0.8X14	1	
28	612-80012-008	*Gear; M0.8X30+M0.8X14	1	
29	612-80013-004	*Gear; M0.8X29+M1X14	1	
30	023-12244-104	*Elevator Motor Collar	2	
31	023-74001-054	*Motor Assy(CWRS-445PA)	1	
32	030-19205-001	*Support; Clamp Worm	1	
33	023-12602-108	Wire Harness; Elevator Motor	1	

[illegible]

Fig.4 Paper - Feed Tray

1-7

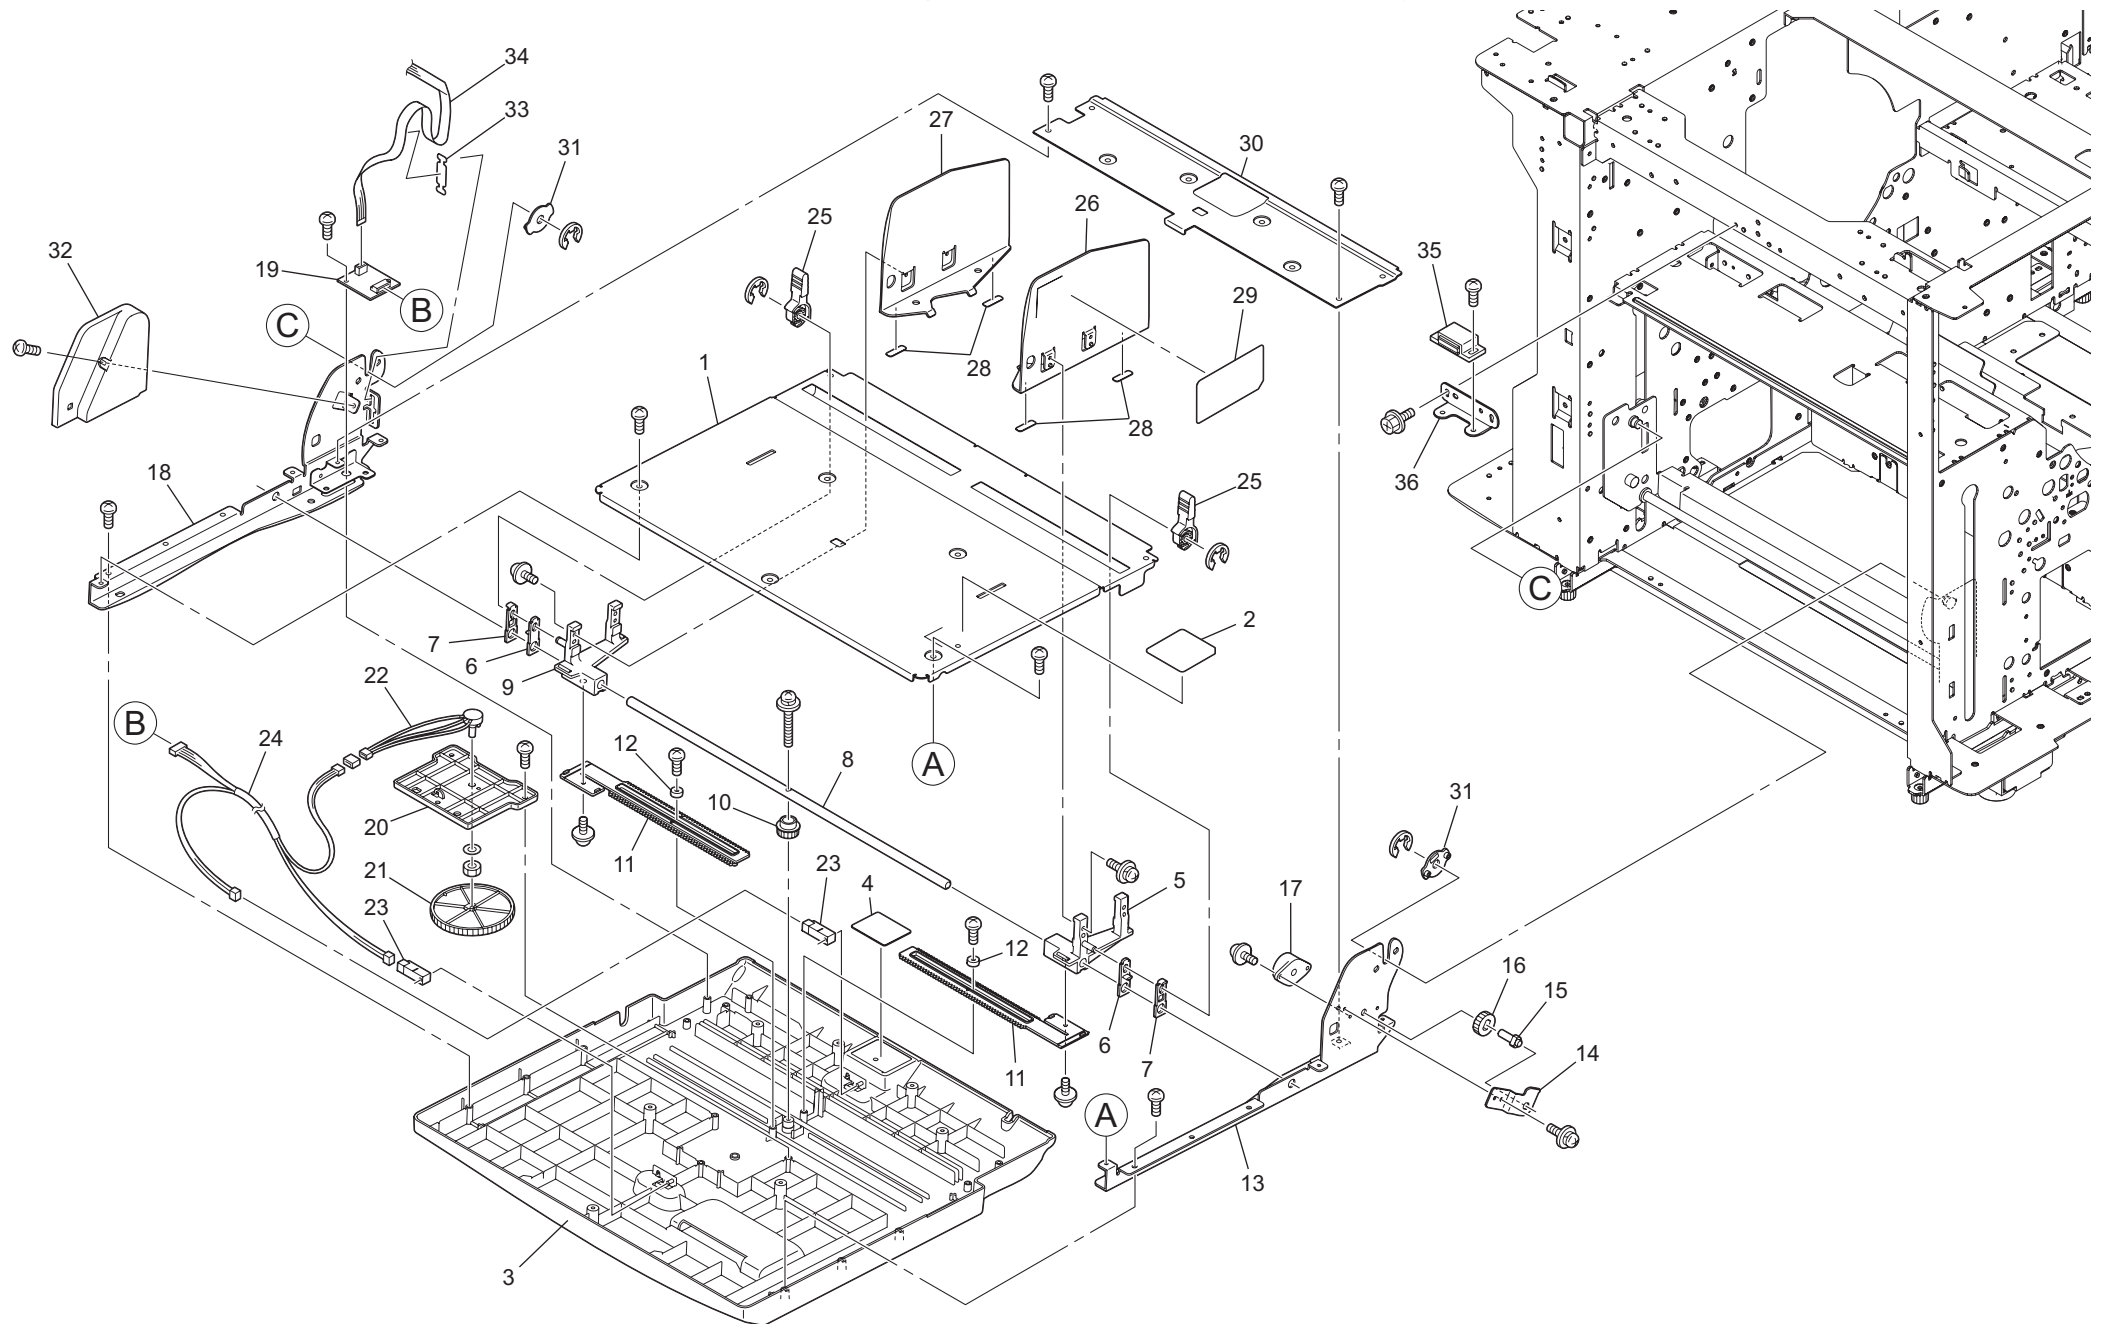


Fig 4. Paper-Feed Tray

No.	Part No.	Part Name	Q'ty	Remark
	024-75089-050	PF Tray Assy (1-30)	1	
1	024-12102-102	*PFT Table L	1	
2	024-12122-006	*Seal;PFT Close	1	
3	024-12101-009	*Feed Tray Cover	1	
4	020-11520-009	*L.O. Sheet	1	
5	030-14126-006	*Slider F; Paper Guide	1	
6	030-14130-003	*Lock B; Paper Guide	2	
7	030-14129-005	*Lock A; Paper Guide	2	
8	024-12105-004	*Shaft;PF Tray	1	
9	030-14124-003	*Slider R; Paper Guide	1	
10	612-12103-003	*Gear;M1X16X3.2	1	
11	024-12110-008	*Slide Rack;P-F-T	2	
12	030-14133-002	*Collar; Slide Rack; P-F-T	2	
13	024-12112-000	*Frame; PF Tray F	1	
14	024-12111-004	*Cover; Hinge	1	
15	024-12109-000	*Shaft; Hinge	1	
16	612-10036-007	*Gear;M1x20x7	1	
17	610-10009-005	*One-Way Hinge; OWNF6-1NRS	1	
18	024-12113-007	*Frame; PF Tray R	1	
19	024-12602-105	*PF-TRAY-PCB	1	
20	024-12127-008	*Bracket; Potentiometer	1	
21	612-10039-006	*Gear;M1X72X6	1	
22	021-51032-209	*Potentiometer; P.-F.-T.	1	
23	444-33006-000	*Sensor; PS-117ED1	2	
24	024-12608-103	*Wire Harness PF Tray Inner	1	
25	024-12120-003	*Lever; Fence Lock	2	
26	024-12106-000	*Fence; Tray F	1	
27	024-12107-007	*Fence; Tray R	1	
28	024-12123-002	*Fence Sheet	4	
29	024-12121-000	*Seal; Fence Set	1	
30	024-12108-100	*PFT Table S	1	
31	024-12119-005	Fixed Plate;PFT	2	
32	024-12116-006	FFC Cover	1	
33	024-12125-005	FFC Holder	1	

[illegible]

Fig.5 Drive Mechanism Area (1)

6-1

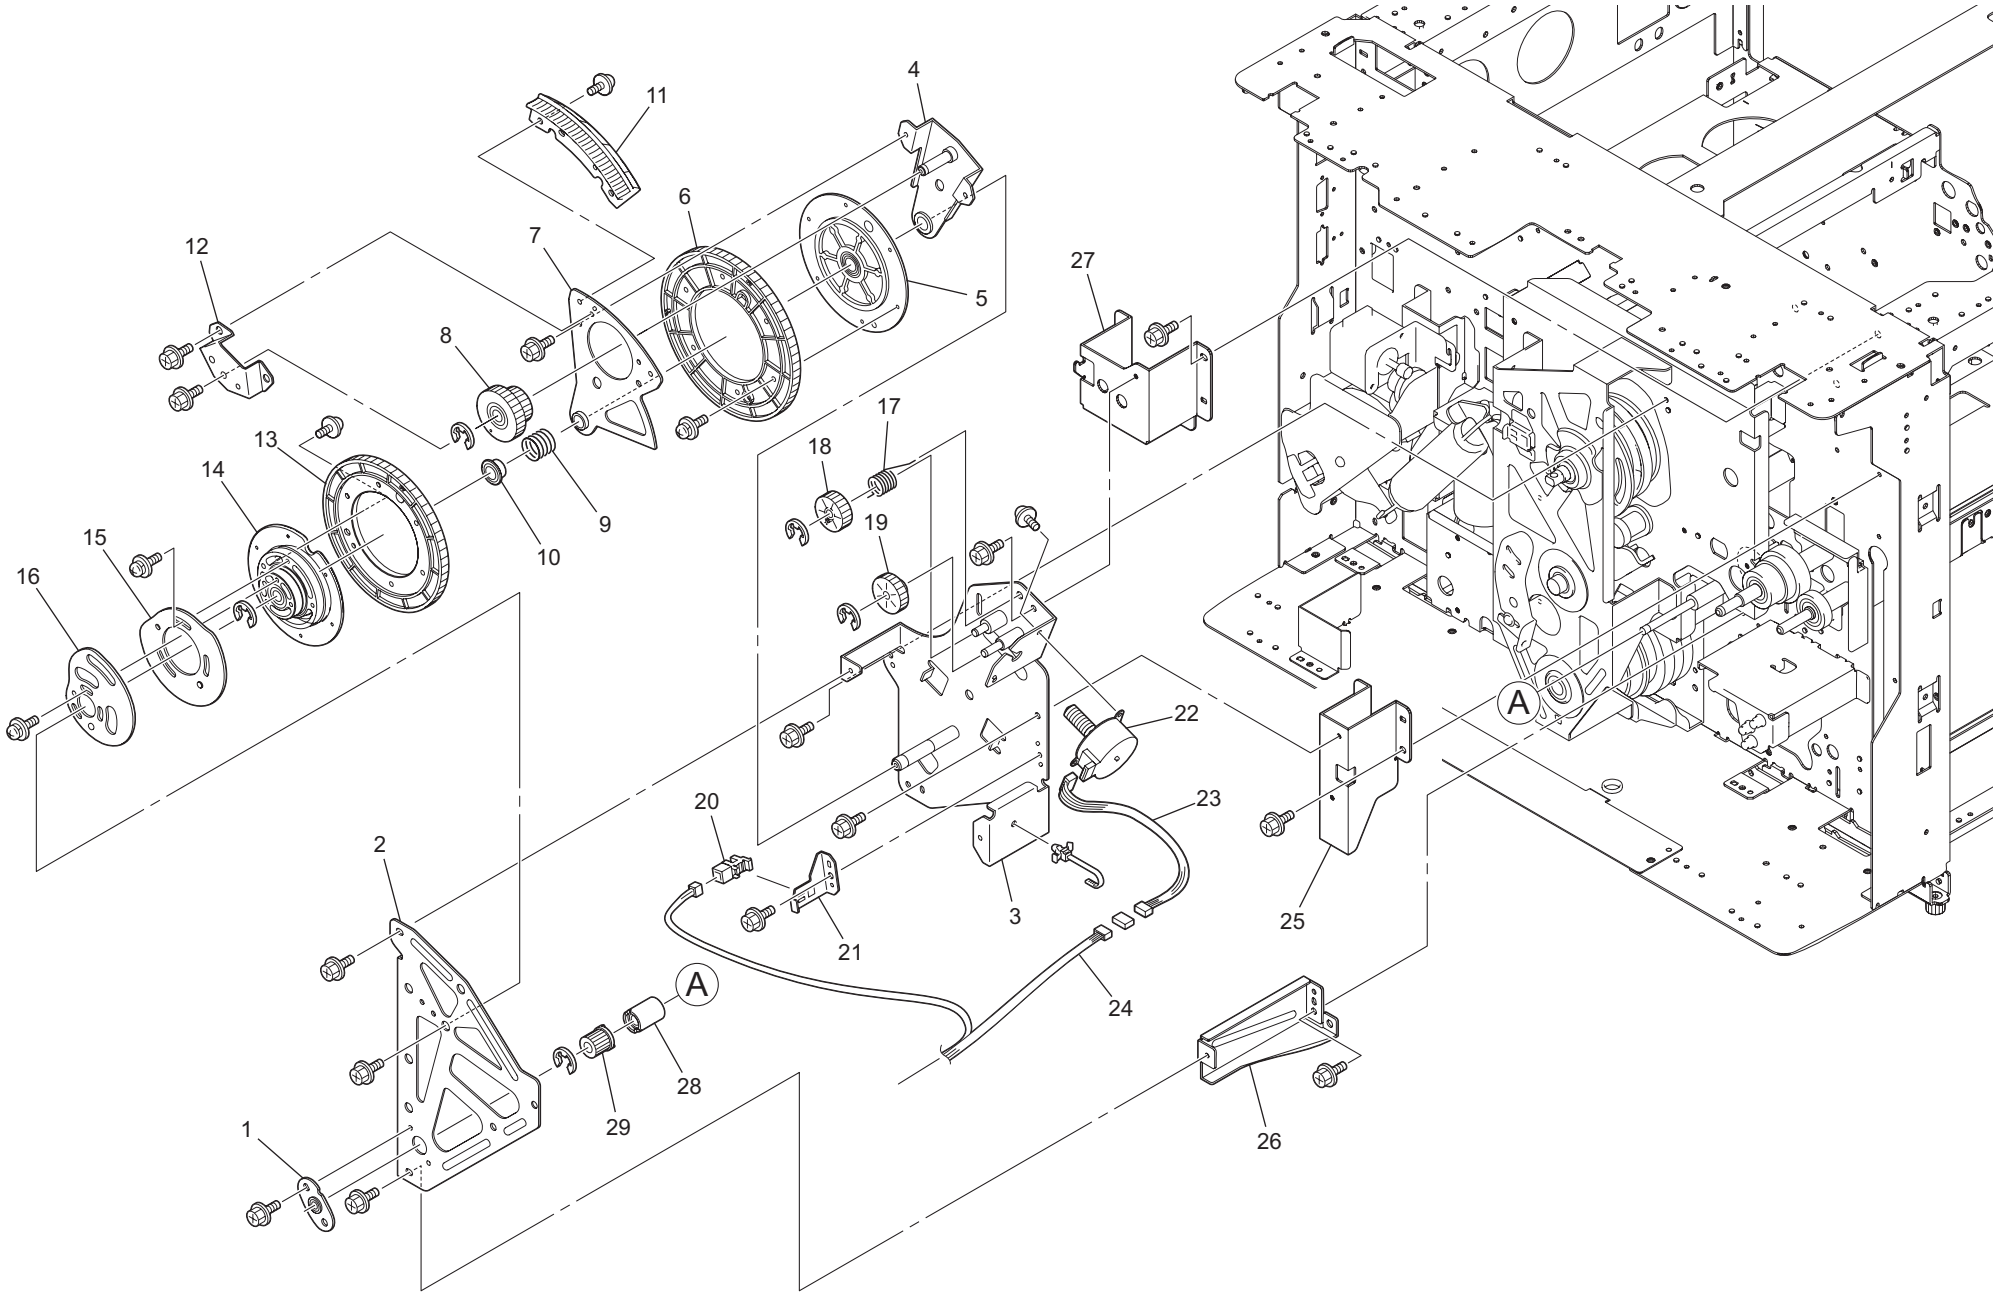


Fig 5. Drive Mechanism Area (1)

No.	Part No.	Part Name	Q'ty	Remark
1	045-15524-008	Bracket; Timing Roller	1	
2	023-15115-100	Cover; Paper Feed Drive	1	
	045-75293-056	Ver. Print Pos. Base Assy (3-23)	1	
3	023-15034-208	*Print Positioning Base	1	
4	023-15104-303	*Arm Front; Ver. Print Pos.	1	
5	045-15208-009	*Gear Boss ; Ver. Print Pos.	1	
6	612-10051-006	*Gear;M1X140X8	1	
7	023-15105-008	*Arm Rear; Ver. Print Pos.	1	
8	612-80027-005	*Gear;M1X42+M1X28	1	
9	045-15066-000	*Spring; Vertical Gear	1	
10	045-15210-003	*Spring Collar	1	
11	023-15068-005	*Sector Gear; Ver. Print Position	1	
12	023-15103-005	*Cover; Ver. Print pos. Planet Gear	1	
13	612-10050-000	*Gear;M1X126X7.5	1	
14	045-15098-009	*Gear Base Block; Vertical Gear	1	
15	045-15056-004	*Timing Cam	1	
16	023-15055-108	*Sector Cam	1	
17	023-15070-000	*Idler Spring; Vertical	1	
18	612-10013-007	*Gear;M0.8X36X10	1	
19	612-81303-006	*Gear; M0.8X35+M0.8X15	1	
20	444-30008-100	*Sensor; LG-248NI1	1	
21	023-15116-000	*Bracket; Vertical Centering Sensor	1	
22	490-33016-106	*Motor; PM42L-048-ZVN5	1	
23	045-53028-006	*Wire Harness; Ver. Pos. Motor	1	
24	045-53001-000	Wire Harness; FB Upper	1	
25	045-15118-000	Bracket; Ver. Print Pos. Base	1	
26	045-15072-000	Cover Stay; Paper Feed Drive	1	
27	045-15117-003	Hook Bracket; Print Pos. Base	1	
28	045-15522-005	Gear Housing; Timing Gear	1	
29	045-15523-001	Timing Gear	1	

[illegible]

Fig.6 Drive Mechanism Area (2)

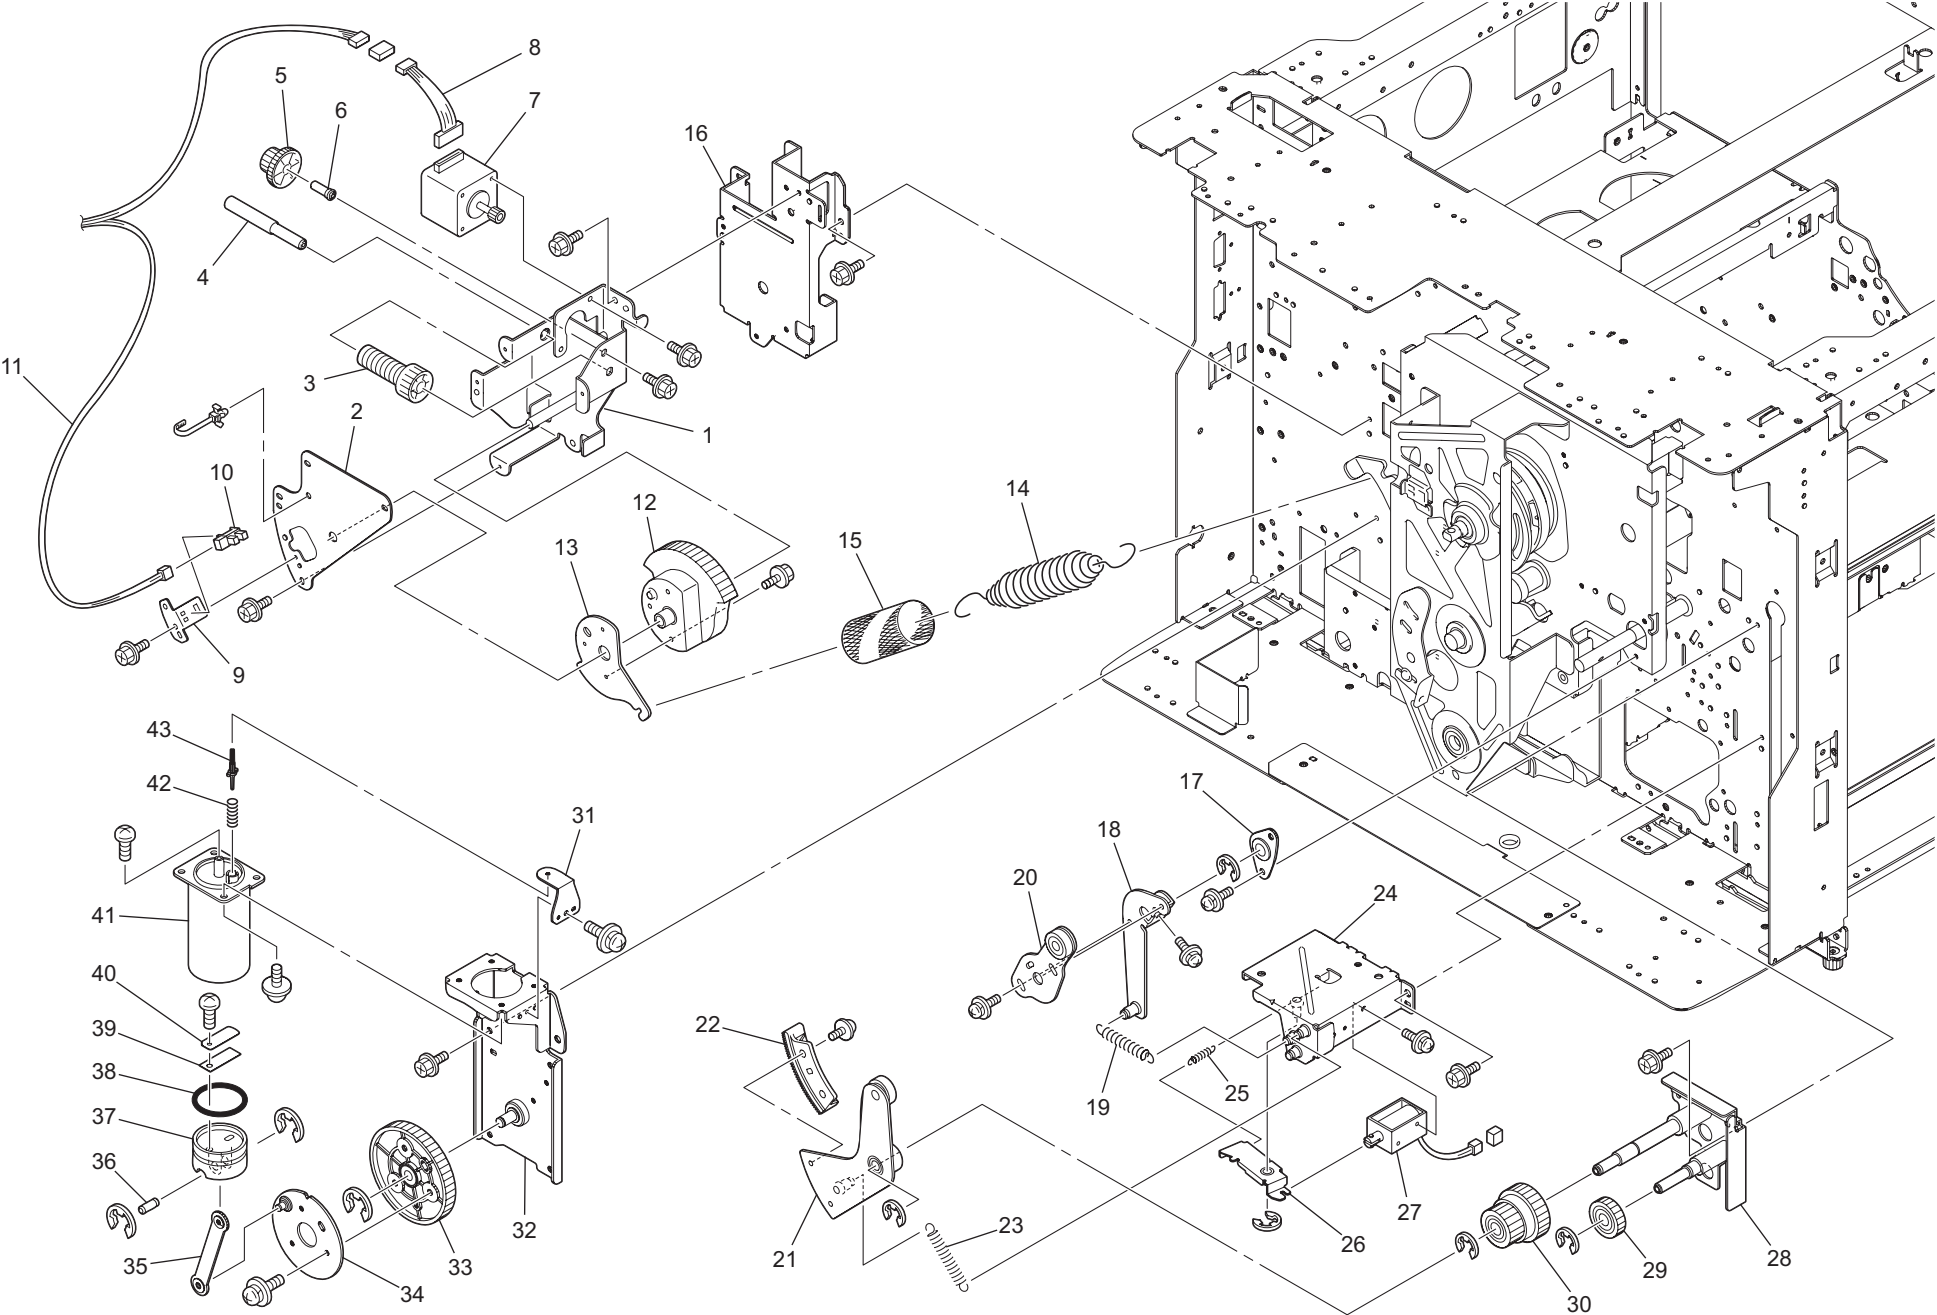


Fig 6. Drive Mechanism Area (2)

No.	Part No.	Part Name	Q'ty	Remark
	023-75076-058	Pressure Control Assy(1-10,12,13)	1	
1	023-15023-109	*Base Bracket; Pressure Control	1	
2	023-15027-007	*Cover Plate; Pressure Control	1	
3	023-15030-008	*Worm Gear; Pressure Control	1	
4	023-15029-107	*Worm Shaft; Pressure Control	1	
5	023-15028-003	*Gear; Pressure Control	1	
6	023-15025-101	*Gear Shaft; Pressure Control	1	
7	490-31010-003	*Motor;KH42JM2B173	1	
8	023-53017-007	*Wire Harness; FB Pulse Motor	1	
9	023-15032-000	*Bracket; HP sensor; Pressure Control	1	
10	444-30008-100	*Sensor;LG-248N11	1	
11	045-53006-002	Wire Harness; Paper Ejection Rear	1	
12	023-15031-004	*Gear Wheel; Pressure Control	1	
13	023-15033-104	*Rotation Plate; Pressure Control	1	
14	023-15018-008	Pressure Spring 21	1	
15	023-15019-004	Noise Reduction; Pressure Spring	1	
16	045-15157-005	Bracket; Pressure Control Assy	1	
17	045-15506-107	Bracket Base; Guide Roller Shaft	1	
18	023-15154-408	Base Bracket; Guide Roller Release	1	
19	023-15063-100	Spring; Guide Roller Release	1	
20	023-15061-000	Guide Roller Lever	1	
21	023-15058-301	Lever Plate; Sector Gear	1	
22	023-15059-006	Sector Gear	1	
23	023-15060-209	Spring; Sector Gear	1	
24	045-15504-201	Hook Bracket; Spring	1	
25	024-15172-004	Spring;ONE-WAY Hook	1	
26	045-15508-002	Release Lever	1	
27	490-50010-006	Solenoid; TDS-08A-1030	1	
28	045-15501-008	Bracket; 1st Transmission	1	
29	612-82407-000	Gear; M1X41+M1X29	1	
30	612-12208-107	Gear; M1X28X8	1	
	045-75292-050	Air Damper Assy (31-43)	1	
31	045-15206-006	*Set Plate; Adj. Valve	1	
32	045-15204-003	*Cylinder Base Bracket; Air Damper	1	

[illegible]

Fig.7 Drive Mechanism Area (3)

I - 13

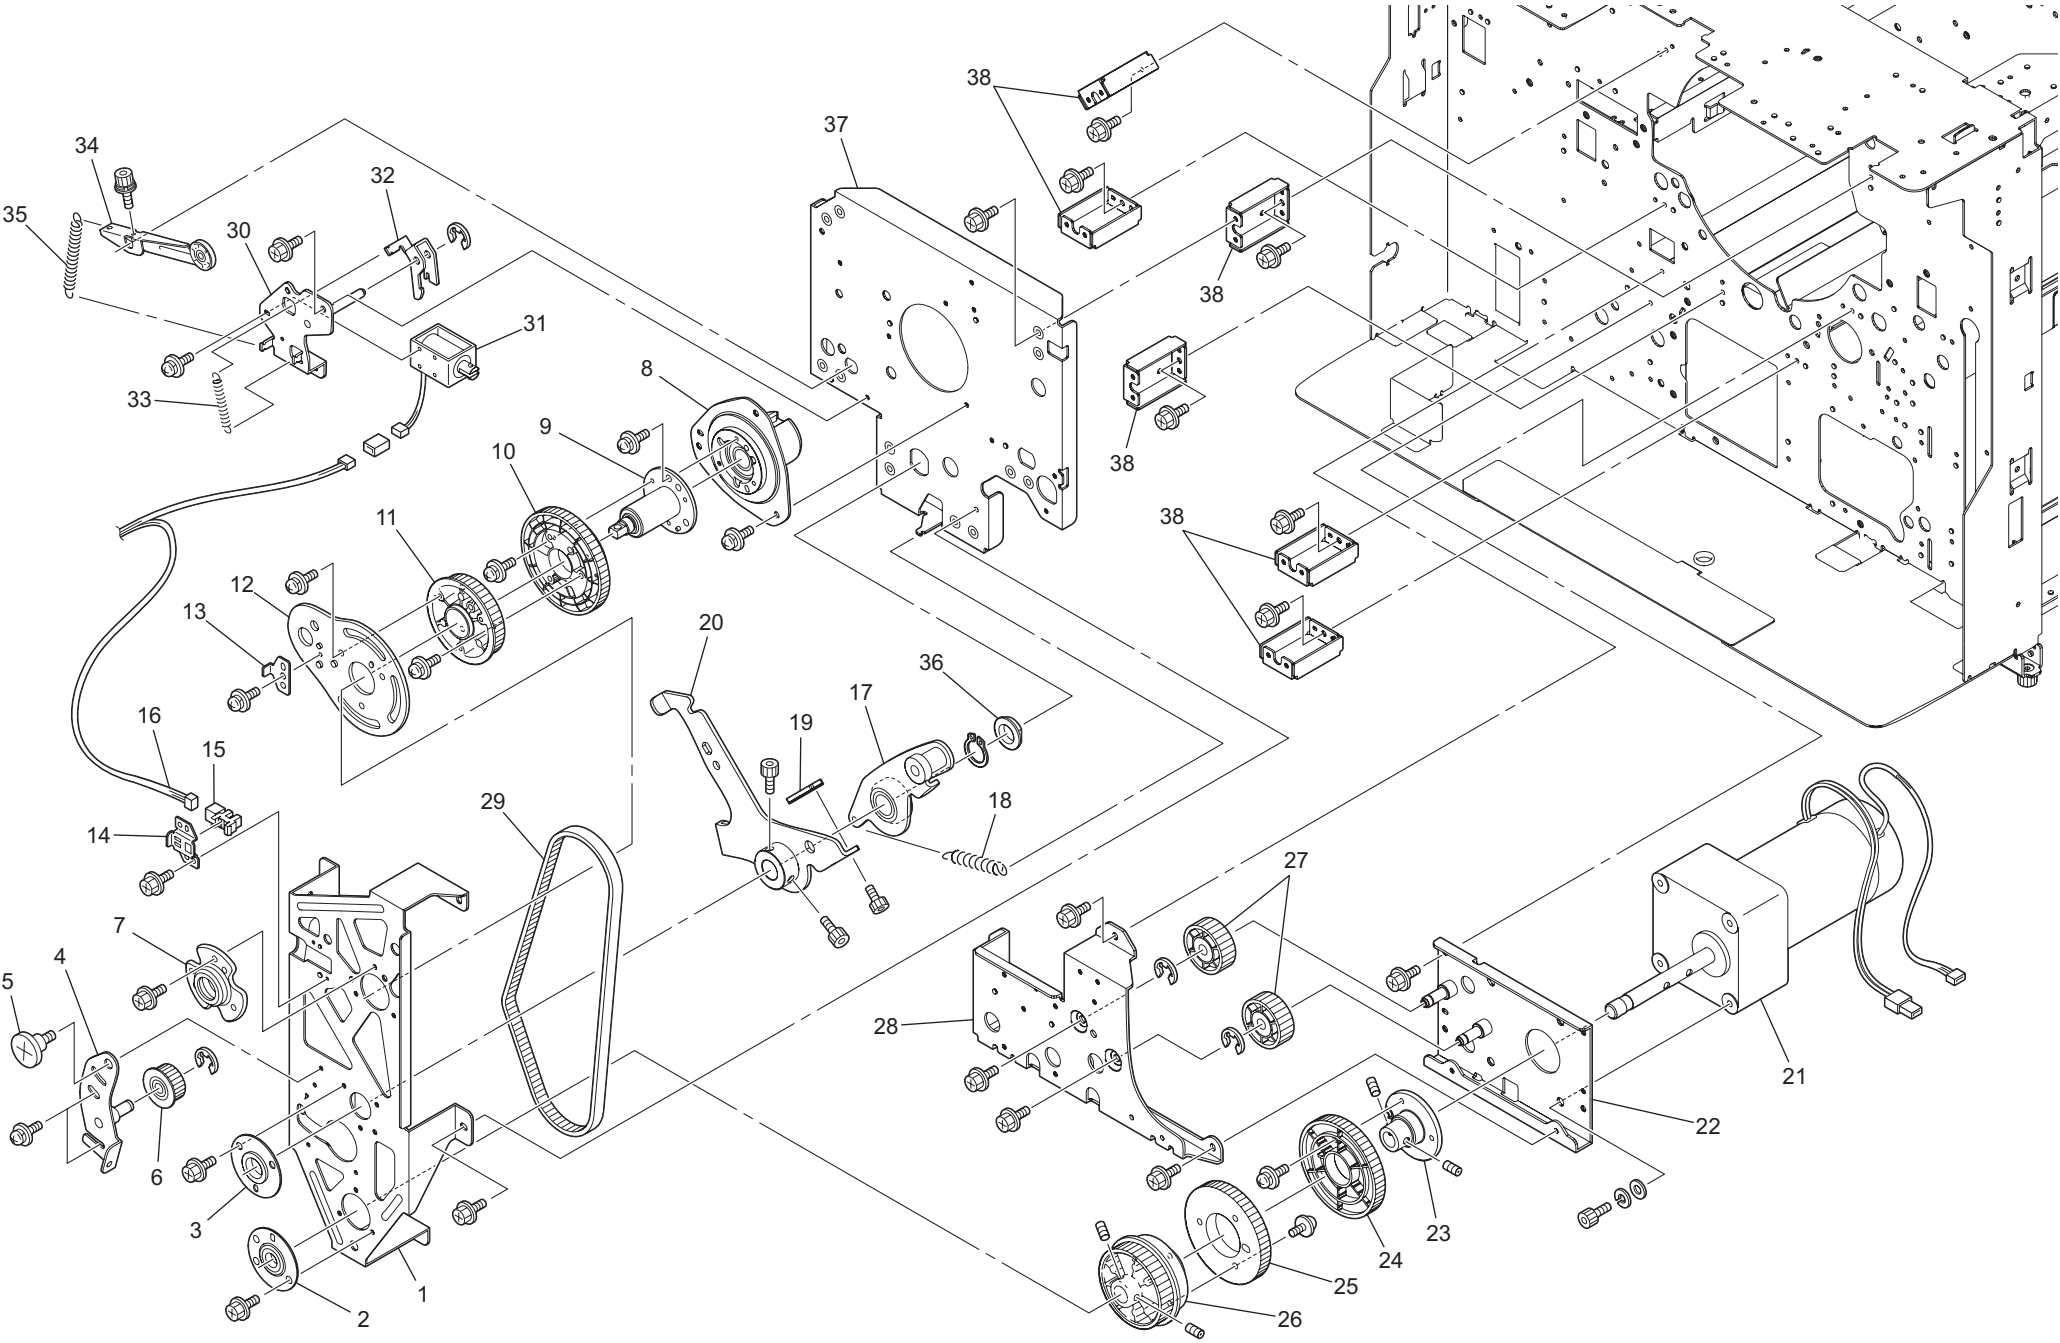


Fig 7. Drive Mechanism Area (3)

No.	Part No.	Part Name	Q'ty	Remark
1	045-15050-006	Main Cover; Drive	1	
2	030-12235-207	Support Plate; Main Motor	1	
3	023-15012-000	Bracket; Pressure Shaft	1	
4	023-15006-204	Tensioner Lever; Main Belt	1	
5	635-17814-107	Stepped Screw; 8X1.7;M4X4.3	1	
6	611-90006-009	Pulley; P18-5GT-12	1	
7	045-15004-004	Shaft Bracket; Main Shaft	1	
	045-75290-057	Main Gear Assy; A3 (8-13)	1	A3
	045-75320-053	Main Gear Assy; Ledger (8-13)	1	Ledger
8	045-15003-008	*Shaft Joint; Drive	1	
9	045-15002-001	*Main Shaft; Drive	1	
10	045-15121-108	*Main Gear; Drive	1	
11	611-90007-102	*Pulley; P42-5Gt	1	
12	045-15011-000	*Pressure Cam; A3	1	A3
12	045-15126-002	*Pressure Cam; Ledger	1	Ledger
13	023-15046-001	*Actuator; B position sensor	1	
14	023-15150-003	Bracket; B Position Sensor	1	
15	444-30008-100	Sensor; LG-248N1	1	
16	045-53006-002	Wire Harness; Paper Ejection Rear	1	
17	045-15140-005	Pressure Lever Assy; Cam	1	
18	045-15145-007	Spring; Cam Follower	1	
19	045-15162-009	Shock Absorber Pad; Pressure Lever	1	
20	045-15136-008	Pressure Lever Assy; Spring	1	
	045-75289-059	Main Motor Assy (21-27)	1	
21	490-22020-004	*Main Motor; CWTD3358G-30F-9K24A	1	
22	045-15048-001	*Bracket; Main Motor	1	
23	045-15201-004	*Gear Base; Main Motor	1	
24	612-10047-009	*Gear;M1X80X10	1	
25	612-10017-002	*Gear;M1X80X10	1	
26	611-90008-109	*Pulley; P42-5GT-13	1	
27	612-16040-006	*Gear;M1X40X18	2	
28	045-15205-000	Damper Cover; Main Motor	1	
29	620-00010-001	Belt; 645-5GT-10	1	
	045-75309-050	Pressure Solenoid Assy	1	

[illegible]

Fig.8 Roller System Area

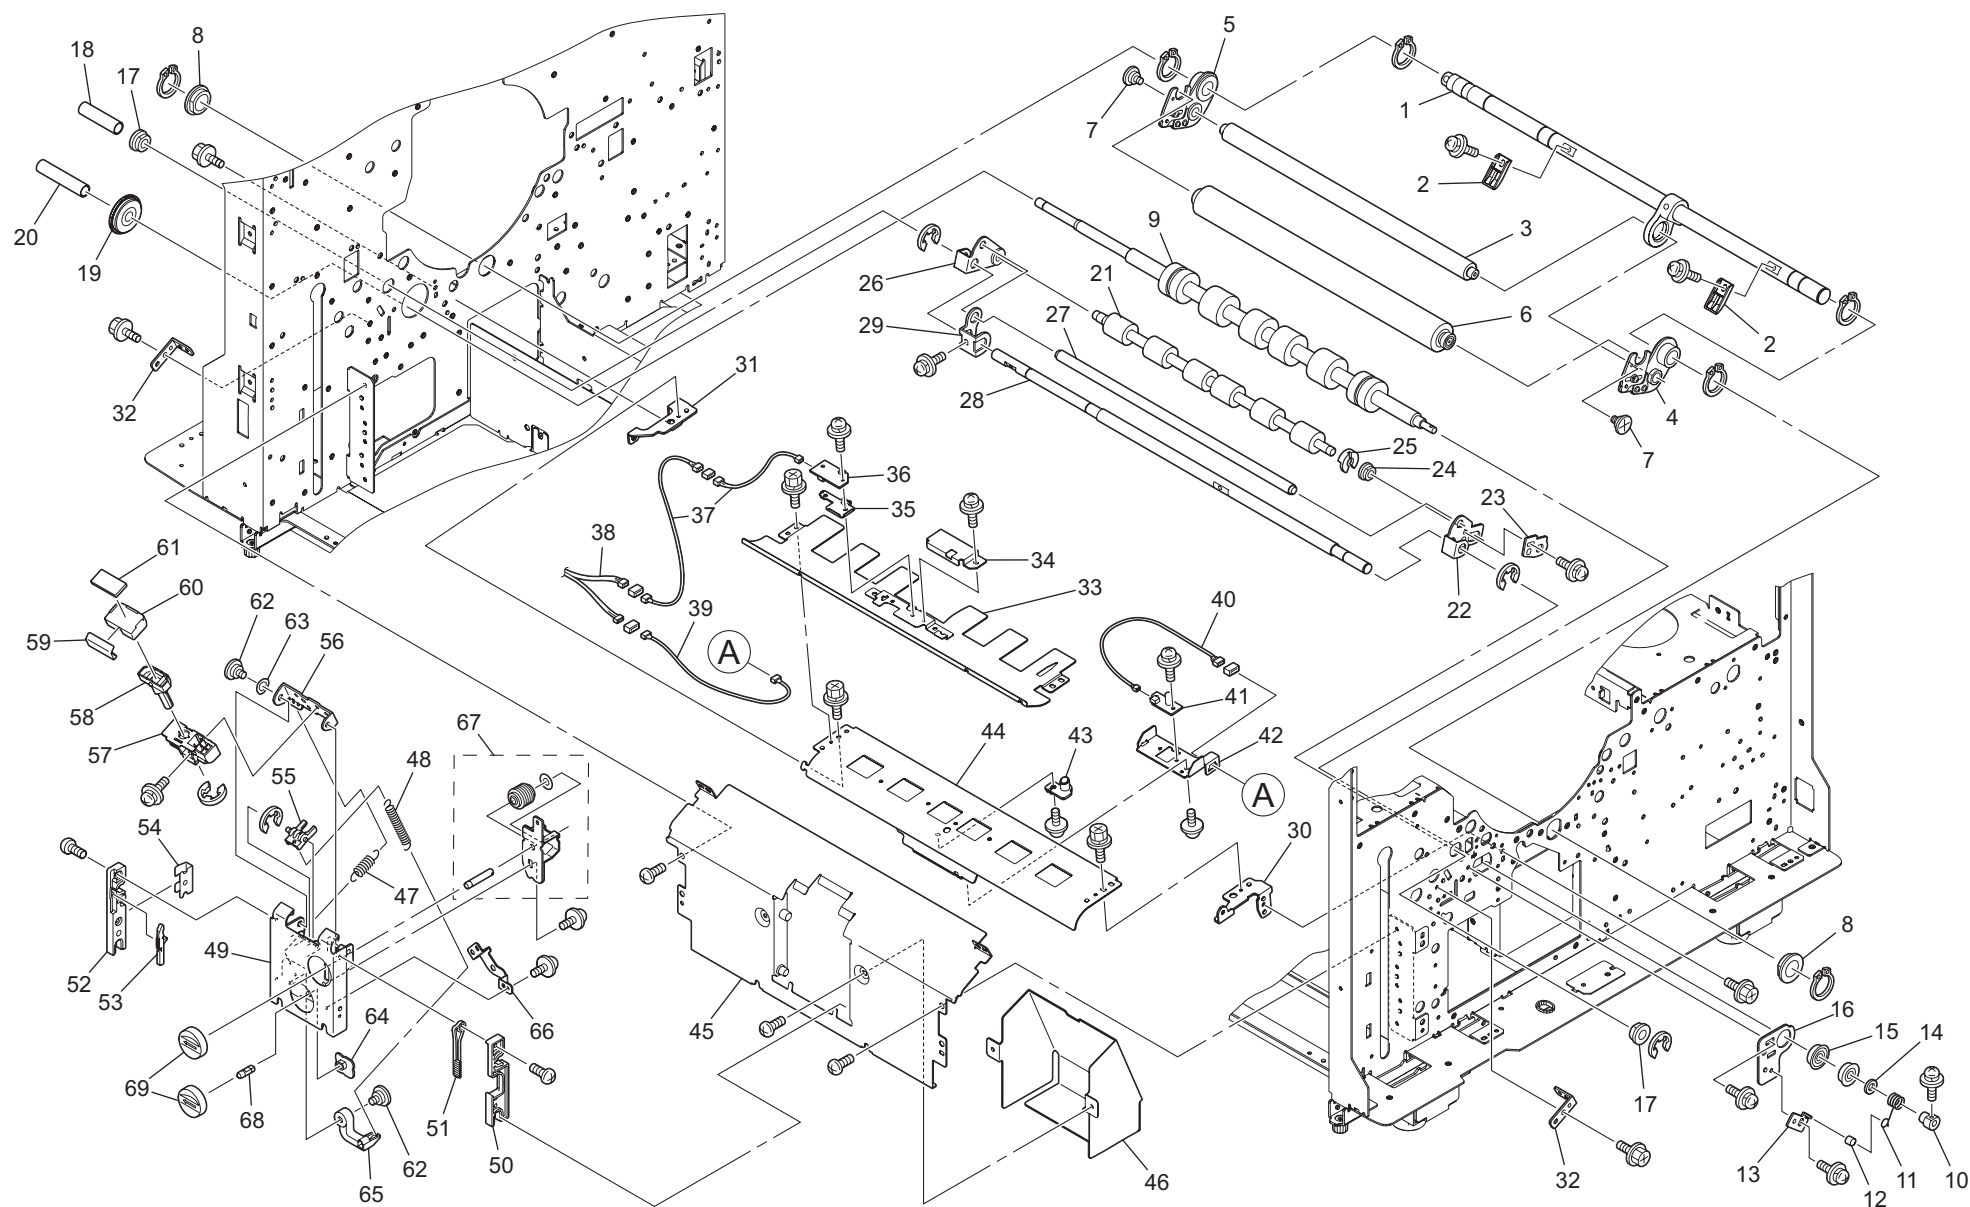


Fig 8. Roller System Area

No.	Part No.	Part Name	Q'ty	Remark
	045-75295-059	Pressure Roller Ass'y; A3	1	
1	045-75324-059	*Pressure Shaft	1	
2	045-19012-001	*Stopper; Pressure Roller	2	
3	024-19004-009	*Shaft; Partial Pressure	1	
4	023-75071-056	*Pressure Roller Support; Front Ass'y	1	
5	023-75072-052	*Pressure Roller Support; Rear Ass'y	1	
6	024-75080-052	*Pressure Roller A3	1	
7	635-17613-209	*Stepped Screw; 6X1.8; M3X4	2	
8	607-10003-001	Metal; F16X22/19X6; 26X2	2	
9	045-12501-007	Timing Roller	1	
10	023-12510-009	Collar; Load Spring	1	
11	030-14476-201	Load Spring	1	
12	030-14480-004	Tube; 3x5	1	
13	030-14458-300	Fix Plate; Load Spring	1	
14	639-00610-000	P Washer; 6X13.5X1		
15	601-10195-004	Bearing; Ddlf-1910ZZR	2	
16	023-12507-105	Adj. Plate; Timing Roller	1	
17	607-16001-000	Metal; F10X15/14X6; 18X2	2	
18	634-10404-100	Collar; F10X48	1	
19	023-12503-100	Bearing; Timing Roller	1	
20	634-10403-104	Collar; F10X60	1	
	045-75288-052	Guide Roller Assy (21-29)	1	
21	024-12531-208	*Guide Roller; MZ	1	
22	023-12515-000	*Support F; Guide Roller	1	
23	023-12545-007	*Adj. Plate; Guide Roller	1	
24	607-40001-003	*Metal; F8X11/10X5.5; 14X2	1	
25	023-12519-006	*Lock Plate; Guide Roller	1	
26	023-12516-104	*Support R; Guide Roller	1	
27	023-12513-105	*Pressure Shaft; Guide Roller	1	
28	045-12518-007	*Shaft; Guide Roller	1	
29	024-12530-007	*Pressure Plate; Guide Roller	1	
30	045-12509-008	Bracket F; Guide Plate M	1	
31	045-12510-006	Bracket R; Guide Plate M	1	
32	045-12517-000	Bracket; Guide Plate Lower	2	

No.	Part No.	Part Name
	045-75286-050	Guide PLate (Upper)
33	045-12512-009	*Guide Plate (Upper)
34	024-12519-100	*Multiple Sensor S
35	024-12510-200	*Cover; Multiple S
36	444-42022-108	*Sensor; KH0686-
37	045-12602-008	*Wire Harness; Mu
38	045-12601-001	Wire Harness; Pap
	045-75287-056	Guide Plate (Middle)
39	045-12603-004	*Wire Harness; Mu
40	045-12611-007	*Wire Harness; Mu
41	444-42021-101	*Sensor; KH0686-
42	045-12508-001	*Bracket; Multi. Fe
43	045-12511-002	*Cover L; Multi. Fe
44	045-12504-103	*Guide Plate (Middle)
45	045-12502-100	Guide Plate (Lower)
46	023-12543-004	Back Cover; Stripper
	024-75072-050	Stripper Unit (47-6
47	023-12429-104	*Spring; Angle Adj
48	023-12403-008	*Spring Tension; S
49	024-12401-100	*Base; Stripper Ur
50	023-12431-001	*Guide Block Fron
51	023-12430-005	*Unfix Lever; Strip
52	030-14521-002	*Lock; Fixing Block
53	023-12428-000	*Lock Lever; Stripper
54	018-31614-001	*Ground Spring; Re
55	023-12412-007	*Arm; Stripper pre
56	023-12402-109	*Bracket; Stripper
57	023-12408-301	*Housing; Stripper
58	023-12404-306	*Shaft; Stripper R
	019-91740-003	*Unit/Stripper Pad
59	019-11832-000	**Cover F; Stripper
60	019-11831-100	**Base F; Stripper
61	019-11833-006	**Stripper Pad; 70
62	635-17624-006	*Stepped Screw; 6

Fig 8. Roller System Area (2)

[illegible][illegible]

Fig.9 Drum Area (1)

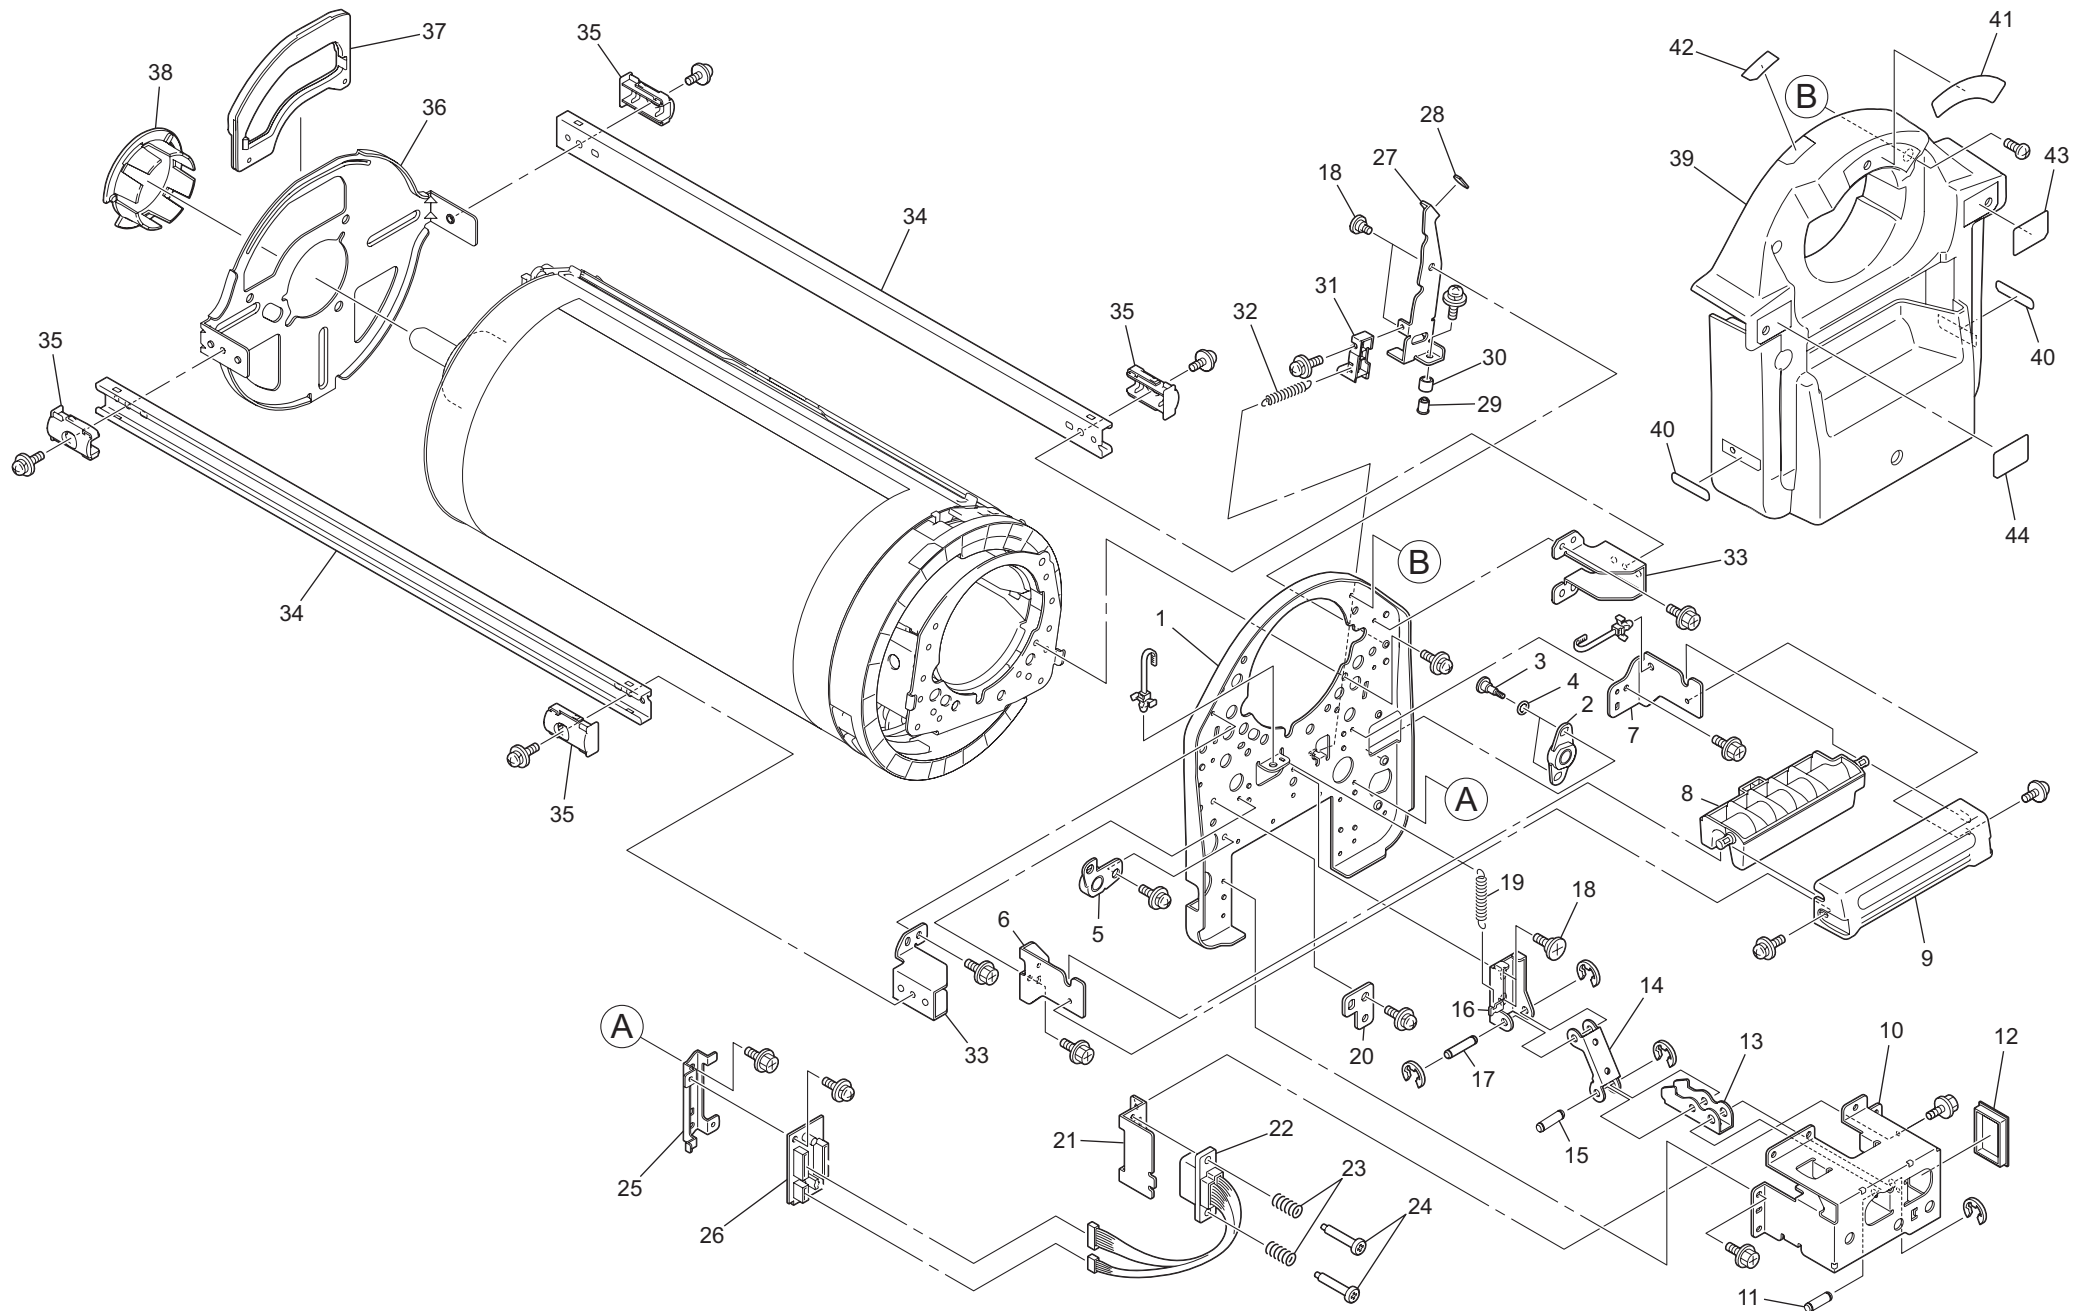


Fig 9. Drum Area (1)

No.	Part No.	Part Name	Q'ty	Remark
1	024-17048-009	Drum Frame Front	1	
2	024-17503-105	Pin Catch R Assy	1	
3	635-10010-100	Stepped Screw;F6X4;M4X6	2	
4	640-60060-000	O Ring;P6-1.9	2	
5	024-17502-109	Pin Catch L Assy	1	
6	024-17402-007	Bracket;Drum Lever L	1	
7	024-17401-000	Bracket;Drum Lever R	1	
8	024-17095-007	Drum Lever	1	
9	024-17135-009	Cover;Drum Release	1	
10	024-17154-003	Bracket;Drum Lock	1	
11	024-17138-105	Shaft;Drum Lock Plate	1	
12	665-04054-005	Square Bushing;Sb-2718	1	
13	024-17136-005	Drum Lock Plate	1	
14	024-17403-003	Drum Lock Arm	1	
15	024-17162-006	Shaft;Drum Lock	1	
16	024-17161-107	Drum Lock Joint Plate	1	
17	024-17404-000	Drum Lock Joint Shaft	1	
18	635-10011-106	Stepped Screw;F5X2;M3X3;SG	4	
19	023-17177-006	Spring; Drum Lock link	1	
20	024-17517-009	Plate;Drum ADJ	1	
21	024-18025-100	Bracket;Drawer	1	
22	024-17171-102	Wire Harness; Drum Drawer	1	
23	030-16920-001	Connector Spring	2	
24	635-17493-106	Stepped Screw;F4X18.5;M3X6	2	
25	024-17175-000	Bracket;Drum PCB	1	
26	024-17178-107	Drum PCB	1	
27	024-17051-000	Lever;B Position Lock	1	
28	023-17244-005	Cover; B Position Lock Lever	1	
29	024-17152-000	Shaft;B Position Release	1	
30	024-17509-006	Collar B Position	1	
31	024-17273-002	Lock Chip B-Position	1	
32	023-17054-001	Lock Spring; B Pos.	1	
33	023-17192-005	Stay; Drum Frame Front	2	
34	024-17046-103	Stay;Drum Frame	2	

[illegible]

Fig.10 Drum Area (2)

1 - 20

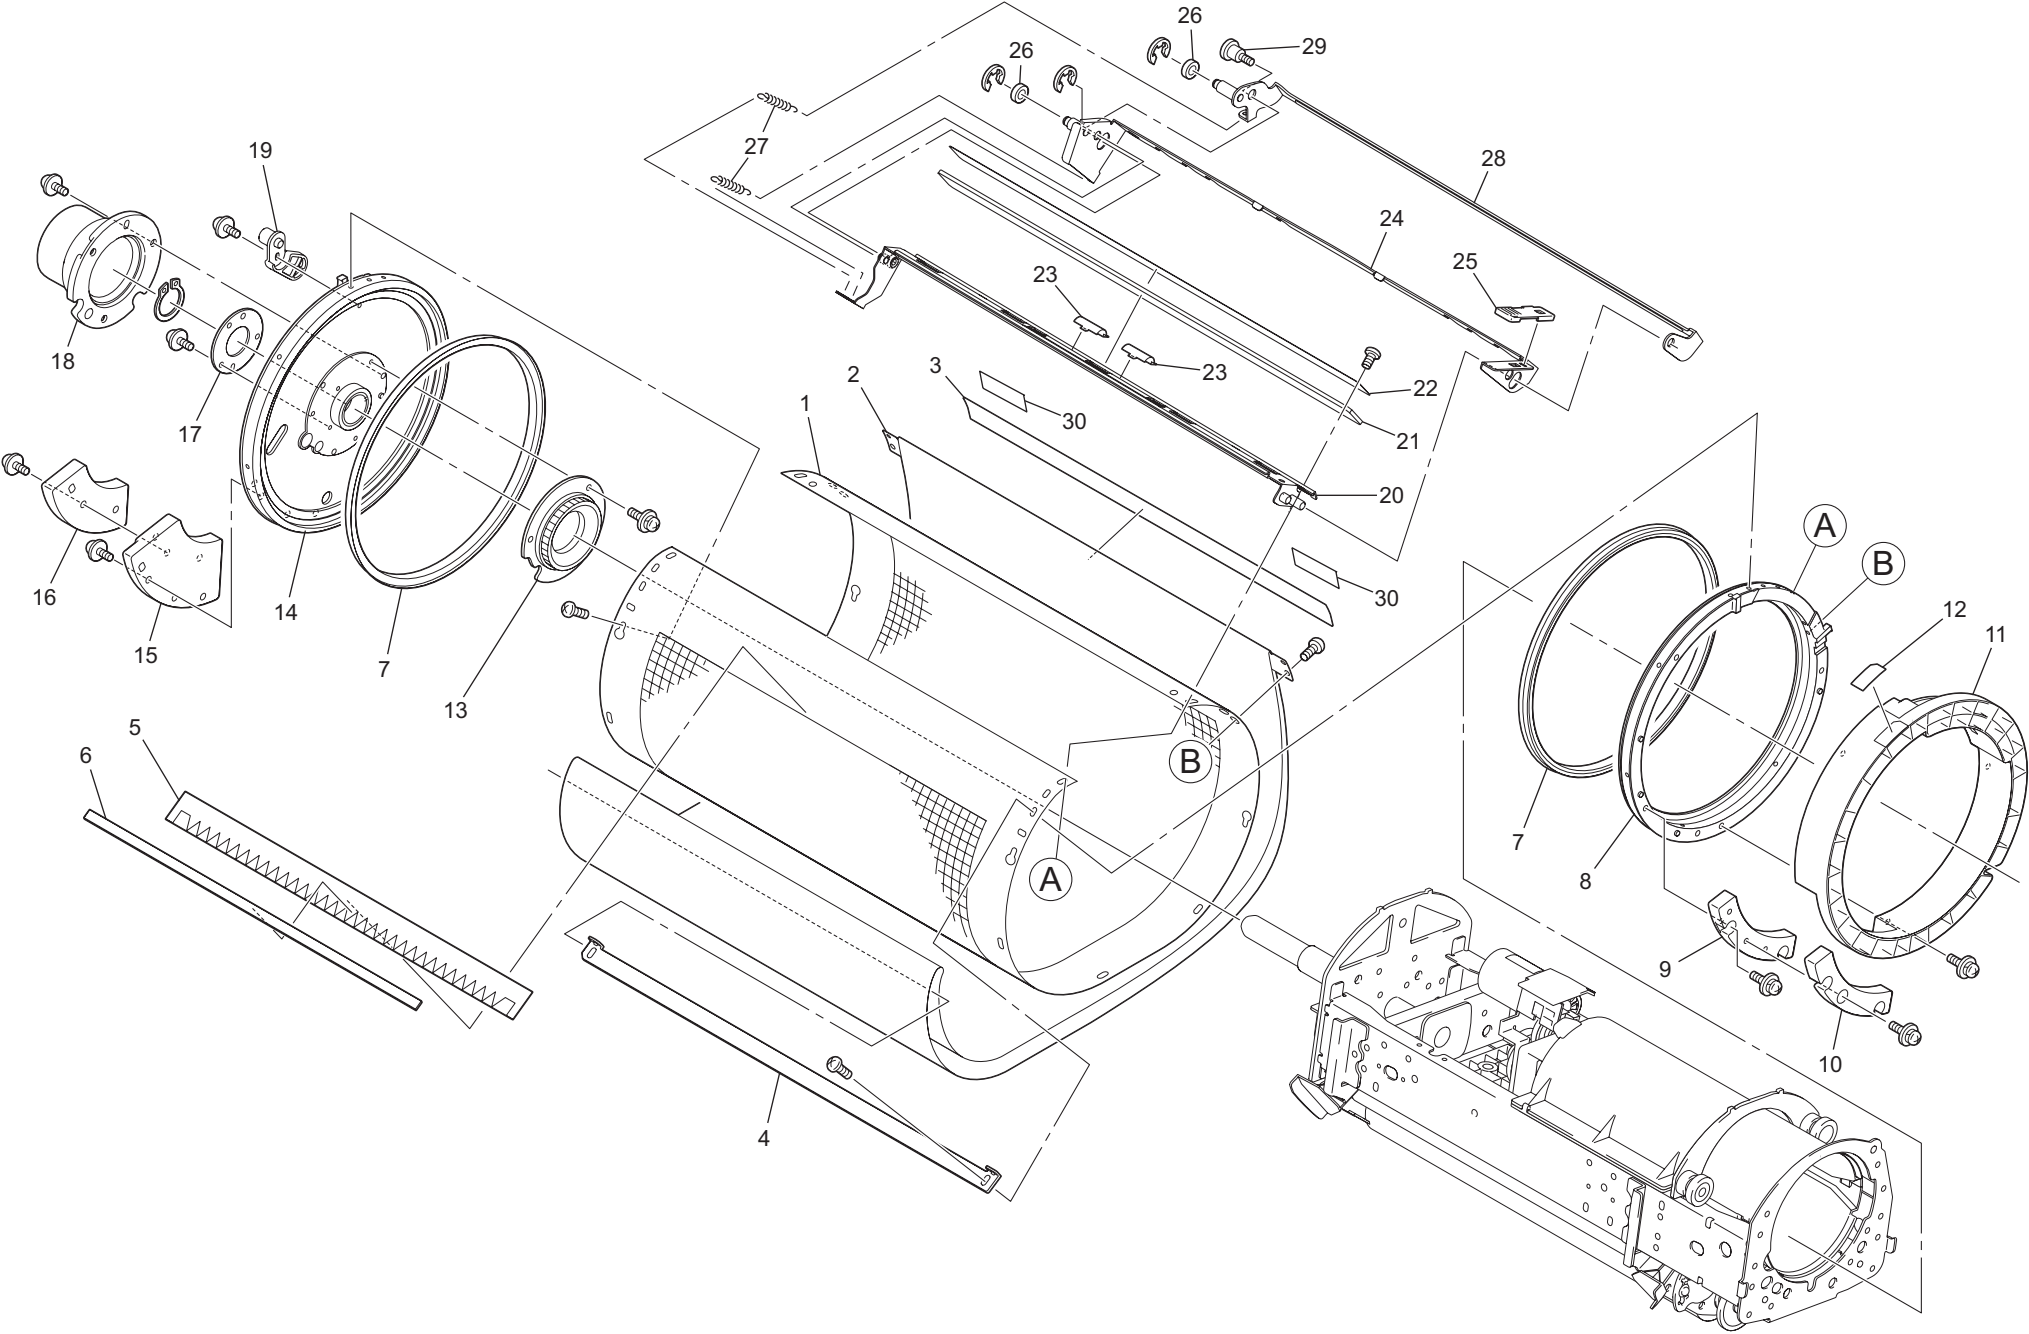


Fig 10. Drum Area (2)

No.	Part No.	Part Name	Q'ty	Remark
1	024-75061-058	Drum Body A3	1	RZ97
1	024-75063-050	Drum Body LD	1	RZ99
2	024-17115-008	Screen Assy (S)	1	
3	023-17004-306	Light Absorber Strip(328X18)	1	
4	024-17003-005	Hanger Plate; Screen	1	
5	024-17011-008	Block Sheet Assy;A3W	1	
6	024-17256-000	Seal Tape; A3W	1	
7	023-17007-003	Drum Seal	2	
8	023-17012-104	Flange Front	1	
9	023-17014-000	Weight Balance F; A	1	
10	023-17262-003	Weight Balance F; B	1	
11	024-17149-000	Flange Handle	1	
12	023-17307-007	B Position Marking Sticker	1	
13	024-17009-003	Flange Gear	1	
14	023-17006-201	Drum Flange Rear	1	
15	023-17011-000	Weight Balance R; A	1	
16	023-17261-007	Weight Balance R; B	1	
17	023-17263-000	Metal Stopper; Drum	1	
18	024-17008-104	Drum Joint	1	
19	024-17010-109	Boss;A-Positioning ADJ	1	
	024-75100-053	Clamp Plate Base Assy (20-29)	1	
20	024-17067-100	*Clamp Plate Base	1	
21	024-17181-000	*Clamp Magnet	1	
22	024-17180-004	*Friction Sheet	1	
23	023-17251-001	*Spring; Clamp Plate Base	2	
24	024-17068-107	*Clamp Plate	1	
25	023-17191-106	*Release Lever; Clamp Plate	1	
26	023-17069-009	*Collar D12; Clamp	2	
27	023-17275-008	*Spring; Clamp Plate Close	2	
28	024-17071-108	*Projection Plate	1	
29	024-17428-006	*Shaft;Projection Support	1	
30	023-17344-204	Light Absorber Strip(65X18)	2	

[illegible]

Fig.11 Drum Area (3)

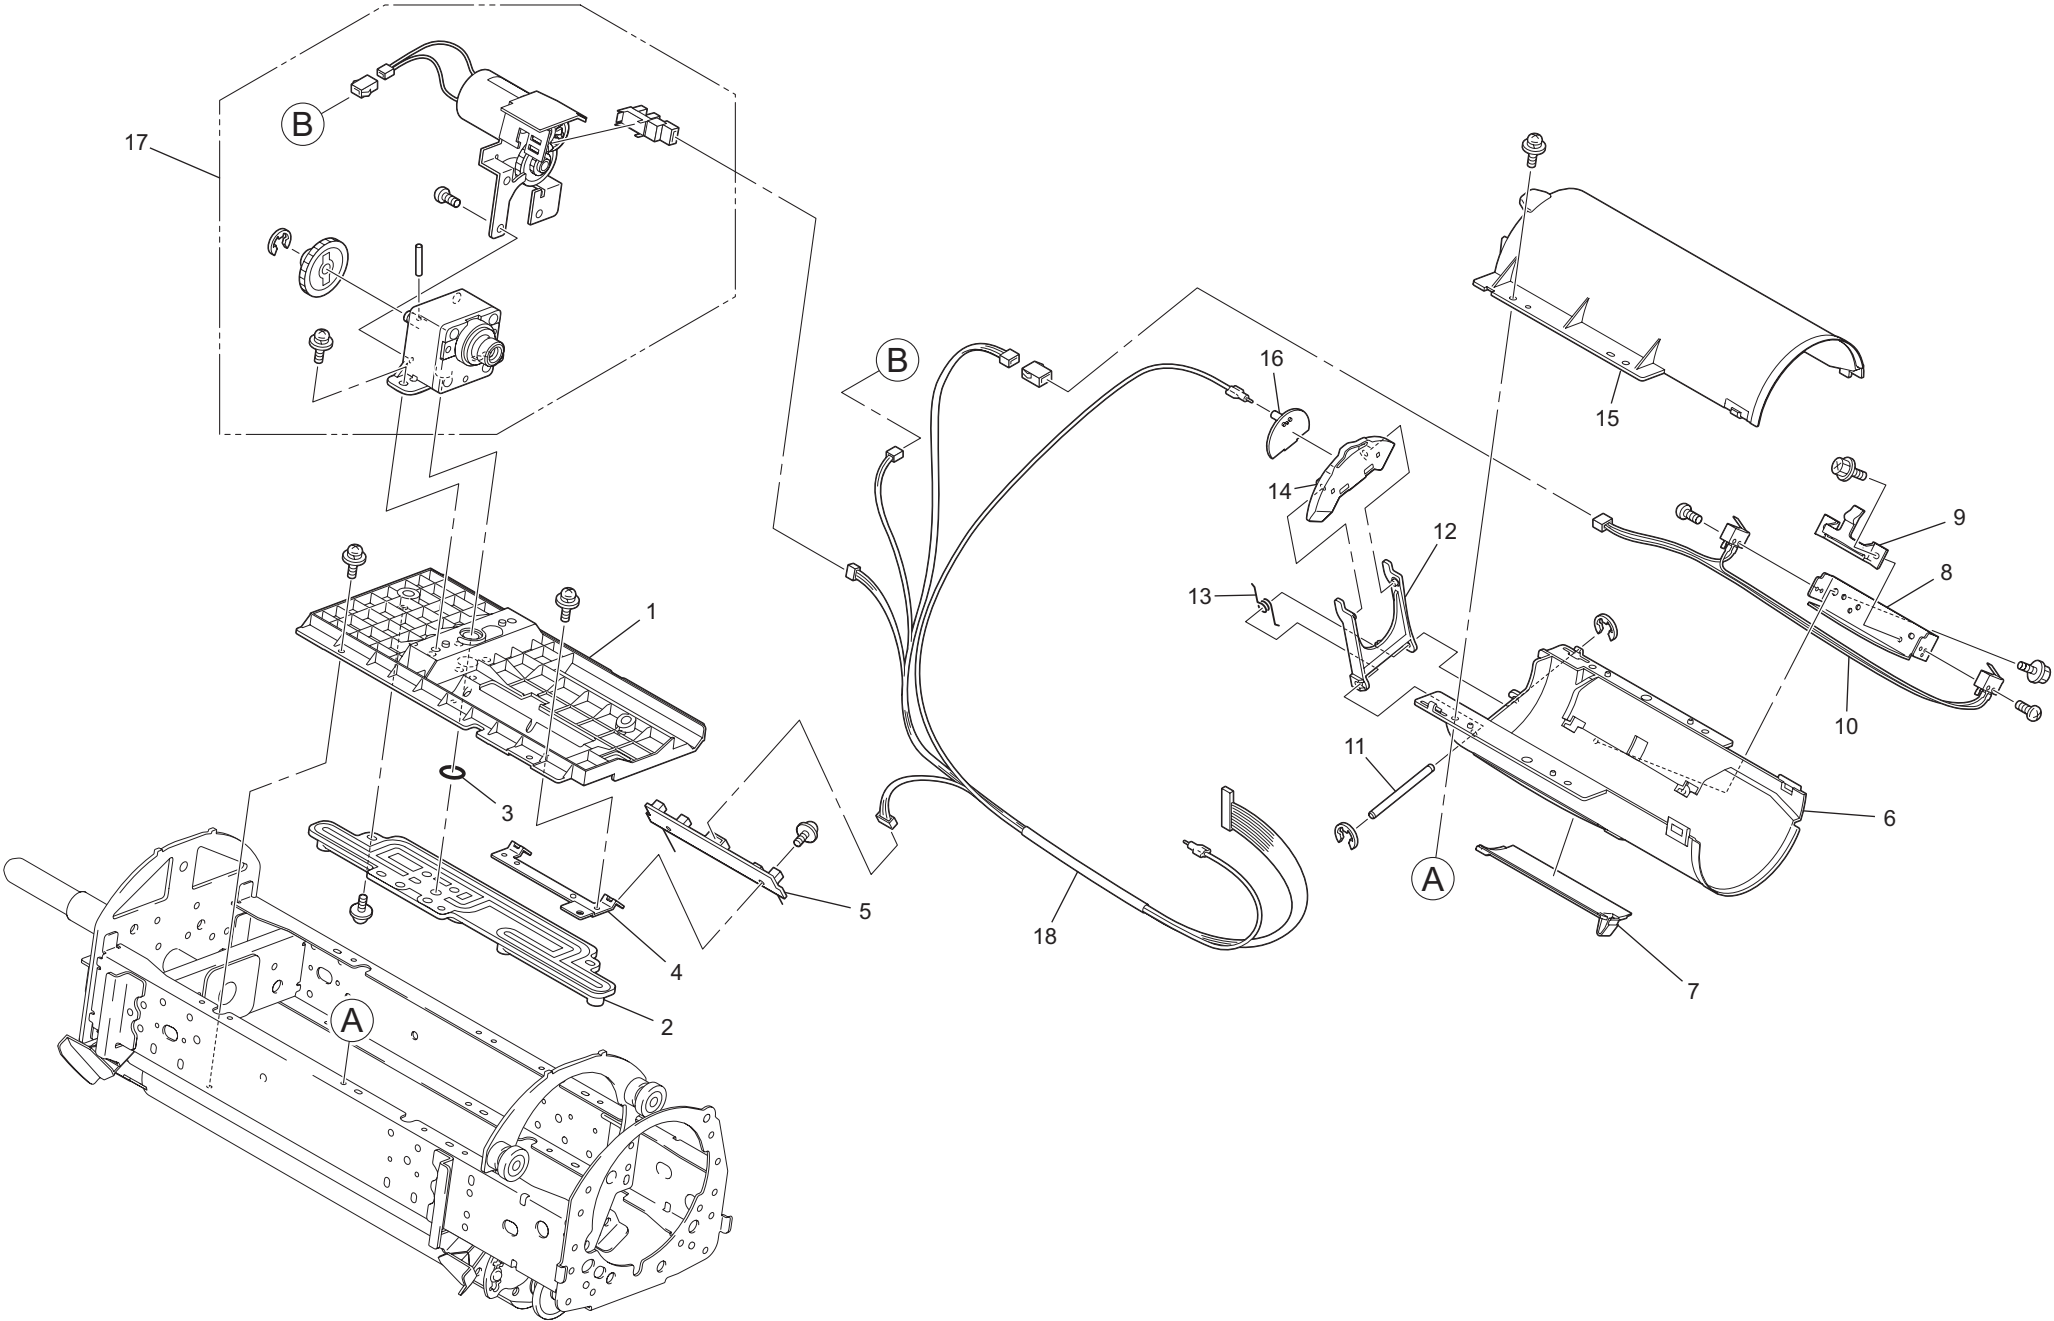


Fig 11. Drum Area (3)

[illegible][illegible]

Fig.12 Drum Area (4)


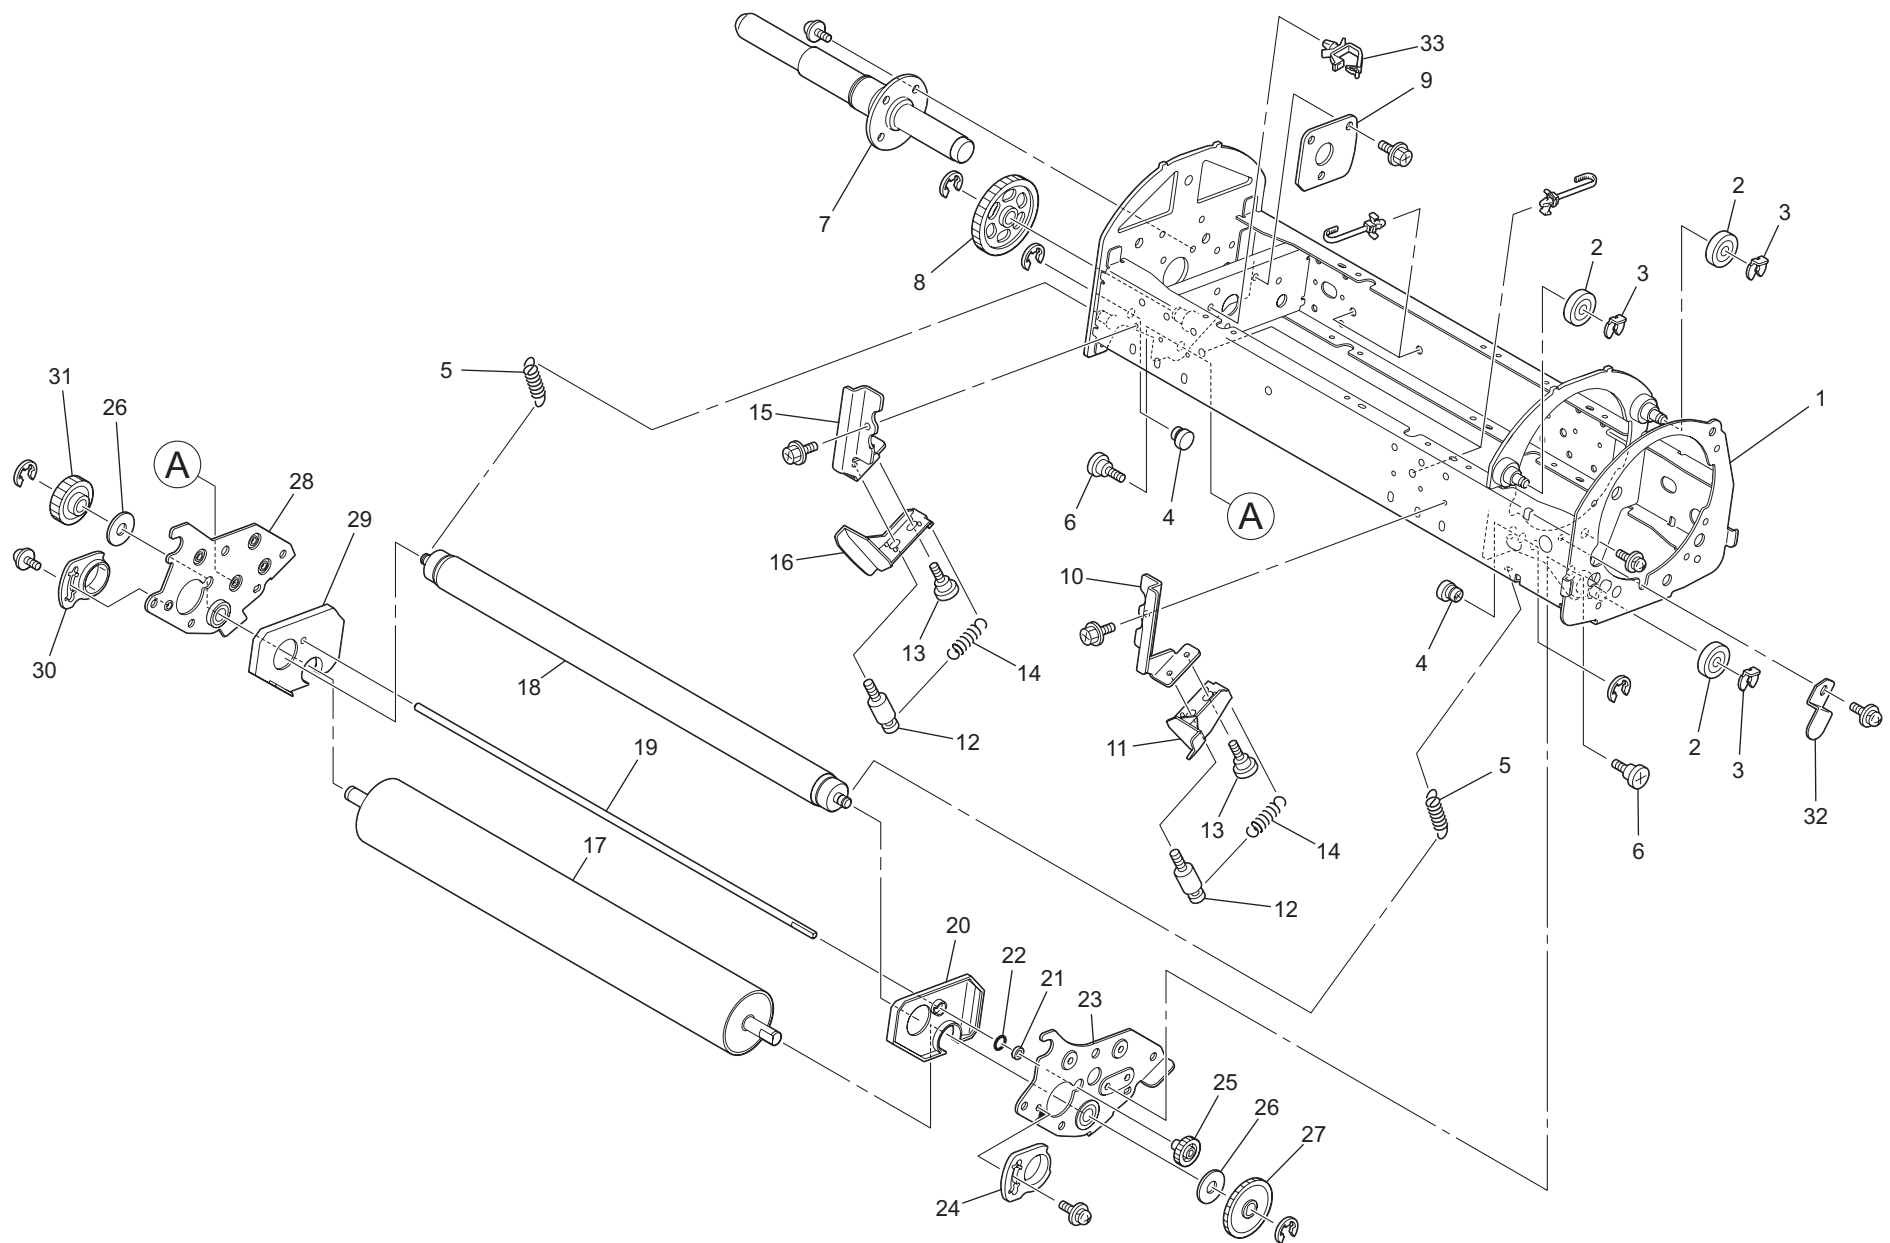


Fig 12. Drum Area (4)

No.	Part No.	Part Name	Q'ty	Remark
1		Main Frame; Drum	1	
2	023-17116-007	Flange Support Roller; Drum	3	
3	023-17197-007	Lock Ring 4	3	
4	024-17027-001	S-Gap Cam	2	
5	023-17333-008	Spring ; Doctor Roller	2	
6	635-17634-001	Stepped Screw;F6X3;M4X4	2	
7	024-17111-100	Center Shaft	1	
8	612-10026-001	Gear;M1X45X6	1	
9	024-17511-000	Plate;Center Shaft	1	
10	023-17229-006	Base ; Ink Blocking Plate (Front)	1	
11	023-17227-003	Ink Blocking Plate; Front	1	
12	015-36317-305	Shaft Screw; Ink Blocking Plate	2	
13	635-17433-103	Stepped Screw;F4X3;M3X6	2	
14	015-36318-000	Spring; Ink Blocking Plate	2	
15	023-17228-000	Base ; Ink Blocking Plate (Rear)	1	
16	023-17226-007	Ink Blocking Plate; Rear	1	
	024-75073-056	Squeegee Unit Assy; A3 (17-31)	1	
17	024-17030-100	*Squeegee Roller; A3	1	
18	024-17329-008	*Doctor Roller; A3	1	
19	024-17035-004	*Ink Drive Shaft; A3	1	
20	023-17041-104	*Block F; Squeegee	1	
21	607-03001-001	*Metal;S4X7X2	1	
22	640-60040-000	*O Ring;P4-1.9	1	
23	024-17126-107	*Side Frame; Squeegee F Assy	1	
24	023-17336-201	*Adj. Plate L; Squeegee Gap	1	
25	612-10027-008	*Gear;M0.8X19X4	1	
26	639-00002-000	*Sheet ;Squeegee Roller	2	
27	612-10028-101	*Gear;M0.8X43X3	1	
28	024-17125-100	*Side Frame; Squeegee R Assy	1	
29	023-17040-108	*Block R; Squeegee	1	
30	023-17334-209	*Adj. Plate R; Squeegee Gap	1	
31	612-10024-106	*Gear; M1X25X8.5 OWC	1	
32	023-17294-002	Fixing Plate; Drive Shaft A3	1	
33	665-02044-002	Wire Saddle;LWS-0711	1	

[illegible]

Fig.13 Drum - Rail Area

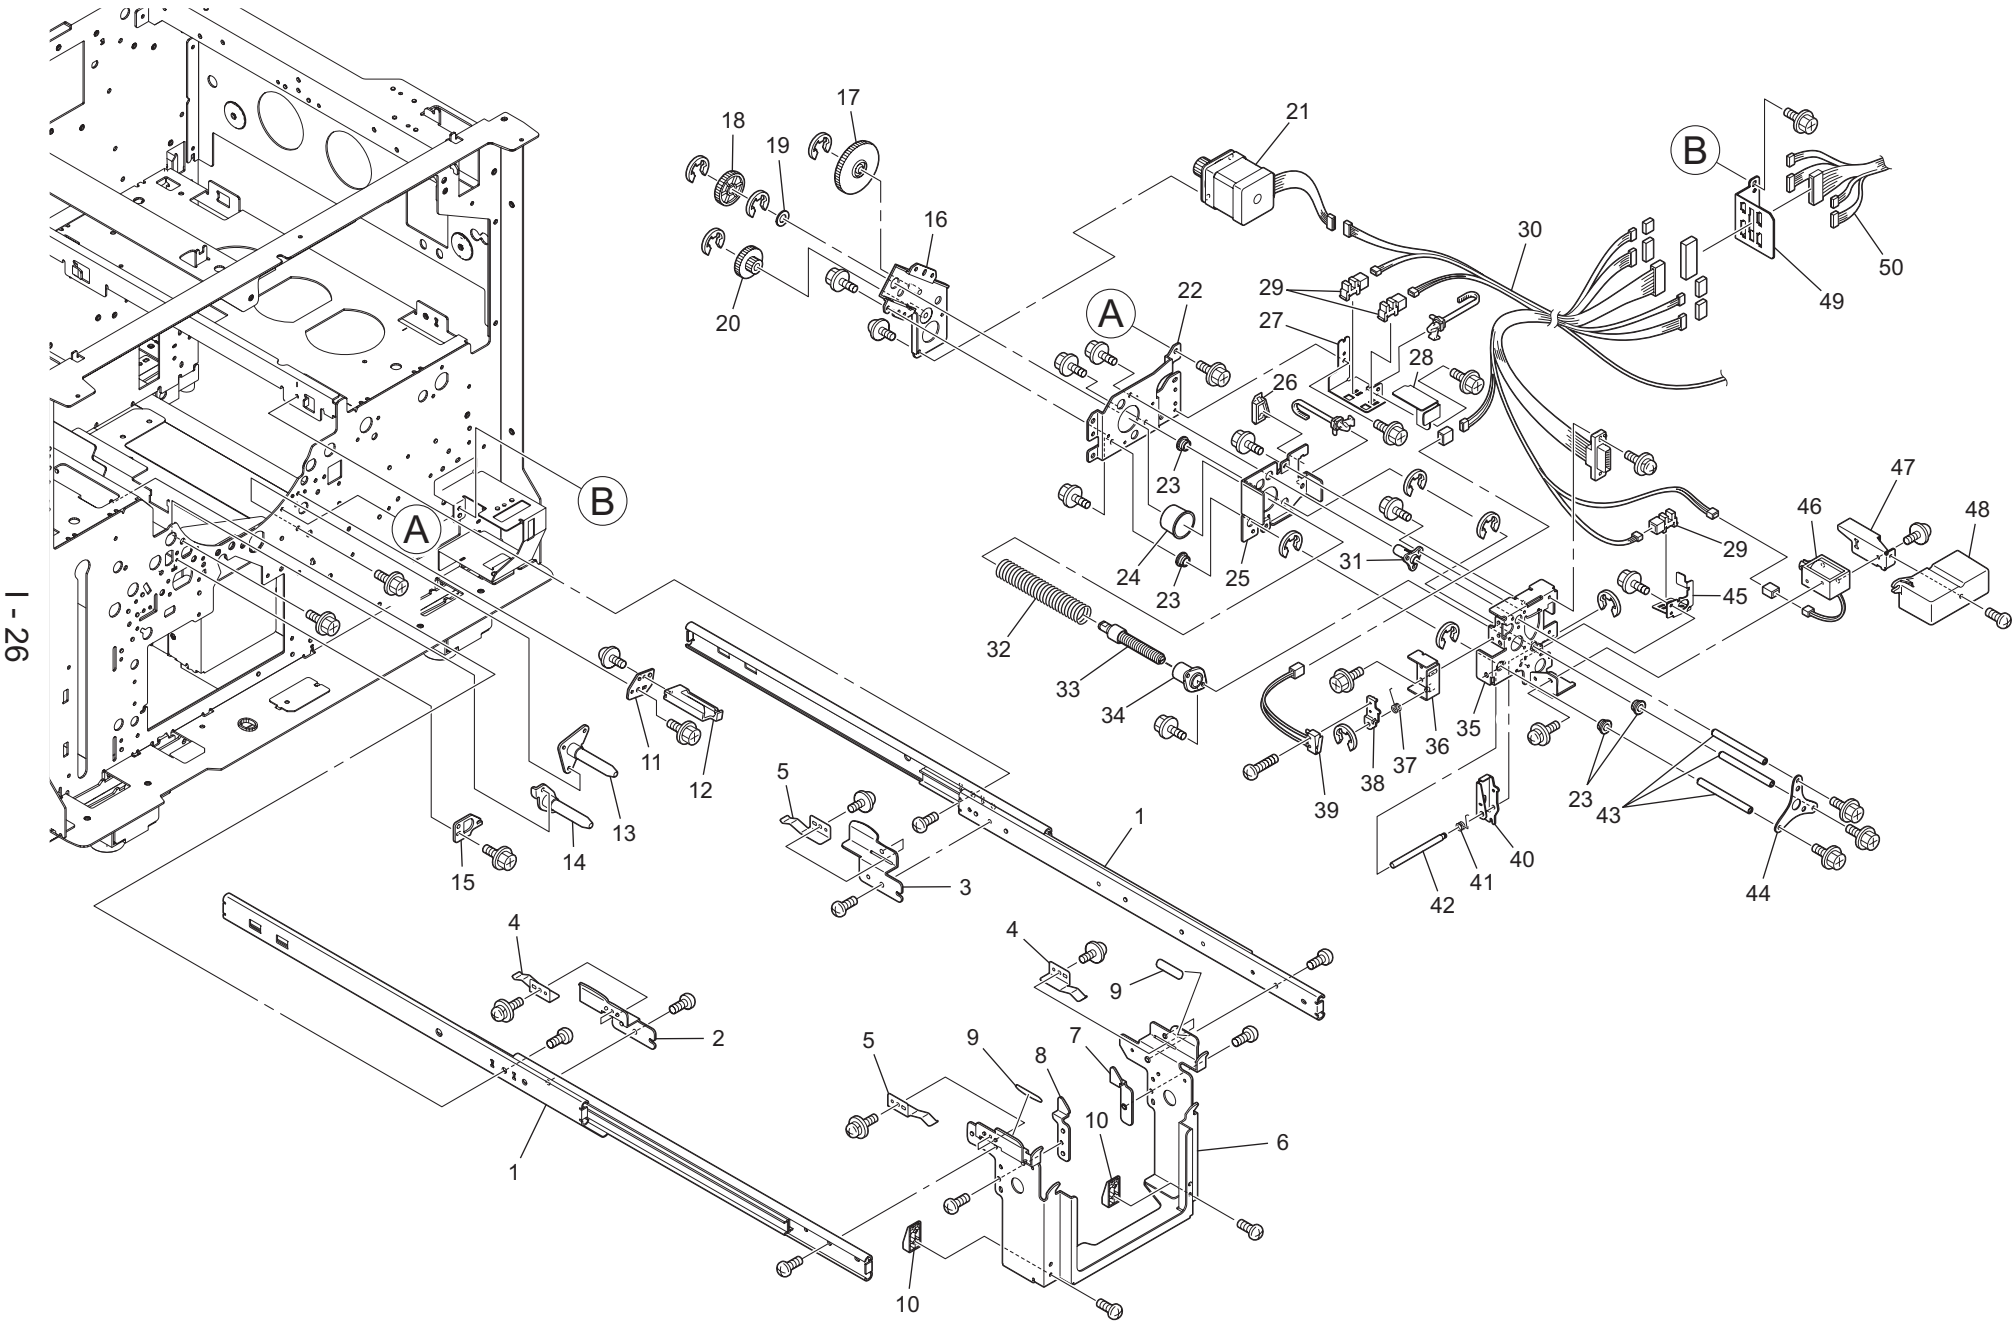

[illegible]

Fig.14 Clamp Area

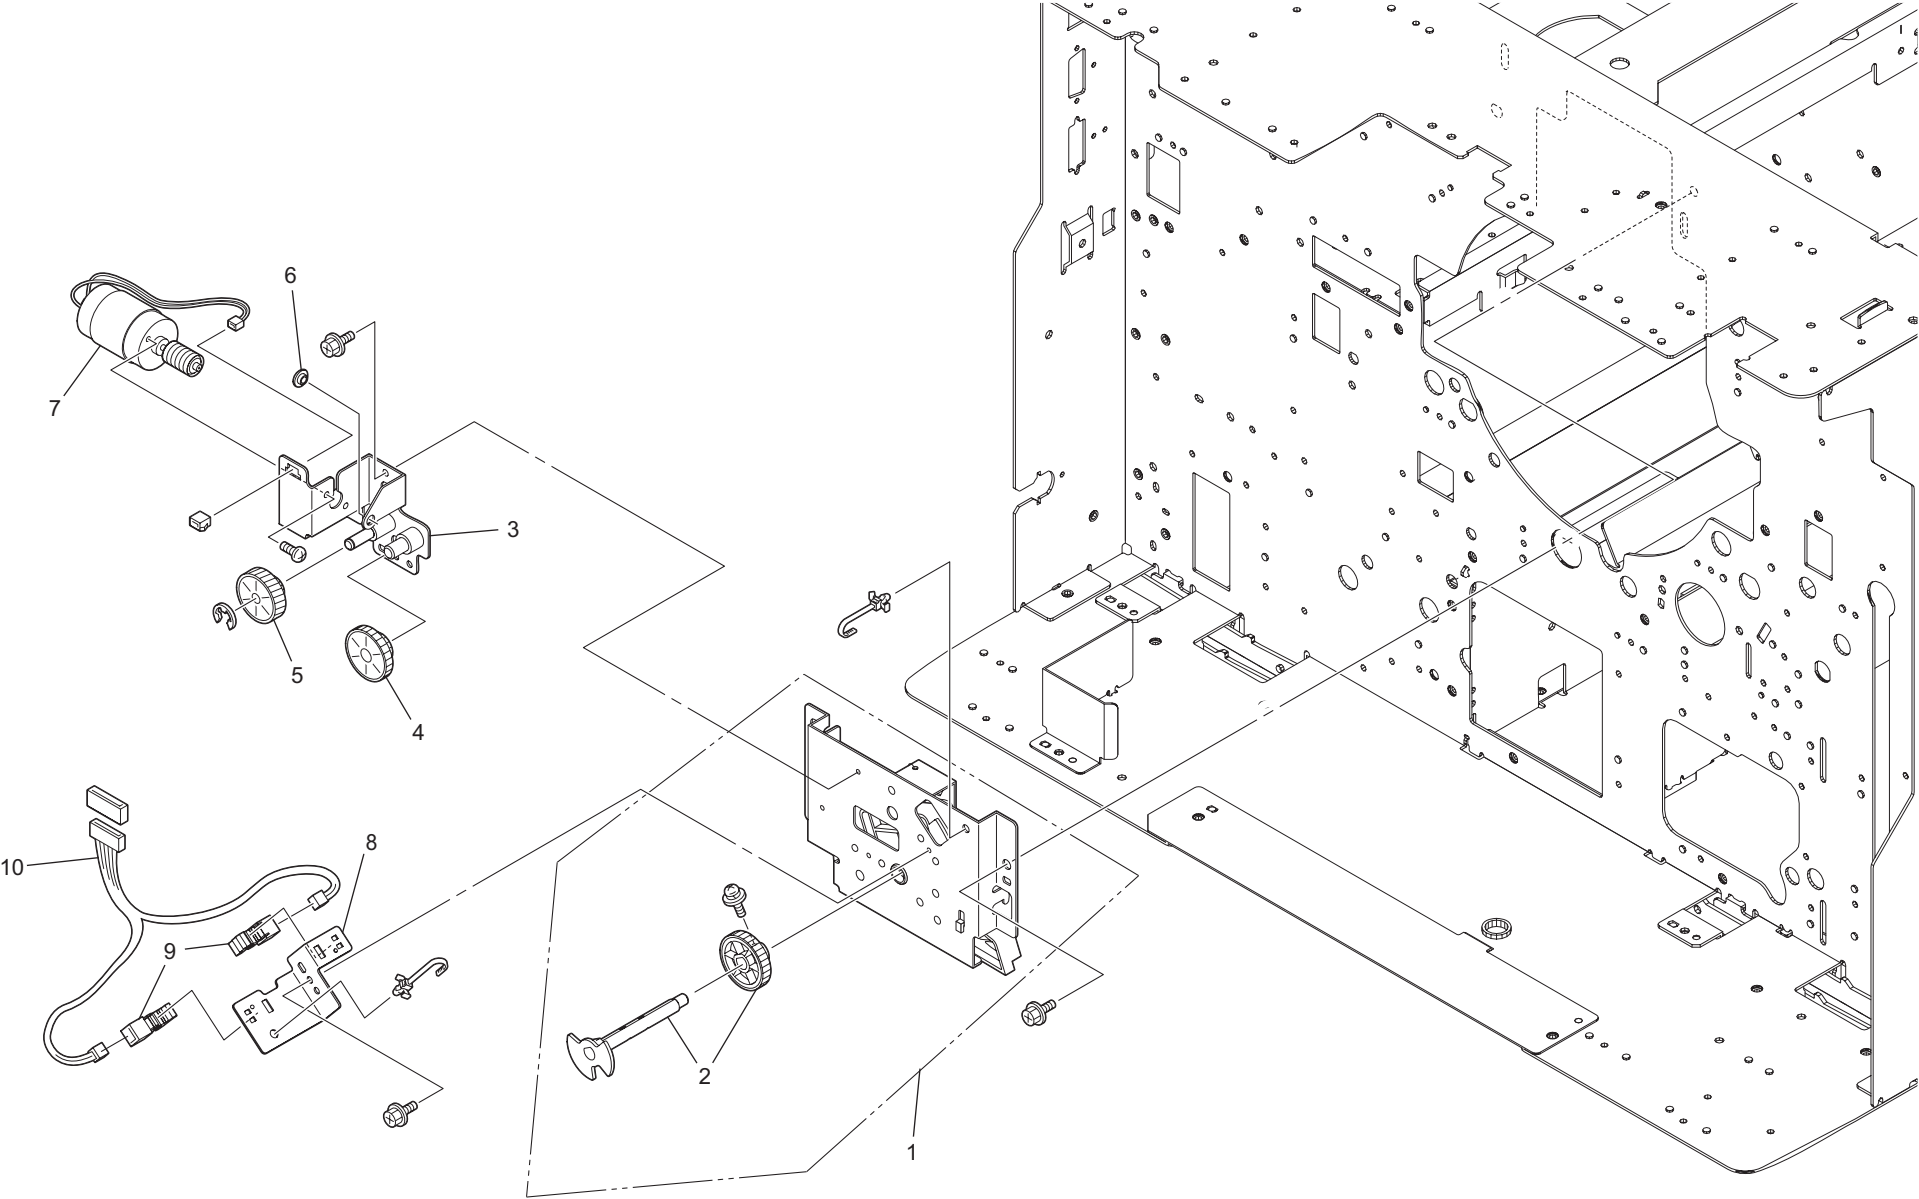


Fig 14. Clamp Area

[illegible][illegible]

Fig.15 Separator Area

I - 30


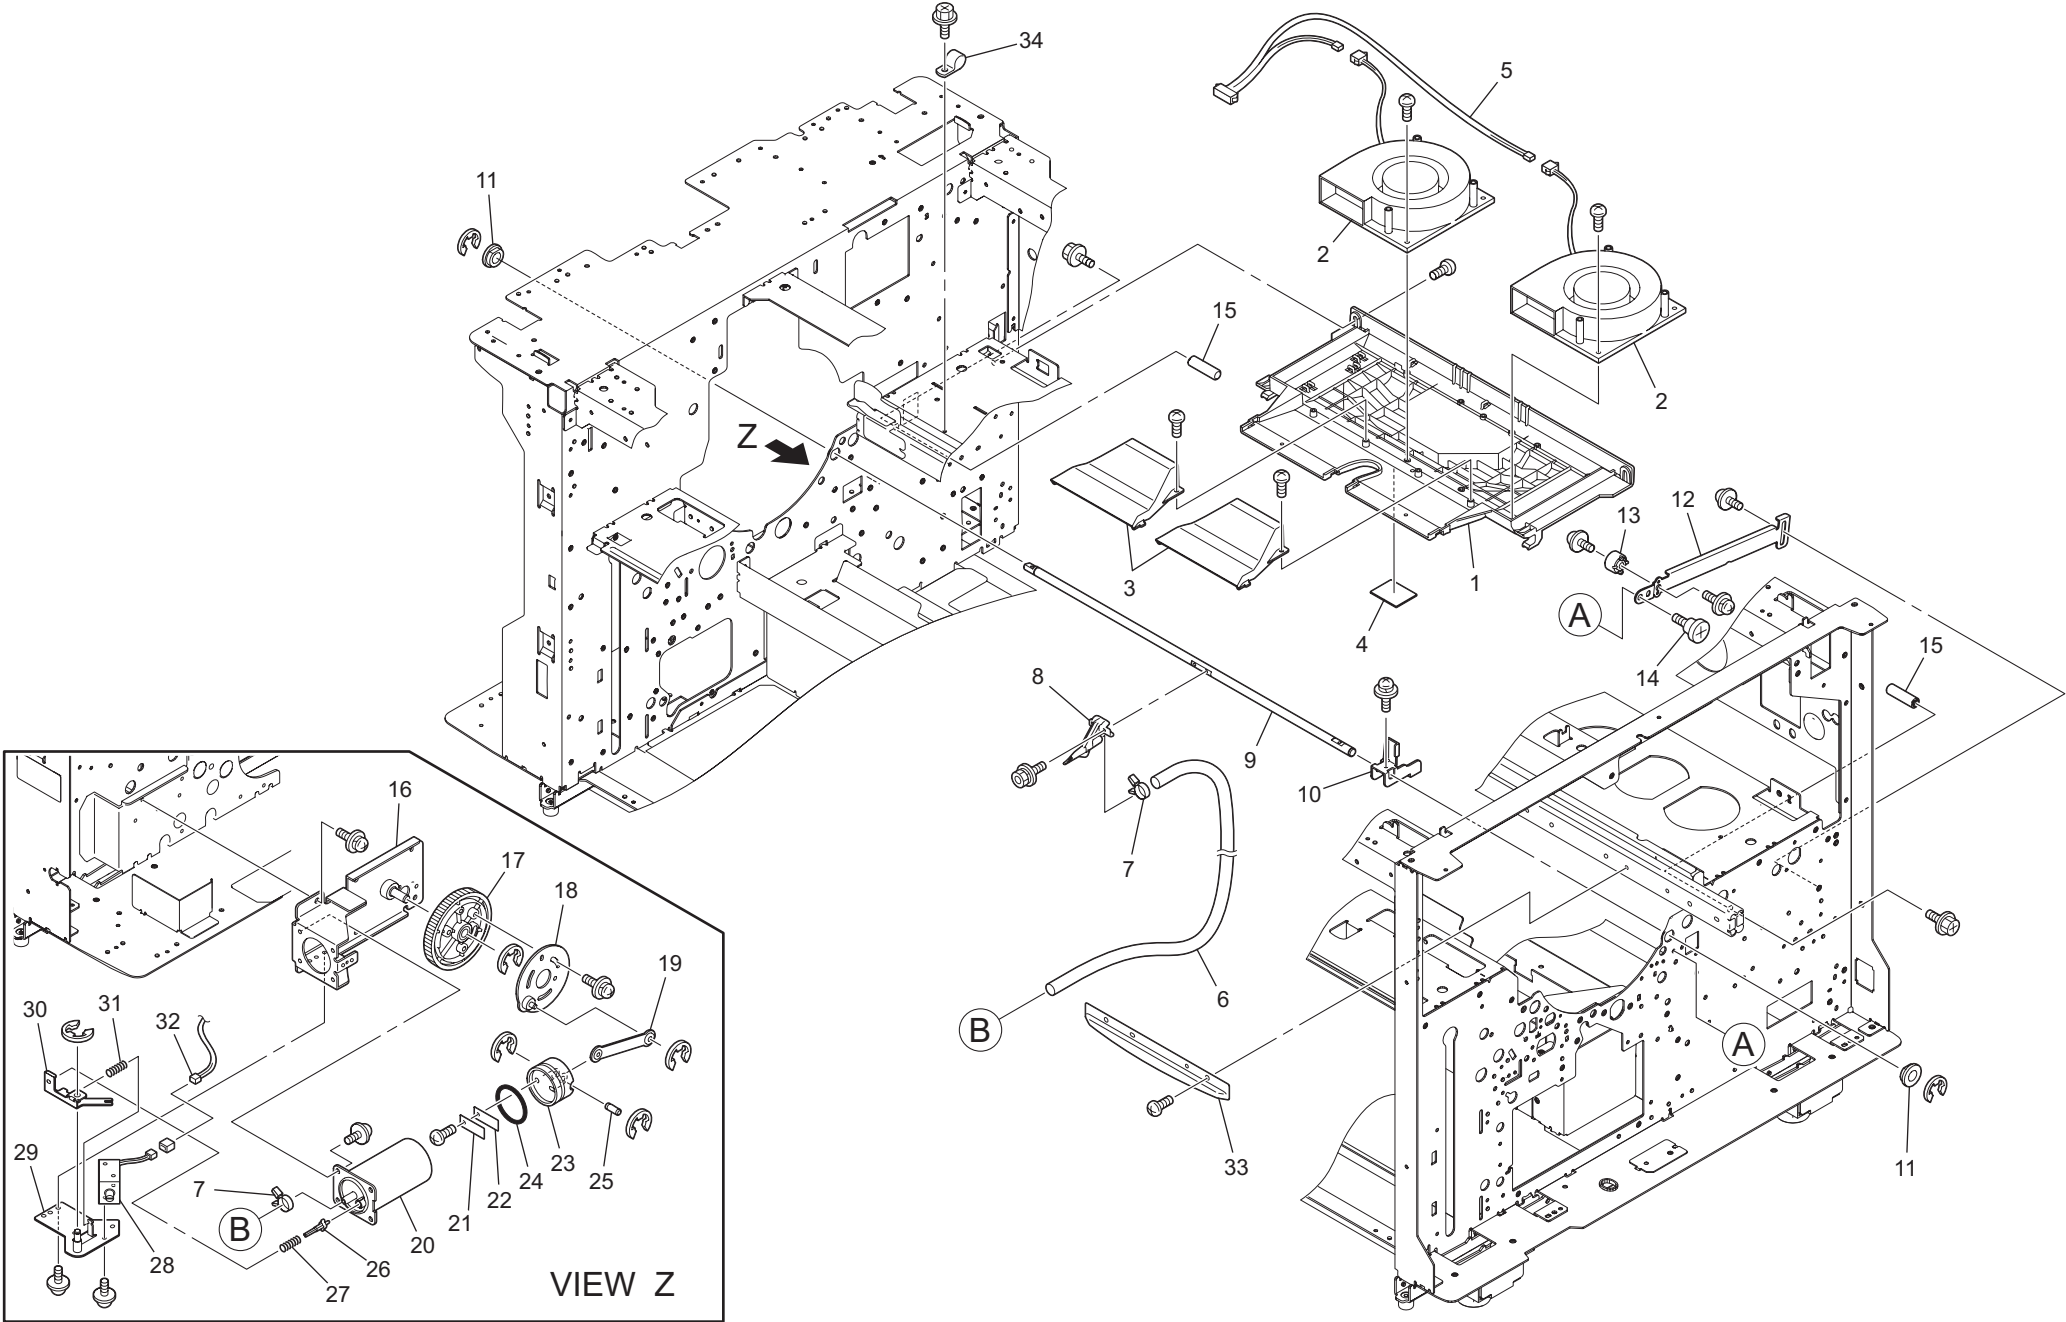


Fig 15. Separator Area

No.	Part No.	Part Name	Q'ty	Remark
	045-75300-052	Separation Fan Assy (1-5)	1	
1	023-21017-102	*Base; Separation Fan	1	
2	490-41013-108	*Fan; D12F-24PLH1C13	2	
3	023-21018-001	*Air Nozzle	2	
4	023-21393-007	*light Absorber Strip(35X28)	1	
5	045-21702-007	*Wire Harness; Separation Fun	1	
6	023-21016-106	Air Hose; Separator	1	
7	665-02901-002	Power Band T10	2	
8	024-21038-000	Separator; MZ	1	
9	045-21002-005	Shaft; Separator	1	
10	023-21007-000	Release Lever; Separator	1	
11	607-15000-000	Metal; F8X13/12X5;16X2	2	
12	023-21003-004	Adjustment Plate	1	
13	023-21005-007	Stopper; Separator	1	
14	635-17614-205	Stepped Screw;6X1.7;M4X4	1	
15	020-13114-202	Fixing Pin	2	
	045-75297-051	Air Pump Assy (16-31)	1	
16	023-21013-409	*Cylinder Base Bracket; Air Pump	1	
17	612-03106-008	*Gear;M1X80X10	1	
18	023-21023-200	*Timing Plate; Air Pump	1	
19	019-13511-103	*Arm;Air Pump	1	
20	023-21021-002	*Cylinder; Air Pump	1	
21	019-13517-004	*Cylinder Valve II ; Air Pump	1	
22	019-13518-000	*Cylinder Valve Sheet ; Air Pump	1	
23	019-13516-105	*Piston Head II;Air Pump	1	
24	640-67340-009	*O Ring;34-3.6	1	
25	019-13512-002	*Arm Shaft;Air Pump	1	
26	023-21011-104	*Adj. Valve; Air blow	1	
27	023-21010-000	*Spring; Adj. Valve; Air Blow	1	
28	490-50010-006	*Solenoid; TDS-08A-1030	1	
29	045-21005-004	*Pressure Release Base; Air Pump	1	
30	045-21007-007	*Release Lever; Air Pump	1	
31	045-21009-000	*Spring; Release Lever	1	
32	045-53005-006	Wire Harness; Rear Lower	1	

[illegible]

Fig.16 Suction Area

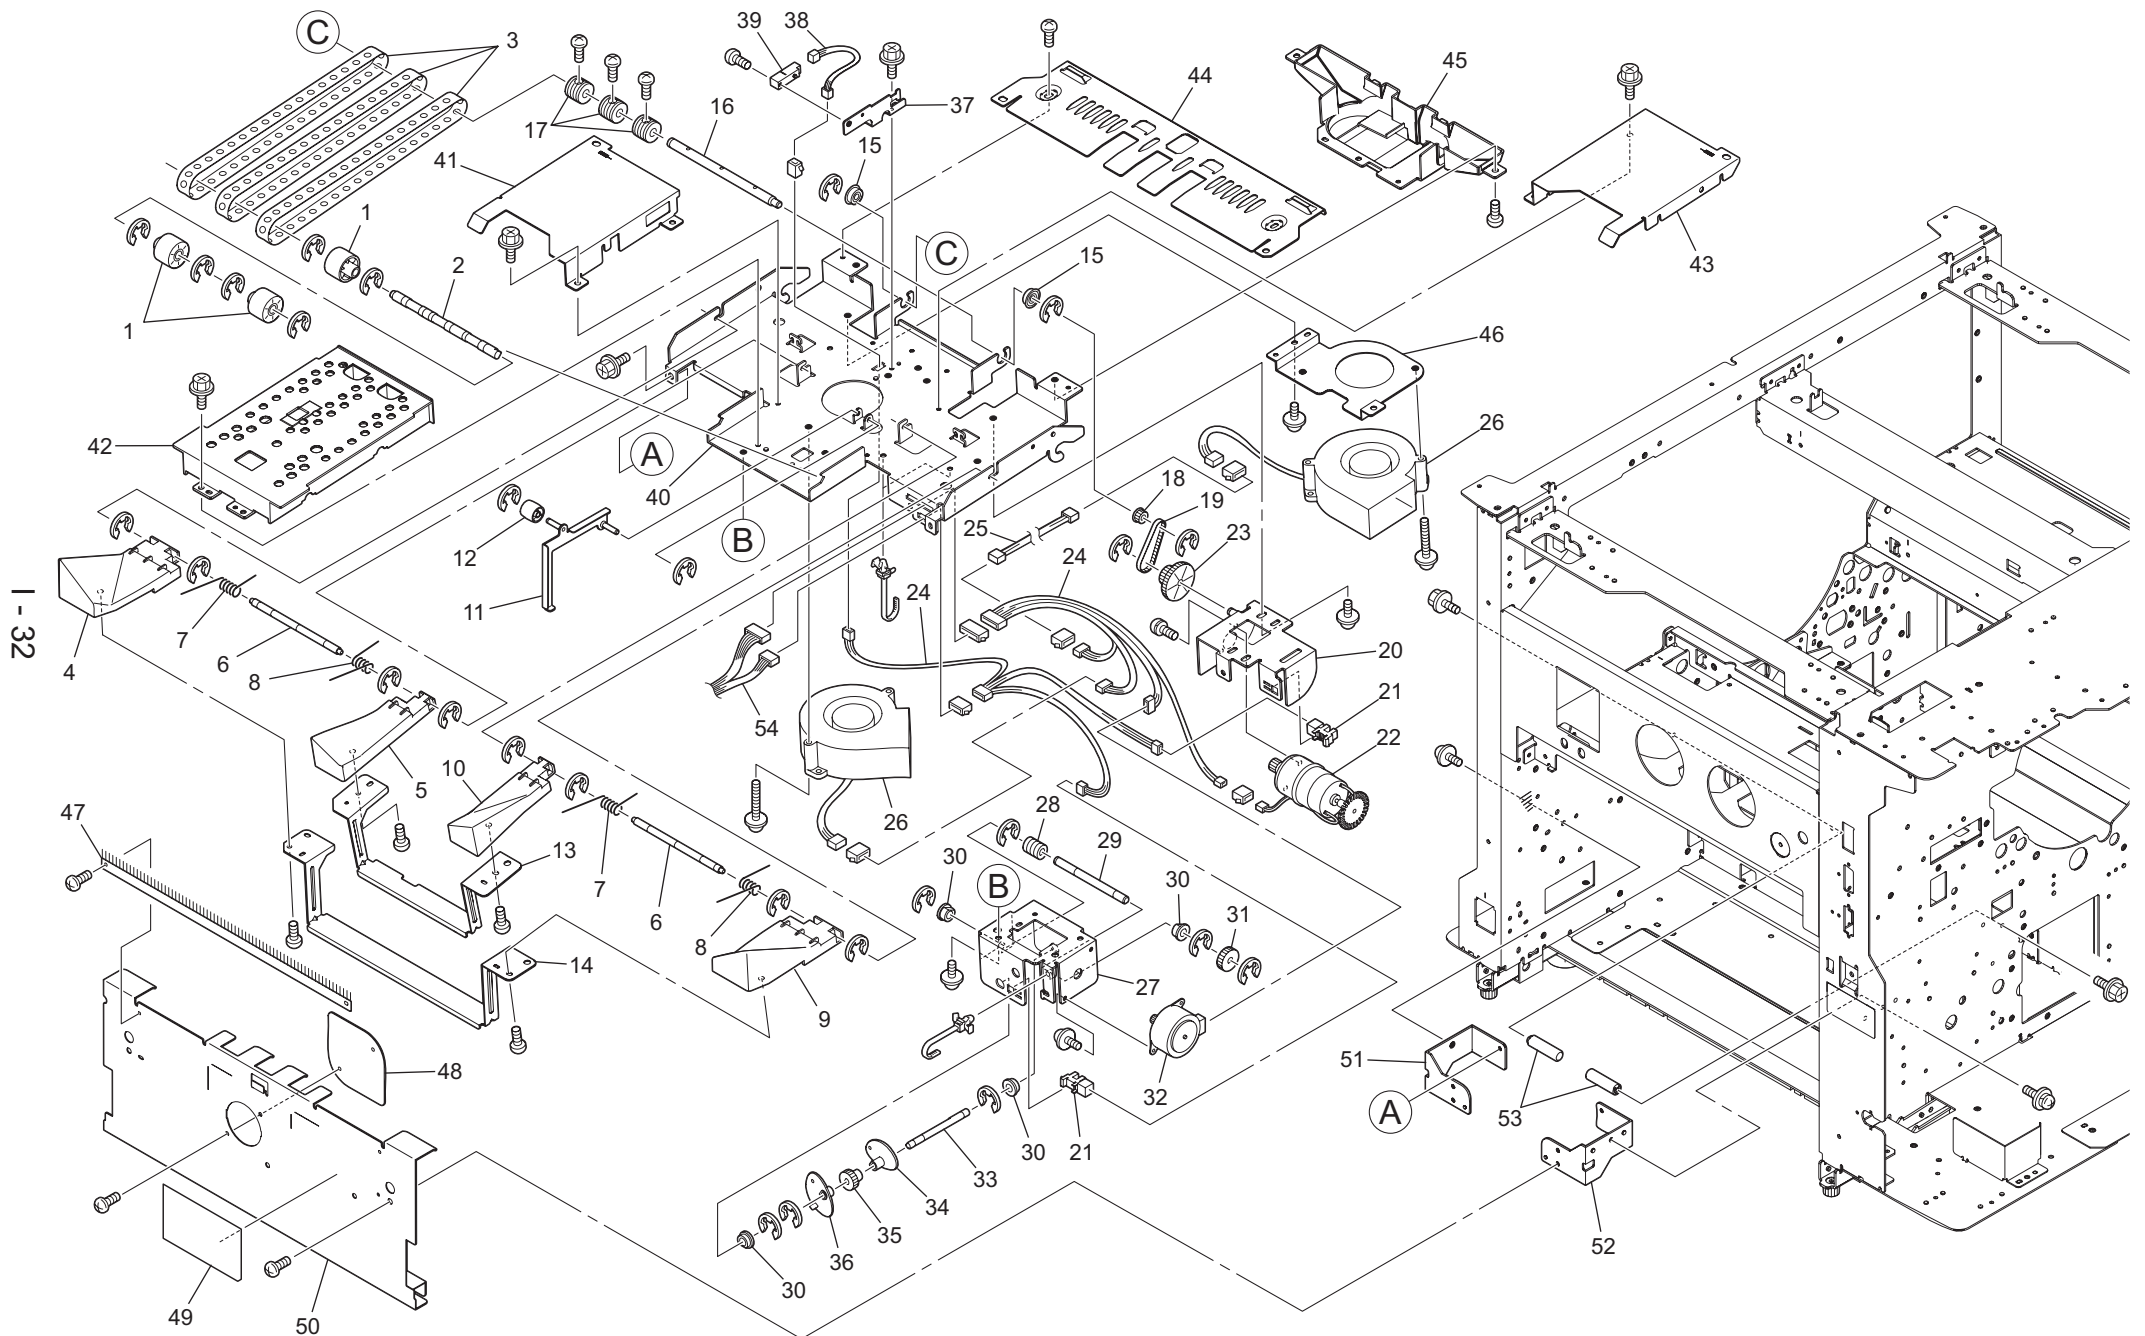

[illegible]

Fig.17 Paper Receiving Tray Area

I - 34


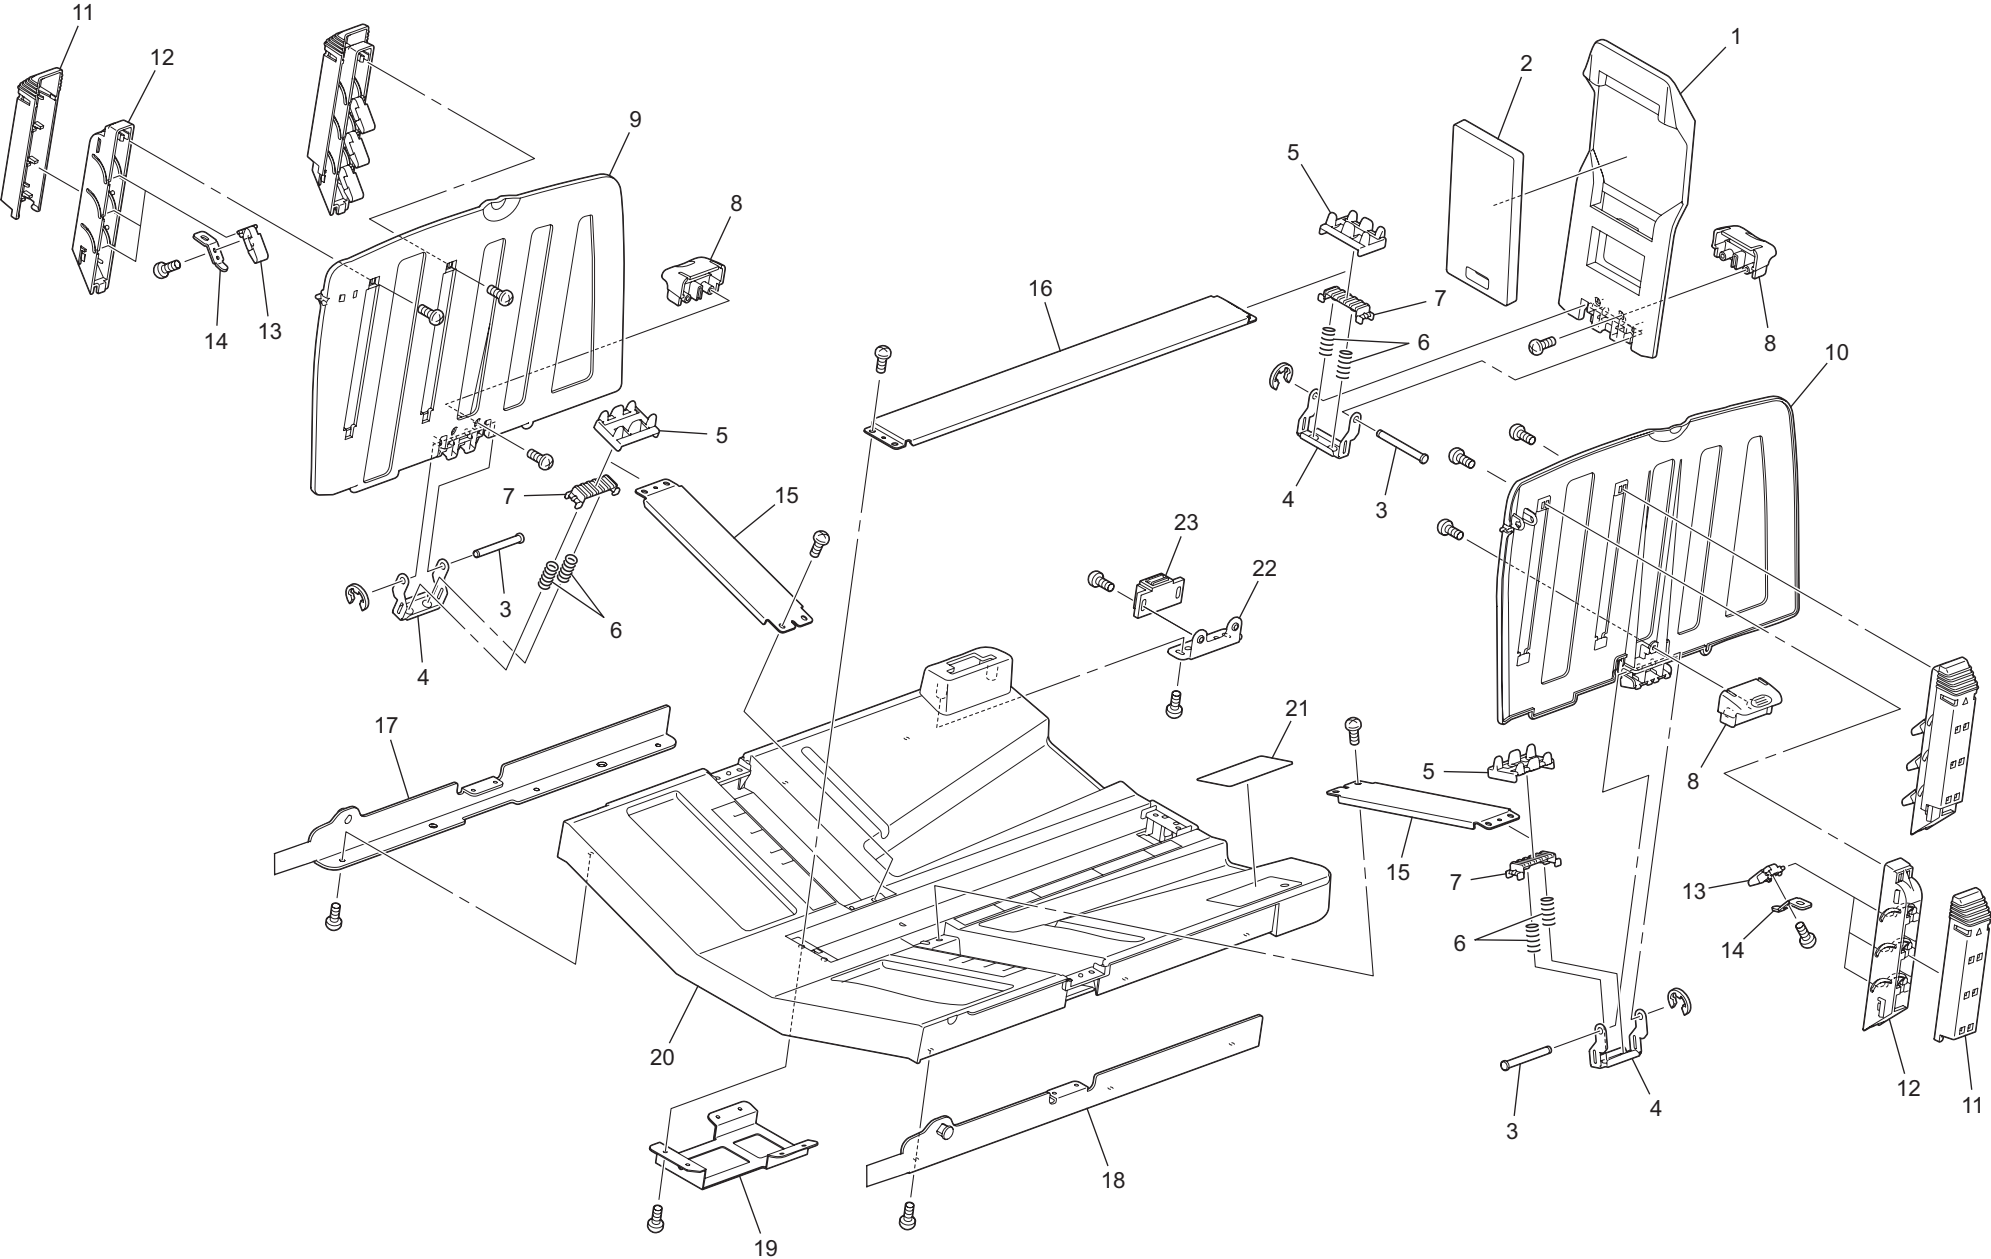


Fig 17. Paper Receiving Tray Area

[illegible][illegible]

Fig.18 Scanner Area (1)

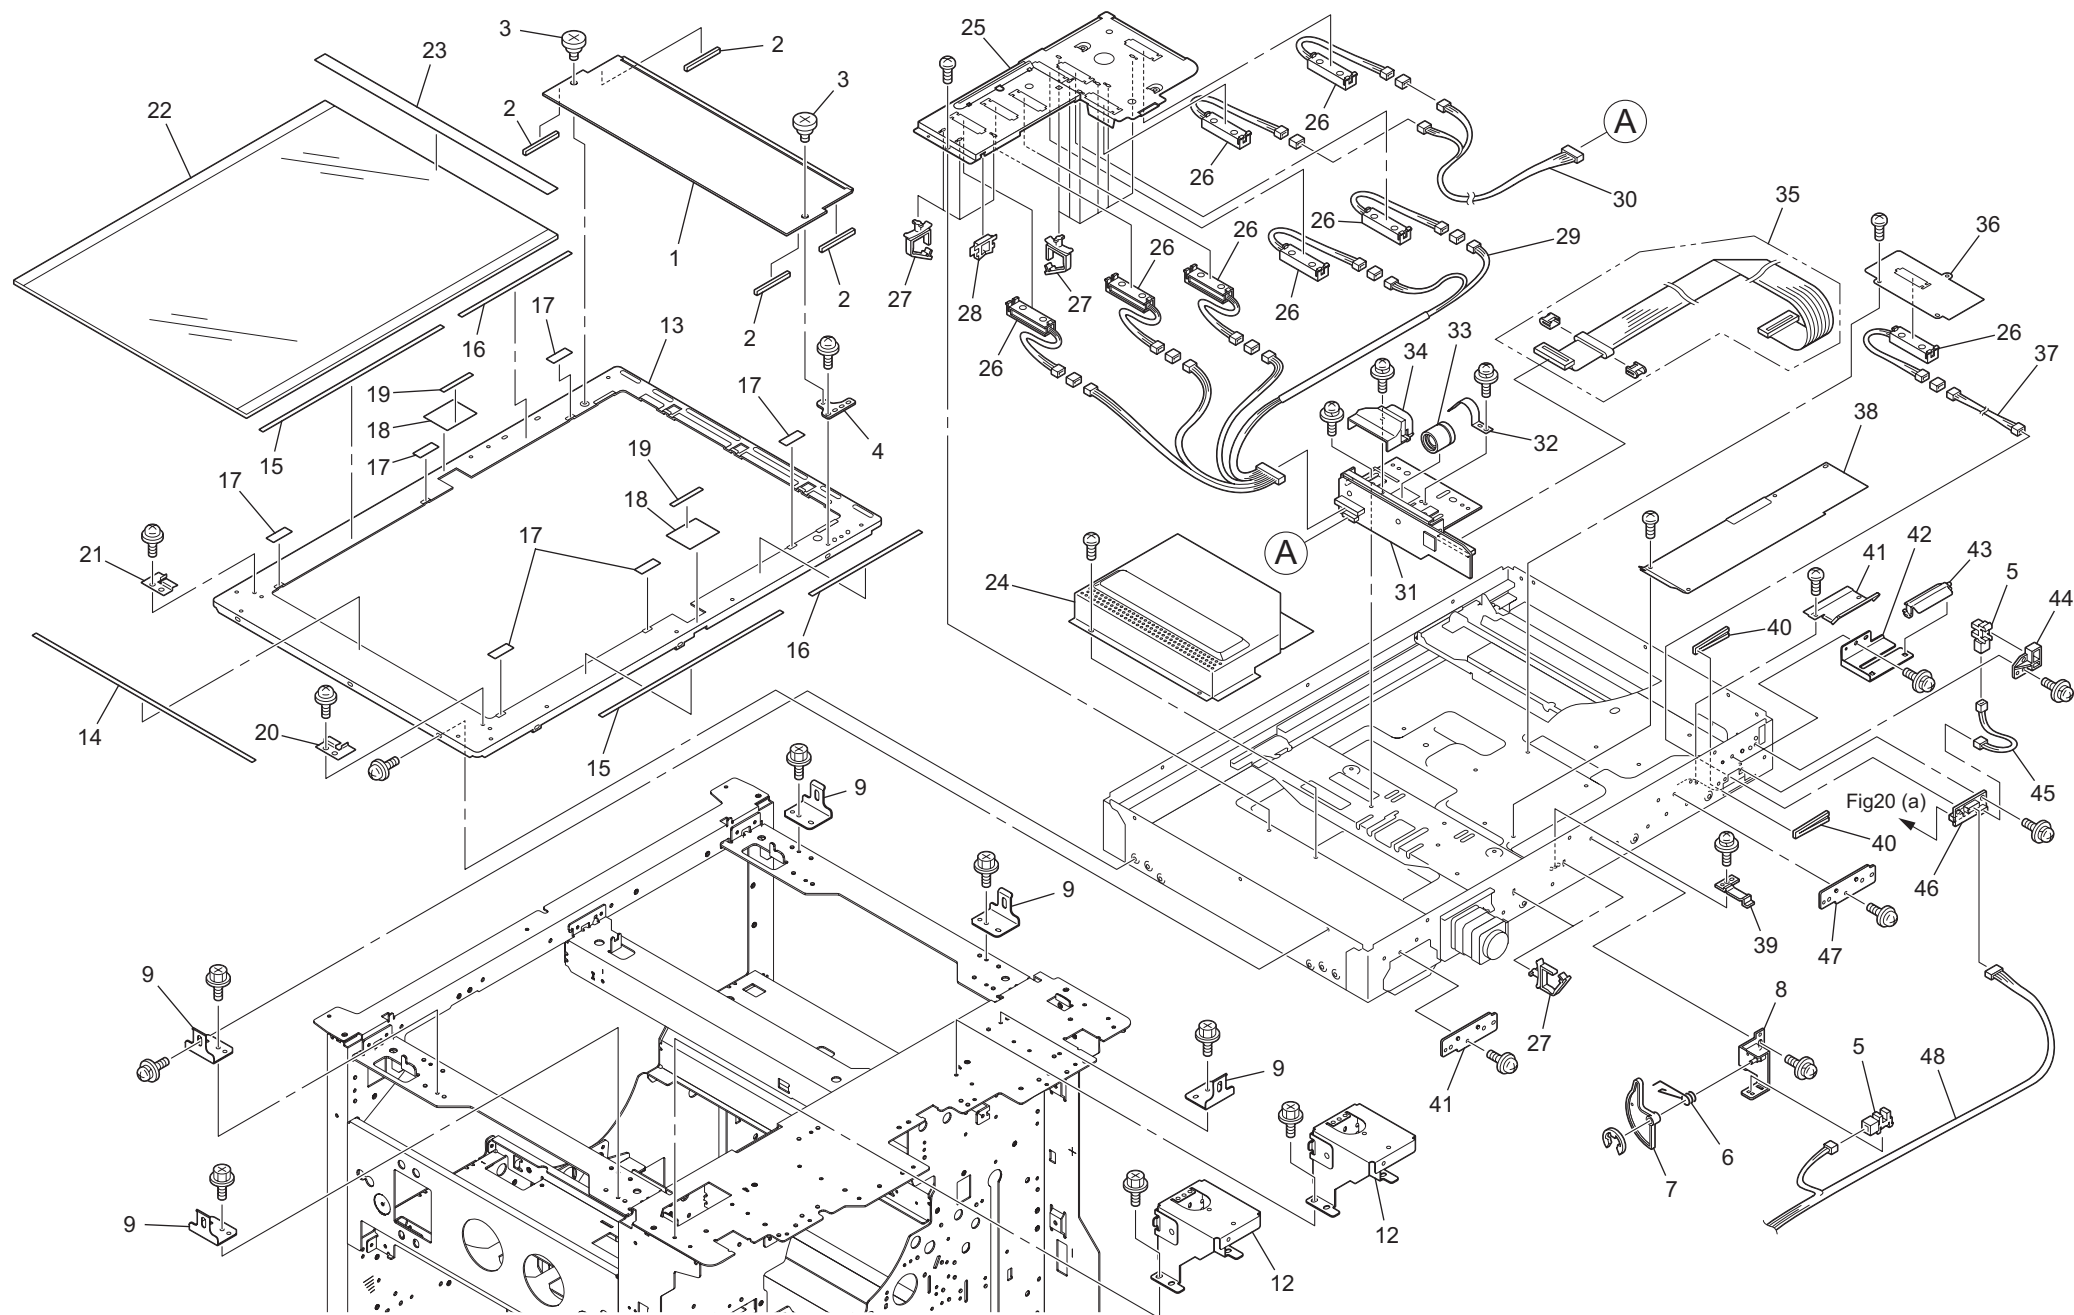

[illegible]

Fig.19 Scanner Area (2)

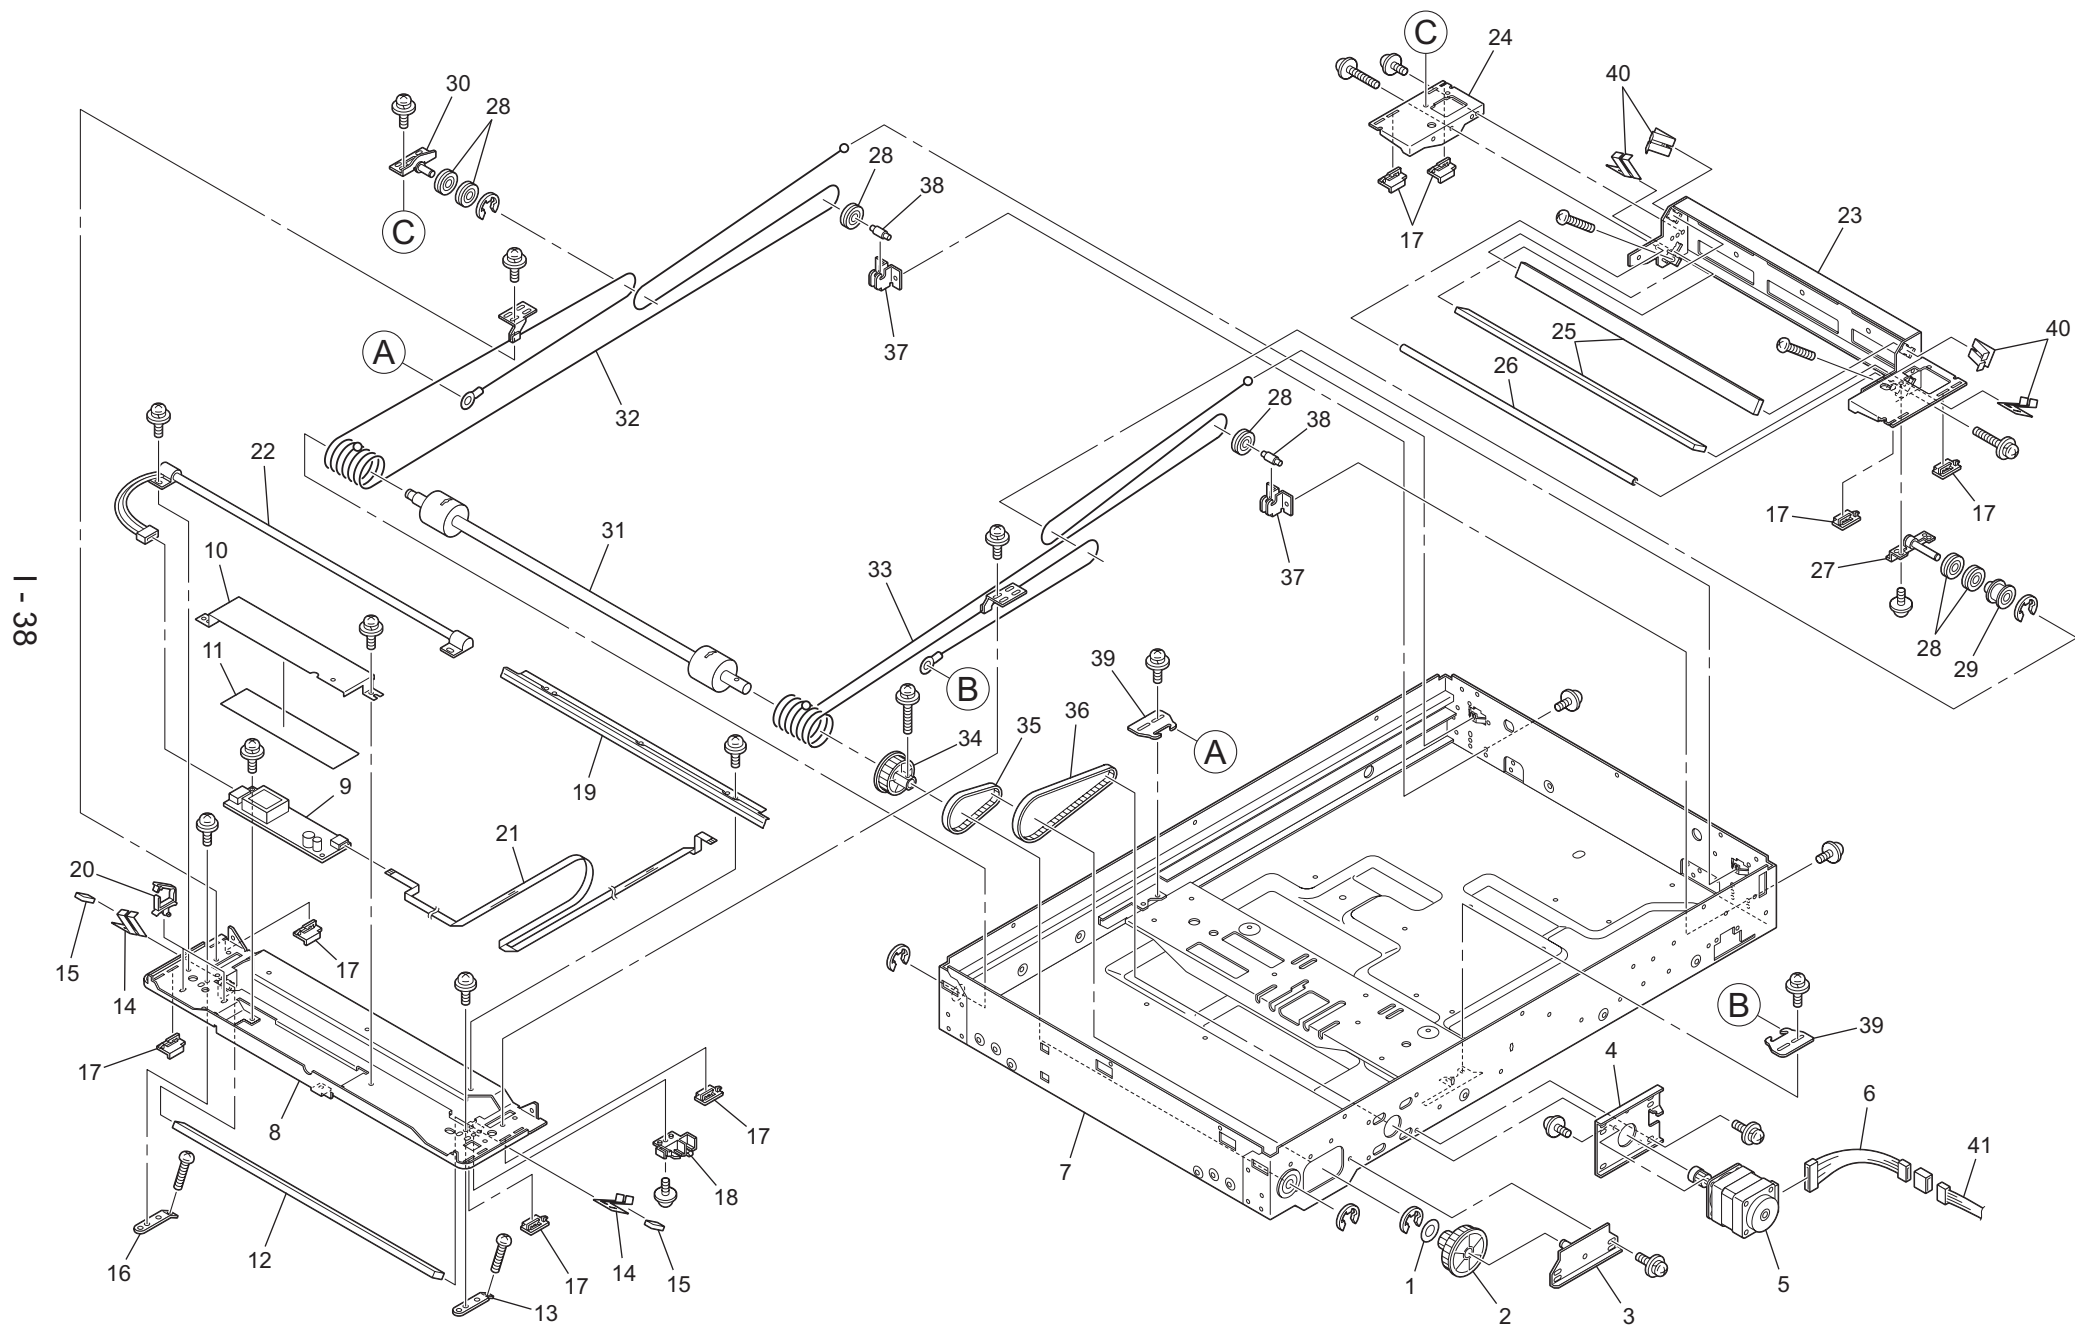


Fig 19. Scanner Area (2)

No.	Part No.	Part Name	Q'ty	Remark
1	-	*Washer; WAS-082-120-050PW	1	
2	021-17575-007	*Pulley; Ply-S1.5M-90-30	1	
3	021-17505-203	*Bracket; K-BKT-M; Scanner	1	
4	021-17541-102	*Bracket; FB Pulse Motor; BKT-MOT	1	
5	021-53201-008	*Motor;Kh42Jm2B154	1	
6	045-53014-005	*Wire Harness; FB Pulse Motor	1	
7	021-17501-208	*Frame; Assy-Frame-Lower	1	
8	021-17554-107	*Frame; Carriage 1;Frm-Cr1	1	
9	021-50536-106	*Inverter;Pws-Pxz170E4-B	1	
10	021-17558-102	*Cover; Inverter; CVR-INV	1	
11	021-17518-003	*Mylar; Inverter; Mlr-Inv	1	
12	021-17509-004	*Mirror; Carriage 1; Mir-1	1	
13	021-17555-103	*Adj. Bracket Rear; BKT-ADJ-CR1	1	
14	021-17528-009	*Plate Spring; Mirror 1; Spr-Mir-1	2	
15	021-17589-008	*Sponge; Mirror 1; Spng-Mir	2	
16	021-17559-109	*Adj. Bracket Front; BKT-ADJ-CR1-F	1	
17	021-17564-005	*Slide Guide; SlIde-Bush; Carriage	8	
18	021-17570-005	*Guide Bracket; Guide-Ffc-Cr1	1	
19	021-17556-002	*Reflector	1	
20	-	*RLMC-05T V0	1	
21	021-51120-000	*Wire Harness;Assy-Ffc	1	
22	021-53143-105	*Lamp;Uxfl-08Yg37P2	1	
23	021-17560-107	*Frame; Carriage 2;Frm-Cr2	1	
24	021-17561-103	*Bracket F; BKT-SLIDE-CR2-F	1	
25	021-17581-007	*Mirror 2; Carriage 2	2	
26	021-17523-007	*Support Shaft; Sft-Cr2; Carriage 2	1	
27	021-17506-102	*Bracket Rear; Pulley; K-DV-R	1	
28	021-17582-003	*Pulley; Dv-19-H5-W0.25	6	
29	021-17565-001	*Guide Pulley; Ply-Turn	1	
30	021-17562-207	*Bracket Front;Pulley; BKT-DV-CR2-F	1	
31	021-17521-101	*Pulley Drive Shaft; Ply-Drive	1	
32	021-17507-109	*Wire Front; Wr-7X7-S-F	1	
33	021-17508-105	*Wire Rear; Wr-7X7-Z-R	1	
34	021-17574-000	*Pulley; Ply-S1.5M-75	1	

[illegible]

Fig.20 Master-Making Area (1)

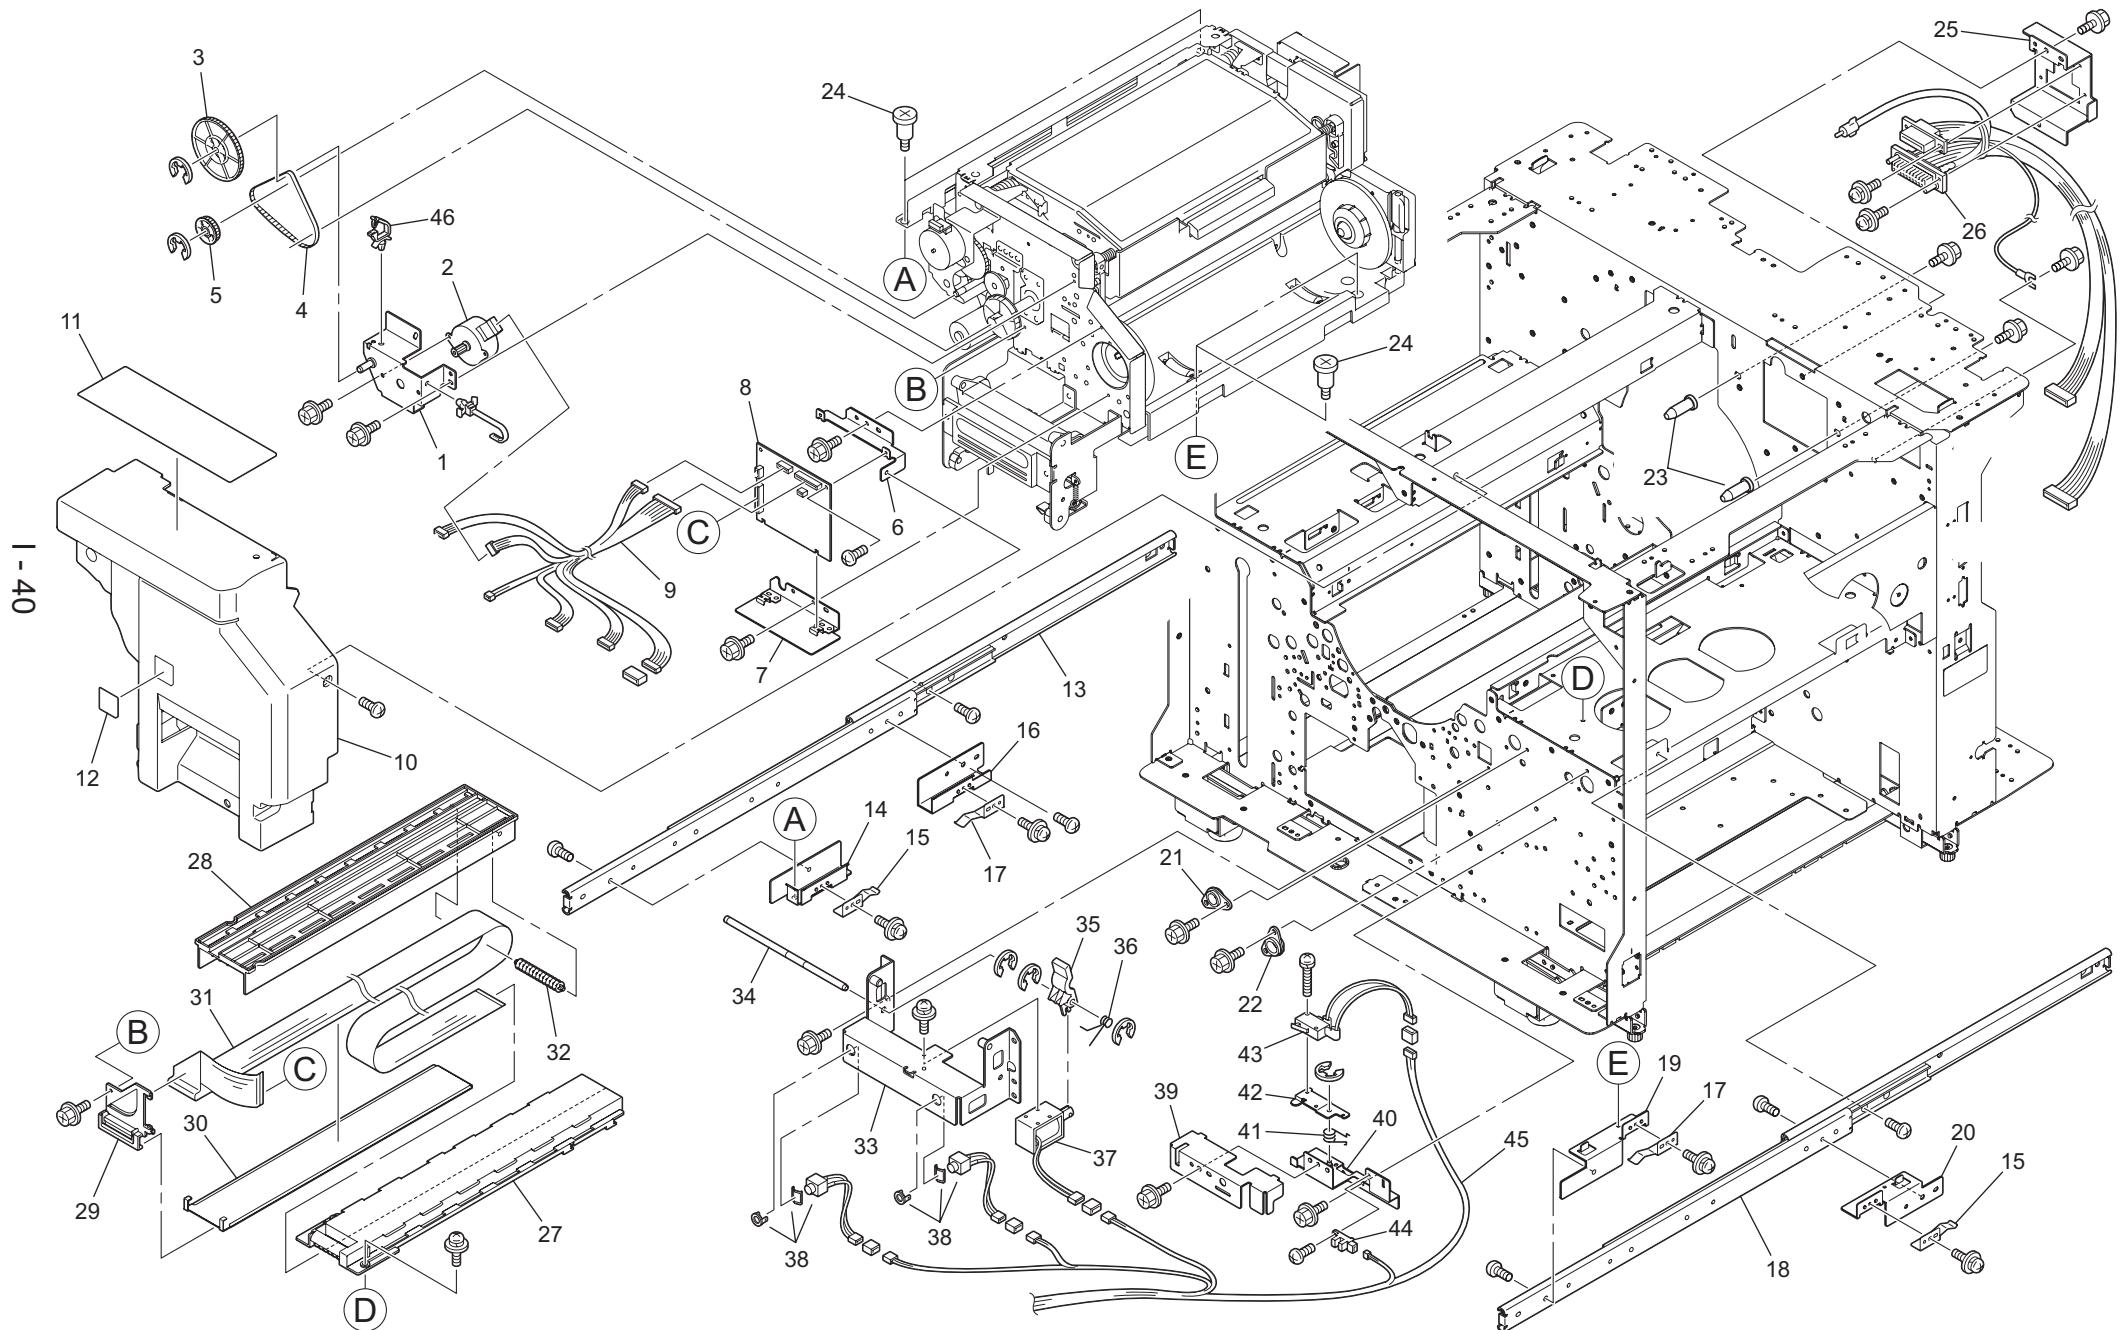


Fig 20. Master-Making Area (1)

No.	Part No.	Part Name	Q'ty	Remark
	045-75034-058	Master Making Unit A3(Fig 20, Fig 21)	1	
	023-75145-050	*Write Pulse Motor Ass'y; SU (#1-5)	1	
1	023-28195-103	**Bracket; Write Pulse Motor	1	
2	490-33015-100	**Motor; PM42L-048-ZVS6	1	
3	613-10002-002	**Gear Pulley; M0.5X130+17-2	1	
4	620-80001-008	**Belt; 256-2GT-4	1	
5	611-90010-006	**Pulley Ass'y; P40-2Gt-5	1	
6	023-28016-004	*Bracket; PCB; M.-Making	1	
7	023-28401-005	*Bracket Bottom; Master Making PCB	1	
8	045-28001-004	*Master Making PCB 2	1	
9	023-28239-208	*Wire Harness; M.-M Unit	1	
10	023-28222-003	Front Cover; M.-M. Unit	1	
11	023-28944-009	Seal;Setting Master;Pic.	1	
12	023-28428-000	Seal; Master Making Unit Cover	1	
13	023-17063-205	Slide Rail	1	
14	023-28001-007	Bracket Front Upper; Rail; M.-M.	1	
15	023-17139-104	Pre-Pressure Spring; Right; Drum	2	
16	023-28002-003	Bracket Rear Upper; Rail; M.-M.	1	
17	023-17140-102	Pre-Pressure Spring; Left; Drum	2	
18	023-28402-206	Slide Rail 2	1	
19	023-28084-000	Bracket Front Bottom; Rail; M.-M.	1	
20	023-28012-009	Bracket Rear Bottom; Rail; M.-M.	1	
21	030-16109-001	Shaft Holder; Left	1	
22	030-16108-005	Shaft Holder; Right	1	
23	023-28086-002	Positioning Pin; Rear; M.-M	2	
24	635-10004-100	Stepped Screw;F5X5;M3X3	4	
25	023-28085-006	Bracket; Drawer Connector; M.-M.	1	
26	045-53002-104	Wire Harness; TPH Drawer Connector H	1	
27	023-28199-001	Guide Lower; Flexible Wire; M.-M	1	
28	023-28117-005	Guide Upper; Flexible Wire; M.-M	1	
29	023-28010-006	Guide Bracket;Wire Harness; M.-M.	1	
30	023-28353-000	Holding Plate; Wire Harness; M.-M.	1	
31	023-28238-104	Flexible Wire; M.-M	1	
32	023-28200-000	Guide Roller: Wire Harness: M.-M.	1	

[illegible]

Fig.21 Master-Making Area (2)

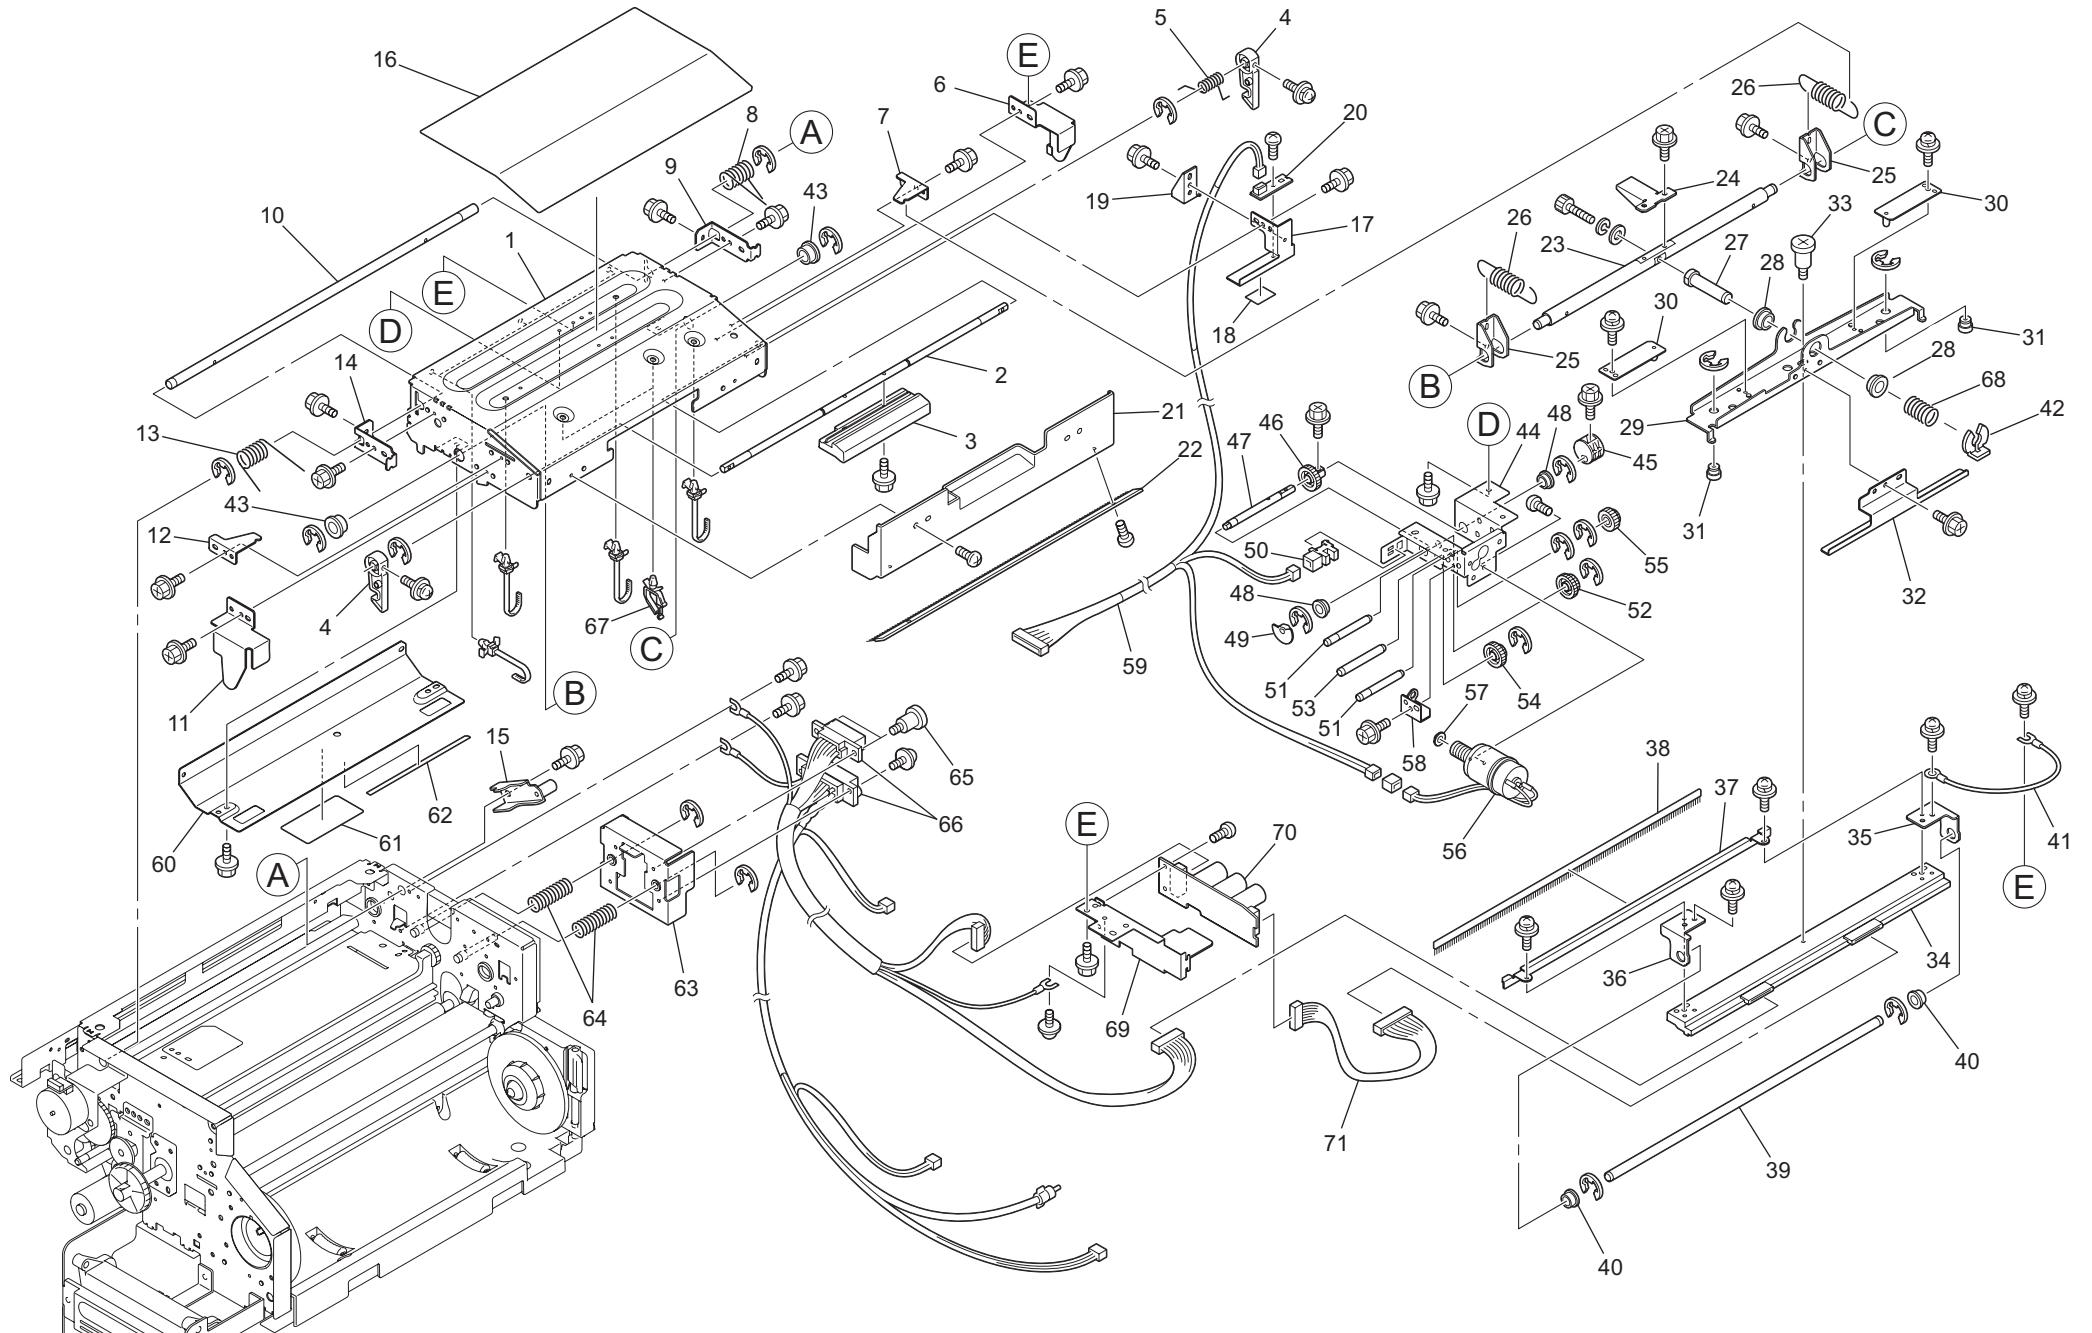


Fig 21. Master-Making Area (2)

No.	Part No.	Part Name	Q'ty	Remark
1	023-28150-304	*Frame; M-M Upper Unit	1	
2	023-28157-104	*Shaft; Handle; M-M Up	1	
3	023-28236-004	*Hook Lever; M.-M Up	1	
4	023-28237-000	*Hook; M.-M Up	2	
5	023-28356-000	*Hook Spring; M.-M Up	1	
6	023-28253-103	*Pushing Plate R; Set-Guide Plate	1	
7	023-28152-005	*Spring Hook Bracket Rear; TPH Pressure	1	
8	023-28156-000	*Spring Rear; M.-M Up	1	
9	023-28252-107	*Pivot Support Plate Rear; M.-M Up	1	
10	023-28154-202	*Shaft; M.-M Upper Unit	1	
11	023-28215-201	*Pushing Plate F; Set-Guide Plate	1	
12	023-28381-004	*Bracket Front; TPH Pressure spring	1	
13	023-28155-004	*Spring Front; M.-M Up	1	
14	023-28151-106	*Pivot Support Plate Front; M.-M Up	1	
15	023-28177-202	*Safety Stopper; M.-M Up	1	
16	023-28426-202	*Seal; Master Making Unit	1	
17	023-28418-005	*Upper Bracket A3; Master End Sensor	1	
18	023-28431-001	*light Absorber Strip(21X15)	1	
19	023-28427-004	*Cover; Master End Sensor	1	
20	444-42030-305	*Sensor (Rcv); KH0854-01	1	
21	023-28162-000	*Bottom Cover; TPH; M.-M.	1	
22	023-28410-004	*De-Electricity Brush ; A3	1	
23	023-28158-305	*Pivot Shaft; TPH	1	
24	023-28160-008	*Pressure Release Plate; TPH Press	1	
25	023-28159-301	*Pressure Lever Bracket; M.-M Up	2	
26	045-28004-003	*TPH Pressure Spring; 50	2	
27	023-28173-304	*TPH Alignment Shaft	1	
28	607-10008-003	*Metal;F10X14X10;18X2	2	
	045-75307-057	*TPH Assy A3 600	1	
29	023-28174-505	**TPH Holder; TA3	1	
30	023-28413-100	**TPH Pressure Assist Plate; A3	2	
31	023-28412-201	**TPH Boss	2	
32	023-28315-206	**Protection Plate; TPH connector TA3	1	
33	635-10005-203	**Stepped Screw;F6X7.2;M3X4	1	

No.	Part No.	Part Name
34	045-28006-006	**TPH303R14
35	023-28021-202	**Plate T-Rear; TPH
36	023-28022-209	**Plate T-Front; TPH
37	023-28175-200	**Bracket; TPH Br
38	023-28411-000	**De-electricity Br
39	023-28024-104	**Holding Roller; T
40	607-10005-004	**Metal;F8x10x3;1
41	488-90030-206	**Ground Wire; U3
42	019-11812-106	*Lock Ring
43	607-15007-005	*Metal;F8X12X7;1
	023-75143-057	*TPH Pressure Mo
44	023-28168-106	**Bracket; TPH Pr
45	023-28165-000	**Cam; TPH Press
46	612-10010-008	**Gear;M1X20X6
47	023-28166-103	**Shaft; TPH Pres
48	607-13000-402	**Metal;F6X10/9X
49	023-28361-003	**Pressure Detect
50	444-30008-100	**Sensor; LG-248
51	023-28213-101	**Shaft; Gear; TPH
52	612-80006-008	**Gear;M0.8X25+
53	023-28433-101	**Shaft; Gear 8; T
54	612-80007-004	**Gear;M0.8X25+
55	612-80008-000	**Gear; M0.8X20+
56	023-74001-054	**Motor Assy (CW
57	030-19205-001	**Support; Clamp
58	023-28172-006	**Holding Plate; W
59	045-28202-000	*Wire Harness; M
60	023-28328-103	*Gear Cover; M.-M
61	023-28942-103	*Seal; TPH Cleani
62	023-28423-009	Seal; TPH; Pic.
62	023-28424-005	Seal; TPH; Eng.
62	023-28425-001	Seal; TPH; Ch.
63	023-28382-205	*Bracket; TPH Dra
64	023-28078-000	*Spring; Drawer C

Fig 21. Master-Making Area (2)

[illegible][illegible]

Fig.22 Master-Making Area (3)

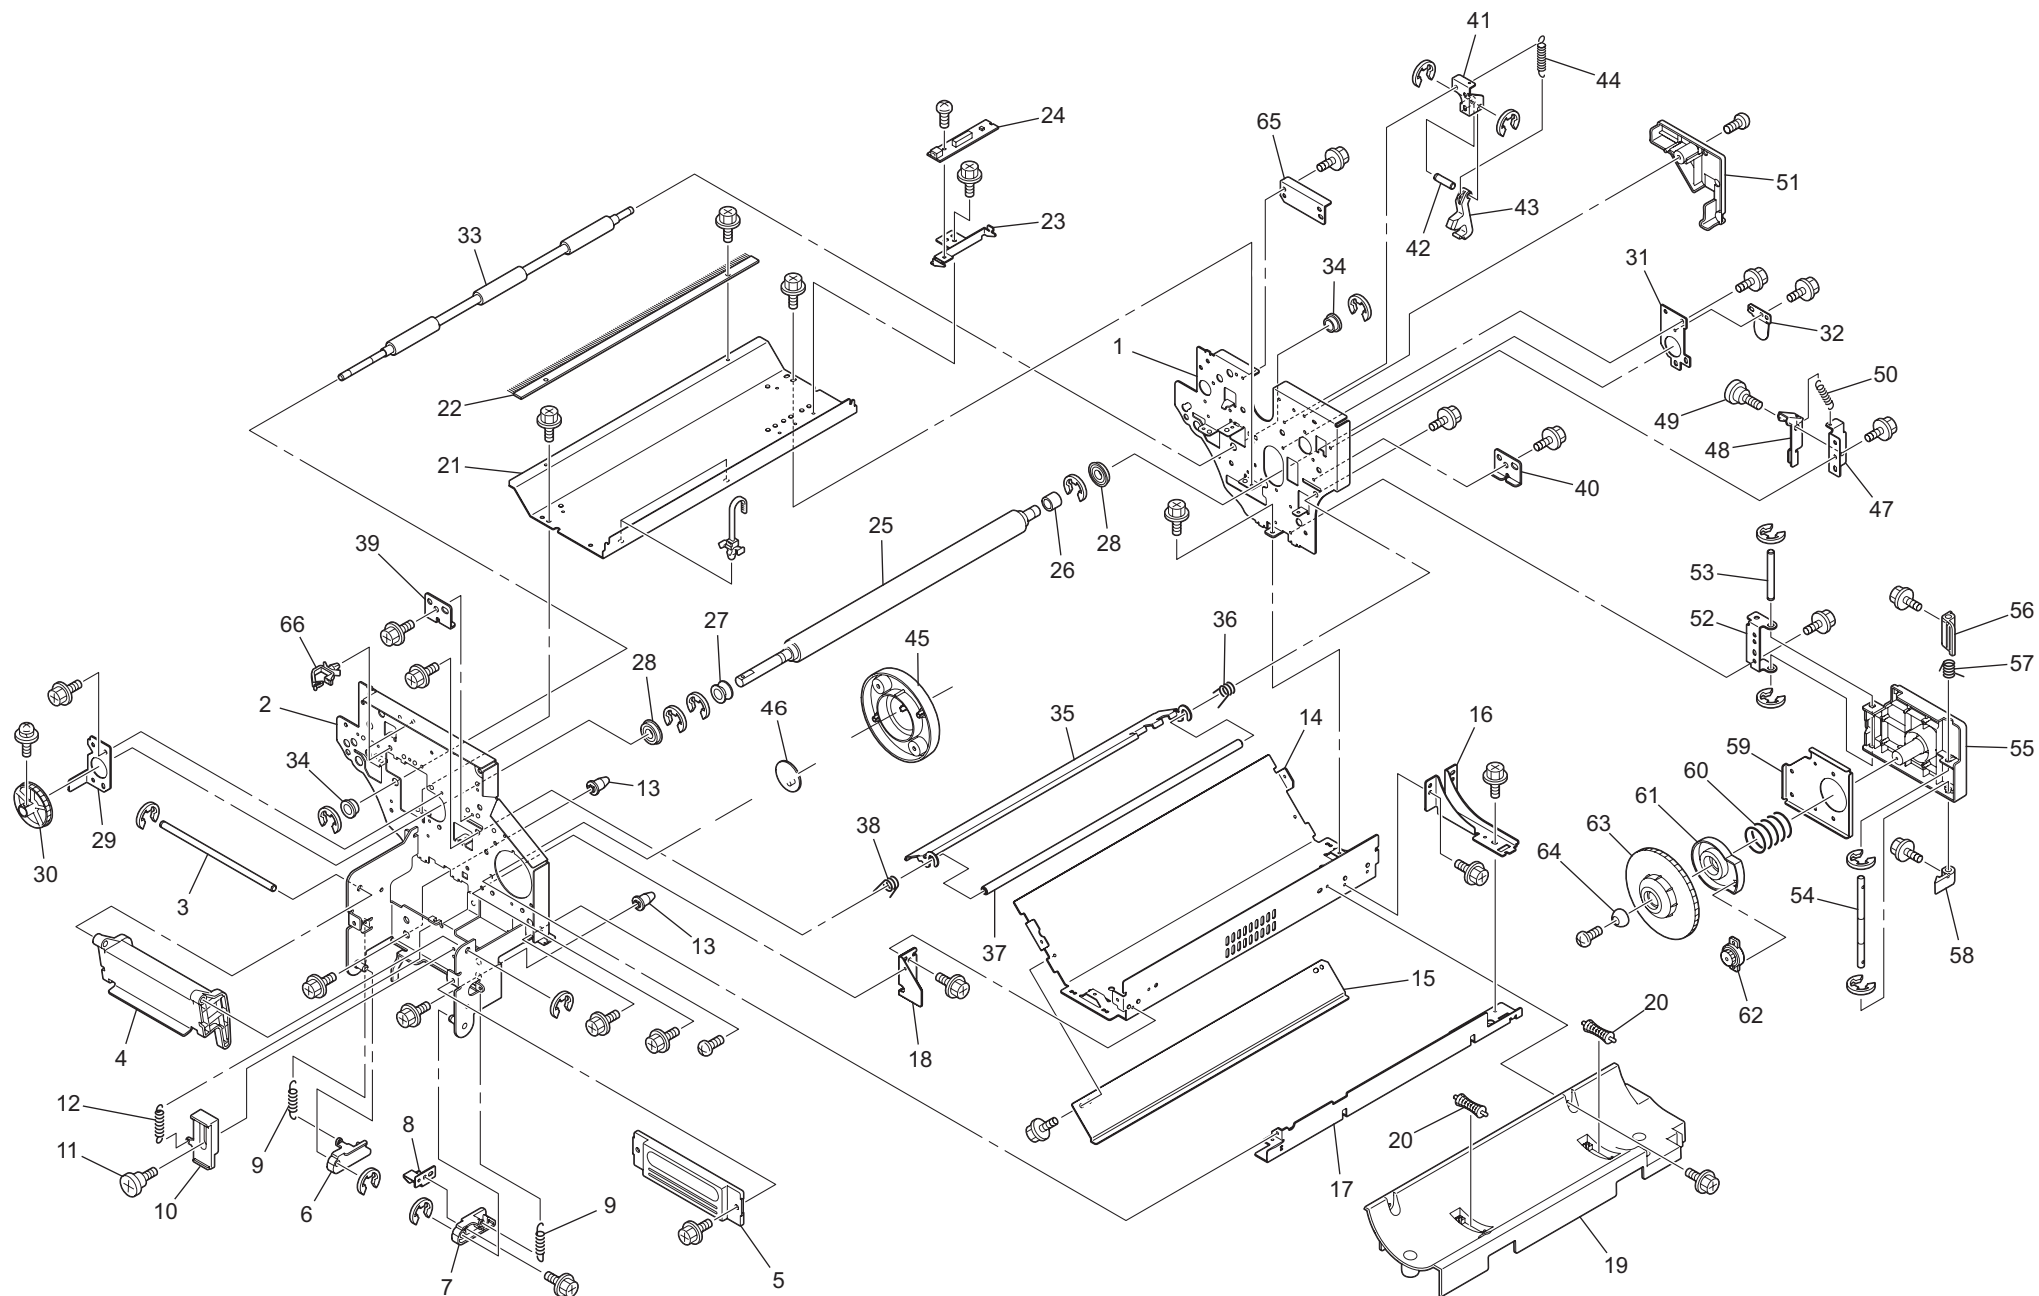


Fig 22. Master-Making Area (3)

No.	Part No.	Part Name	Q'ty	Remark
1	023-28092-207	*Rear Frame; M.-M Unit	1	
2	023-75165-050	*Front Frame; M.-M. Unit	1	
3	023-28338-109	*Shaft; Handle; M-M	1	
4	023-28070-009	*Handle; M.-M.	1	
5	023-28343-005	*Guide; Handle; M.-M.	1	
6	023-28206-105	*Hook Left; Handle; M.-M.	1	
7	023-28071-102	*Hook Right; Handle; M.-M.	1	
8	023-28207-004	*Actuator plate; M.-M. Set Sensor	1	
9	023-28072-001	*Spring; Hook; M-M	2	
10	023-28336-009	*Handle Stopper; M.-M.	1	
11	635-17423-108	*Stepped Screw;F4X2.2;M3X4	2	
12	023-28209-007	*Spring; Handle; M-M	1	
13	023-28082-007	*Positioning Pin; Front; M.-M	2	
14	023-28013-200	*Bottom Stay; M.-M Unit	1	
15	023-28251-003	*Slide Guide 2; M.-M.	1	
16	023-28074-101	*Reinforcement Plate; M.-M. Frame	1	
17	023-28073-008	*Lower Stay; M.-Making	1	
18	023-28245-003	*Reinforce Plate; Lower; M.-M. Unit	1	
19	023-28124-109	*Master Roll Holder; Bottom	1	
20	023-28210-005	*Master Guide Roller	2	
21	023-28015-008	*Box Stay; M.-Making	1	
22	014-15011-004	*De-Electricity Bar ; M.-M.; A3	1	
23	023-28417-009	*Lower Bracket; Master End Sensor	1	
24	444-42029-200	*Sensor (Send); KH0854-00	1	
	023-75114-057	*Write Roller Assy A3(25-27)	1	
25	023-28037-206	**Write Roller; D23-A3	1	
26	019-35025-208	**Liner	1	
27	023-28432-105	**Write Roller liner 3	1	
28	601-10228-000	*Bearing;6900ZZNR	2	
29	023-28342-106	*Bracket Front; Write Roller	1	
30	611-90012-009	*Pulley; P70-2Gt-5	1	
31	023-28341-002	*Bracket Rear; Write Roller	1	
32	023-28380-008	*Pressure Plate; Write Roller	1	
33	023-28045-101	*Stocker Roller; A3	1	

No.	Part No.	Part Name
34	607-10006-000	*Metal;F6X8X4;10
35	023-28114-200	*M Set Guide Plate
36	023-28228-109	*Spring B Rear; M
37	023-28036-200	*Shaft; M Set Guide
38	023-28115-207	*Spring B Front; M
39	023-28229-105	*Stopper Front; M.
40	023-28247-103	*Stopper Rear; M.
41	023-28396-001	*Bracket; Stopper;
42	023-28397-105	*Shaft; Stopper; M
43	023-28398-004	*Stopper; M Set G
44	023-28399-000	*Stopper Spring; M
45	023-28006-106	*Master Flange; F
46	444-59006-203	*RF-Tag Reader; F
47	023-28232-009	*Base Bracket; Sto
48	023-28231-002	*Stopper; M.-M. C
49	635-17613-209	*Step Screw; D6X
50	023-28233-005	*Stopper Spring; M
51	023-28377-007	*Rear Cover; M.-M
	023-75137-057	*Master Roll Holde
52	023-28130-001	**Fulcrum Plate; M
53	023-28131-105	**Shaft; Master Ro
54	023-28132-101	**Lever Shaft; Mas
55	023-28371-009	**Master Holder B
56	023-28133-000	**Lever; Master ro
57	023-28135-003	**Lever Spring; Ma
58	023-28134-007	**Hook; Master Ro
59	023-28394-009	**Reinforcement F
60	023-28136-000	**Guide Spring; M
61	023-28372-005	**Damper Case; M
62	610-00022-003	**Damper; 2G50-C
63	023-28007-005	**Master Flange; F
64	019-15255-007	**Guide Flange;Ma
65	023-28378-100	*Support Plate; Re
66	665-02044-002	*Wire Saddle;LWS

Fig.23 Master-Making Area (4)

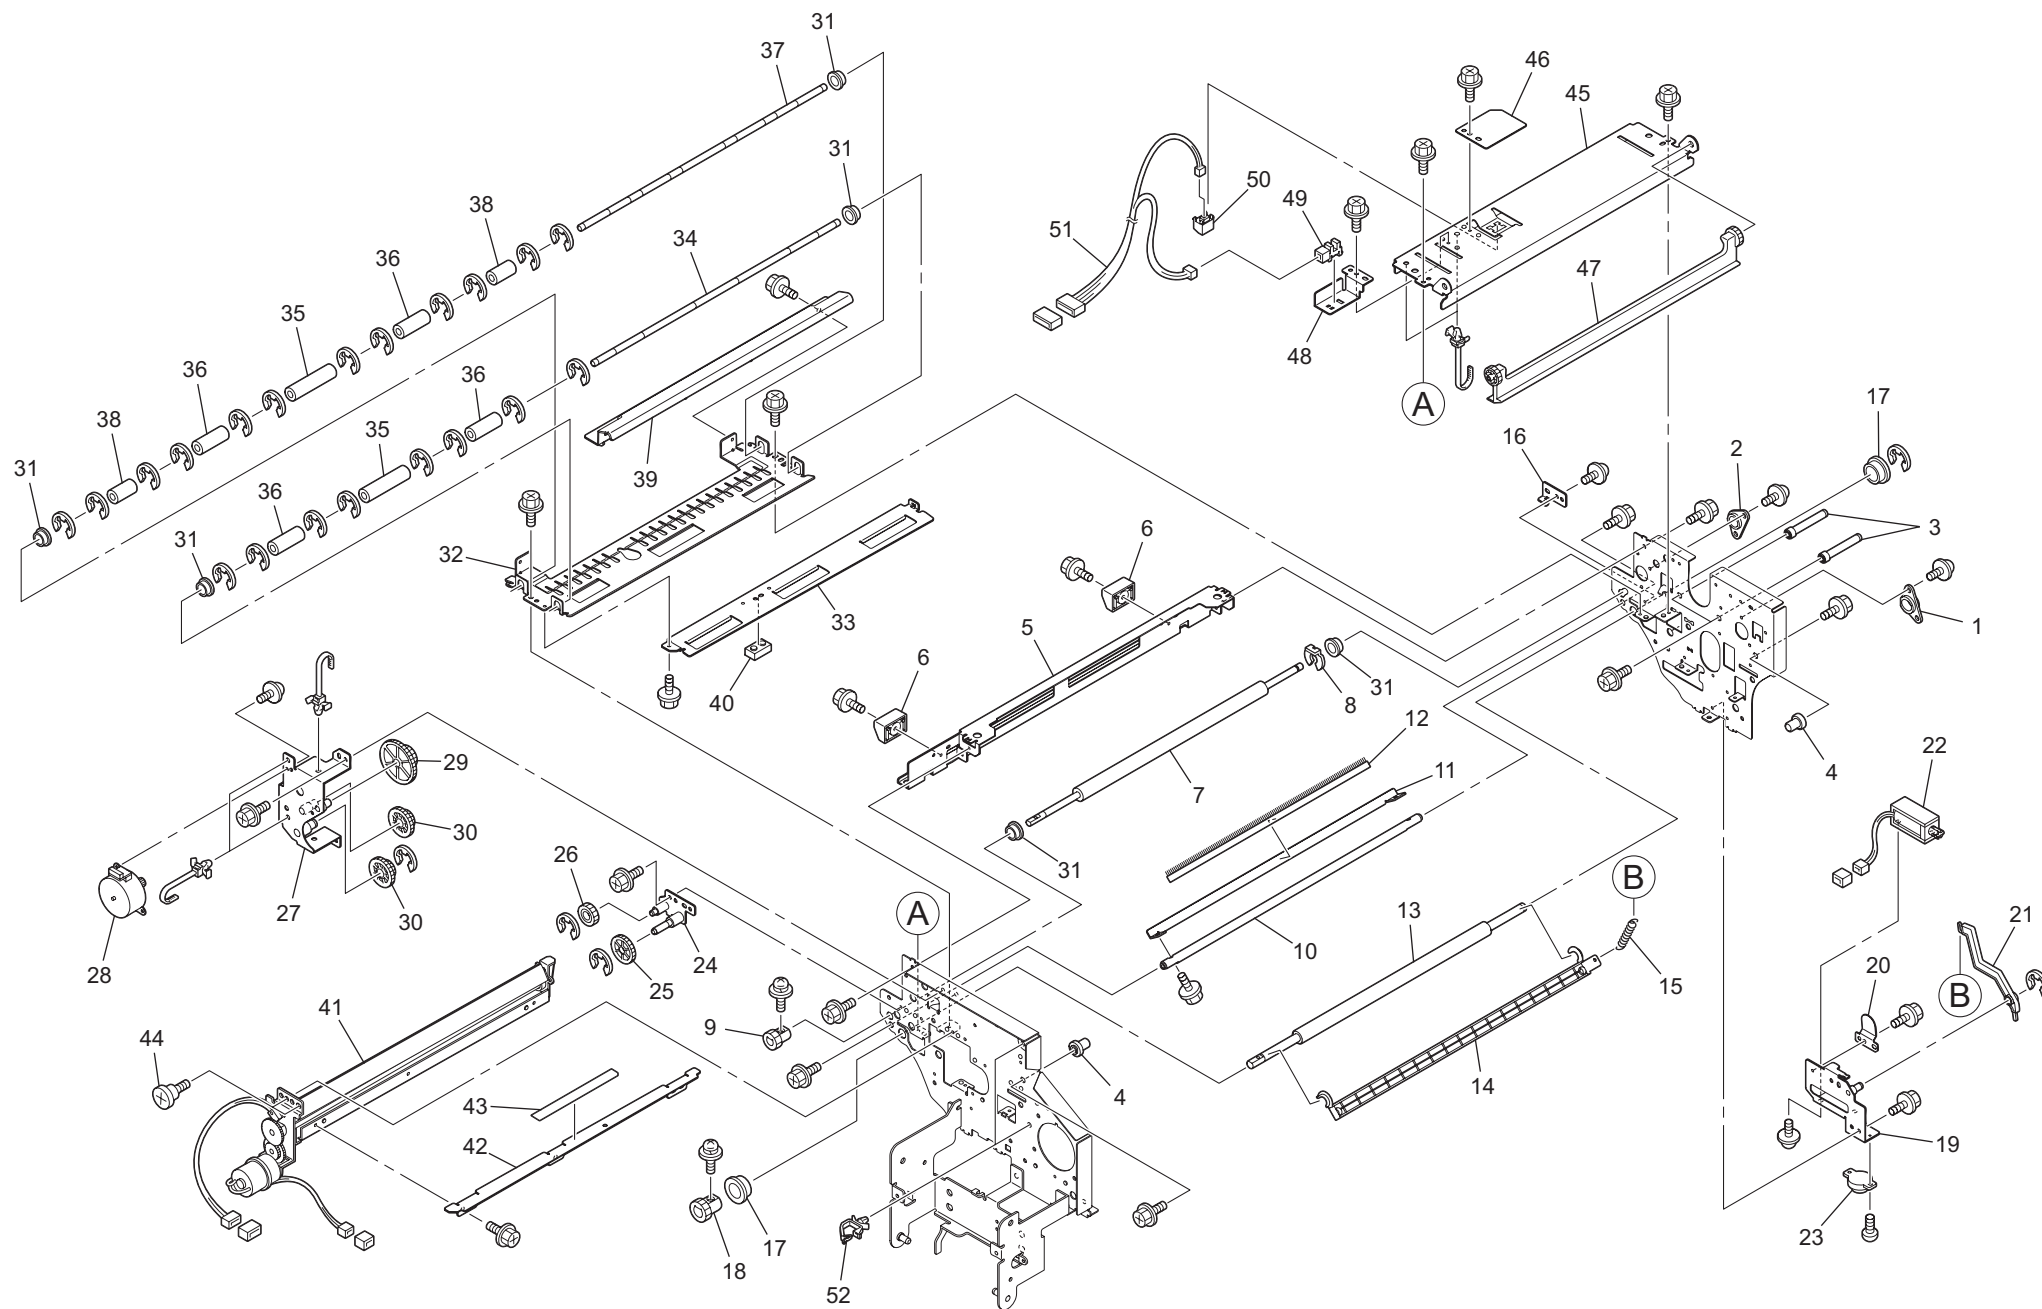


Fig 23. Master-Making Area (4)

No.	Part No.	Part Name	Q'ty	Remark
1	030-16108-005	*Shaft Holder; Right	1	
2	030-16109-001	*Shaft Holder; Left	1	
3	023-28076-104	*Shaft; Drawer Connector; M.-M Unit	2	
4	023-28148-105	*Hook Shaft; M.-M Unit	2	
5	023-28014-109	*Upper Stay; M.-M Unit	1	
6	023-28367-001	*Guide Block; M.-M. Unit Mount	2	
7	023-28046-108	*M. Loading Roller; A3	1	
8	023-17197-007	*Lock Ring 4	1	
9	612-10103-006	*Gear;M0.8X13X5	1	
10	023-28044-105	*Shaft; M. Loading Roller	1	
11	023-28405-108	*Bracket; De-Elect. Brush; M Loading	1	
12	023-28415-006	*De-Electricity Brush; M Loading	1	
13	023-28048-100	*Load Roller; A3	1	
14	023-28051-004	*Guide Plate; Stoker	1	
15	023-28052-000	*Hook Spring; Stoker Guide Plate	1	
16	023-28194-107	*Holding Plate R; Stoker Guide Plat.	1	
17	607-15005-002	*Metal; F8X10X8; 12X1.5	2	
18	612-10104-002	*Gear;M0.8X16X5	1	
19	023-28383-104	*Fulcrum Plate; Master Stocker	1	
20	023-28380-008	*Pressure Plate; Write Roller	1	
21	023-28141-003	*Fulcrum Lever; Stoker	1	
22	490-50007-102	*Solenoid; TDS-09SL-59A	1	
23	610-00022-003	*Damper; 2G50-C-10HG	1	
24	023-28376-205	*Bracket; Gear Shaft; M Loading	1	
25	612-10106-005	*Gear;M0.8X34X4	1	
26	612-10105-009	*Gear;M0.8X16X4	1	
	023-75144-053	*Load Pulse Motor Assy	1	
27	023-28196-100	**Bracket; Load Pulse Motor	1	
28	490-33015-100	**Motor; PM42L-048-ZVS6	1	
29	612-80019-002	**Gear;Mx0.5X89+M0.8X34	1	
30	612-80018-006	**Gear;M0.8X36+M0.8X18	2	
	023-75140-058	*Master Guide Assy (31-40)	1	
31	607-10006-000	**Metal;F6X8X4;10X1	6	
32	023-28057-100	**Cutter Guide Upper; A3	1	

[illegible]

Fig.24 Master-Removal Area (1)

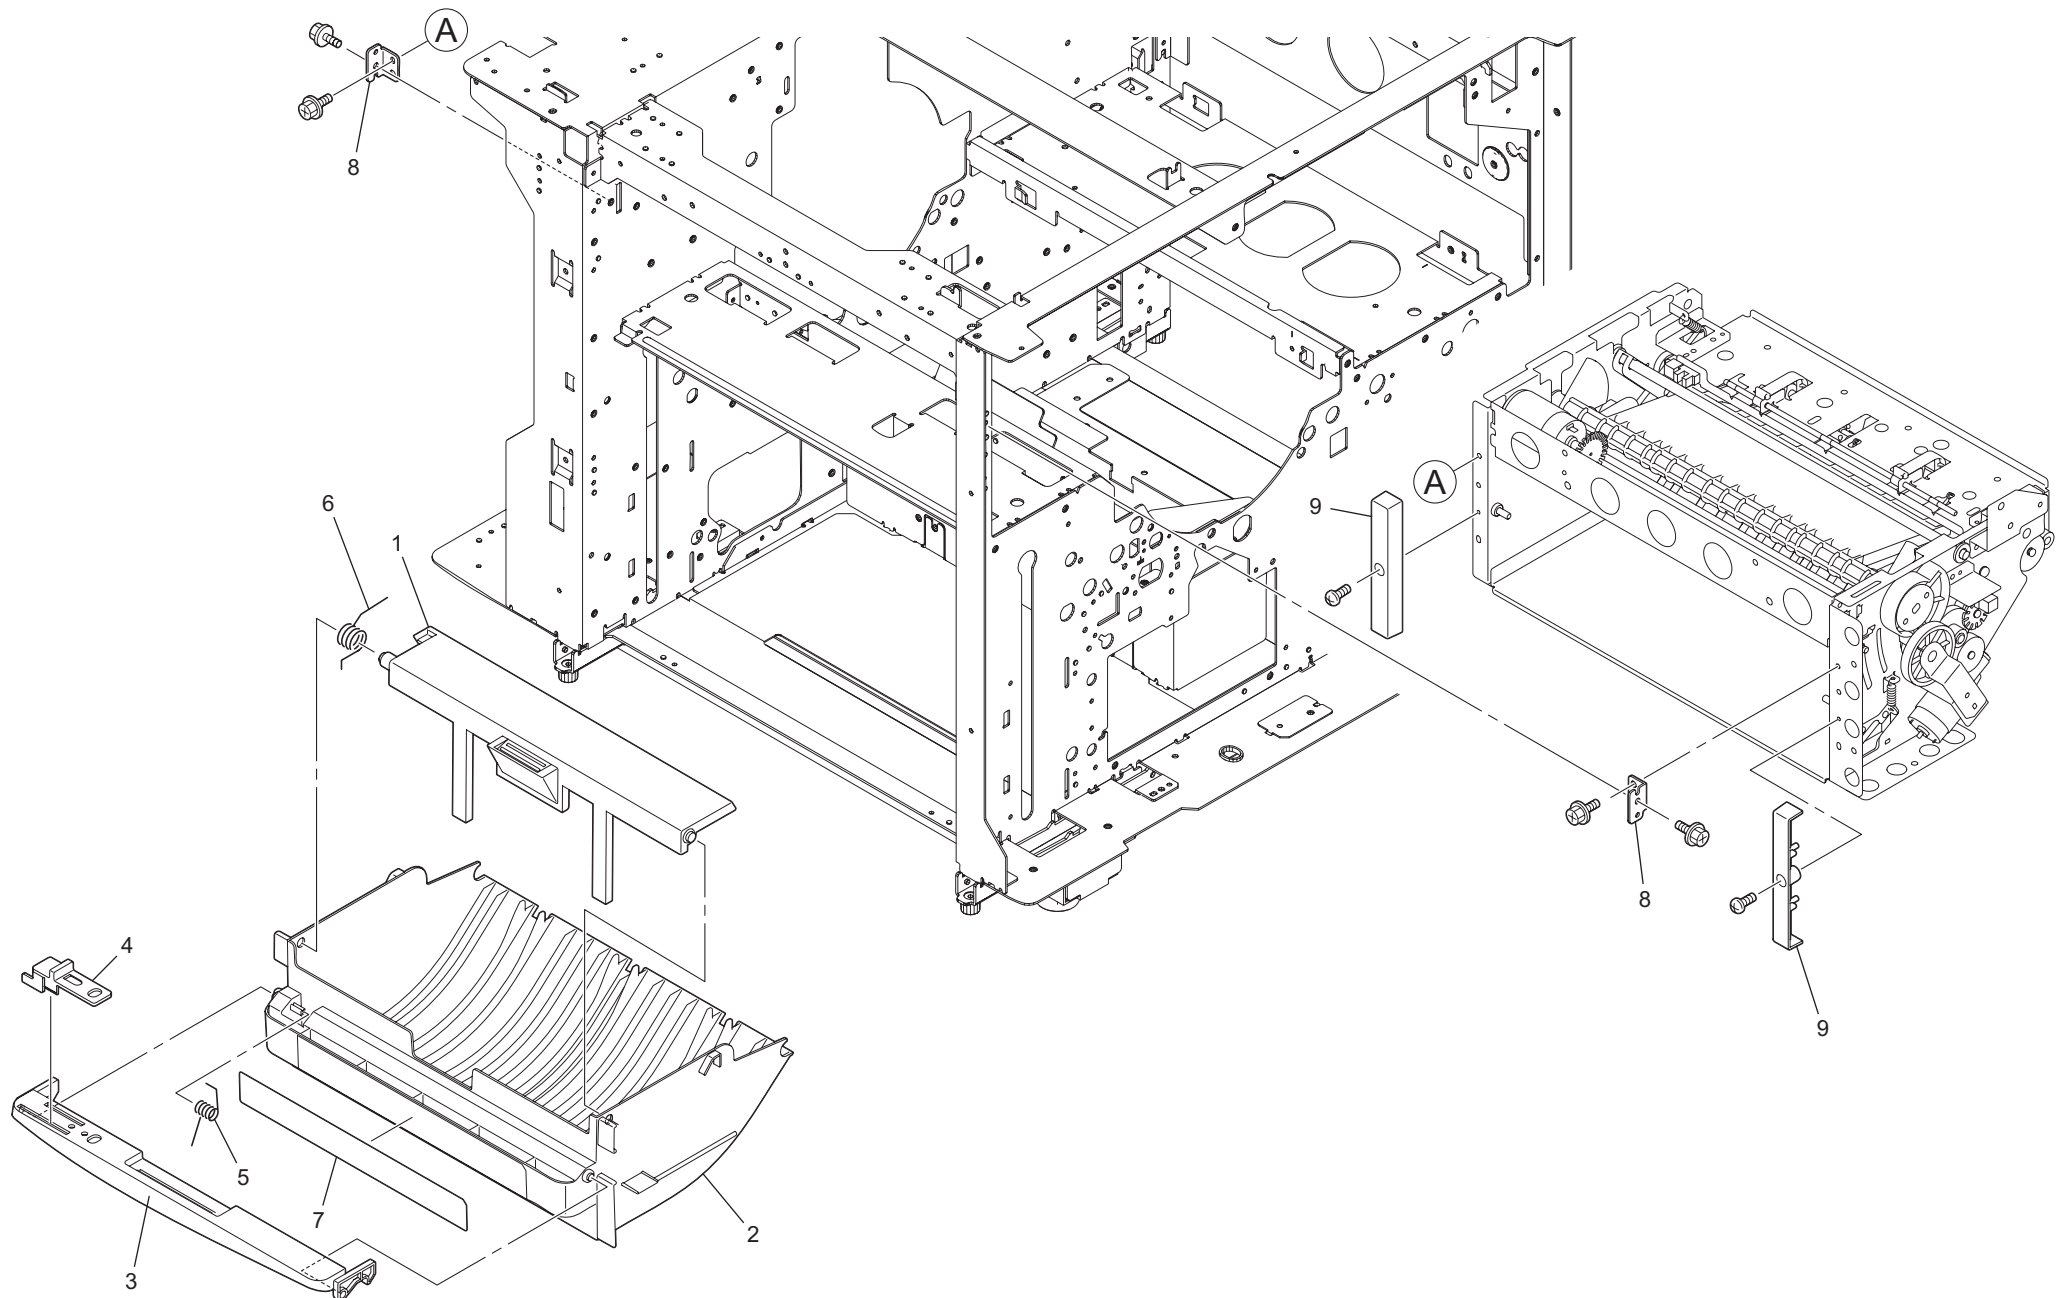


Fig 24. Master-Removal Area (1)

[illegible][illegible]

Fig.25 Master-Removal Area (2)


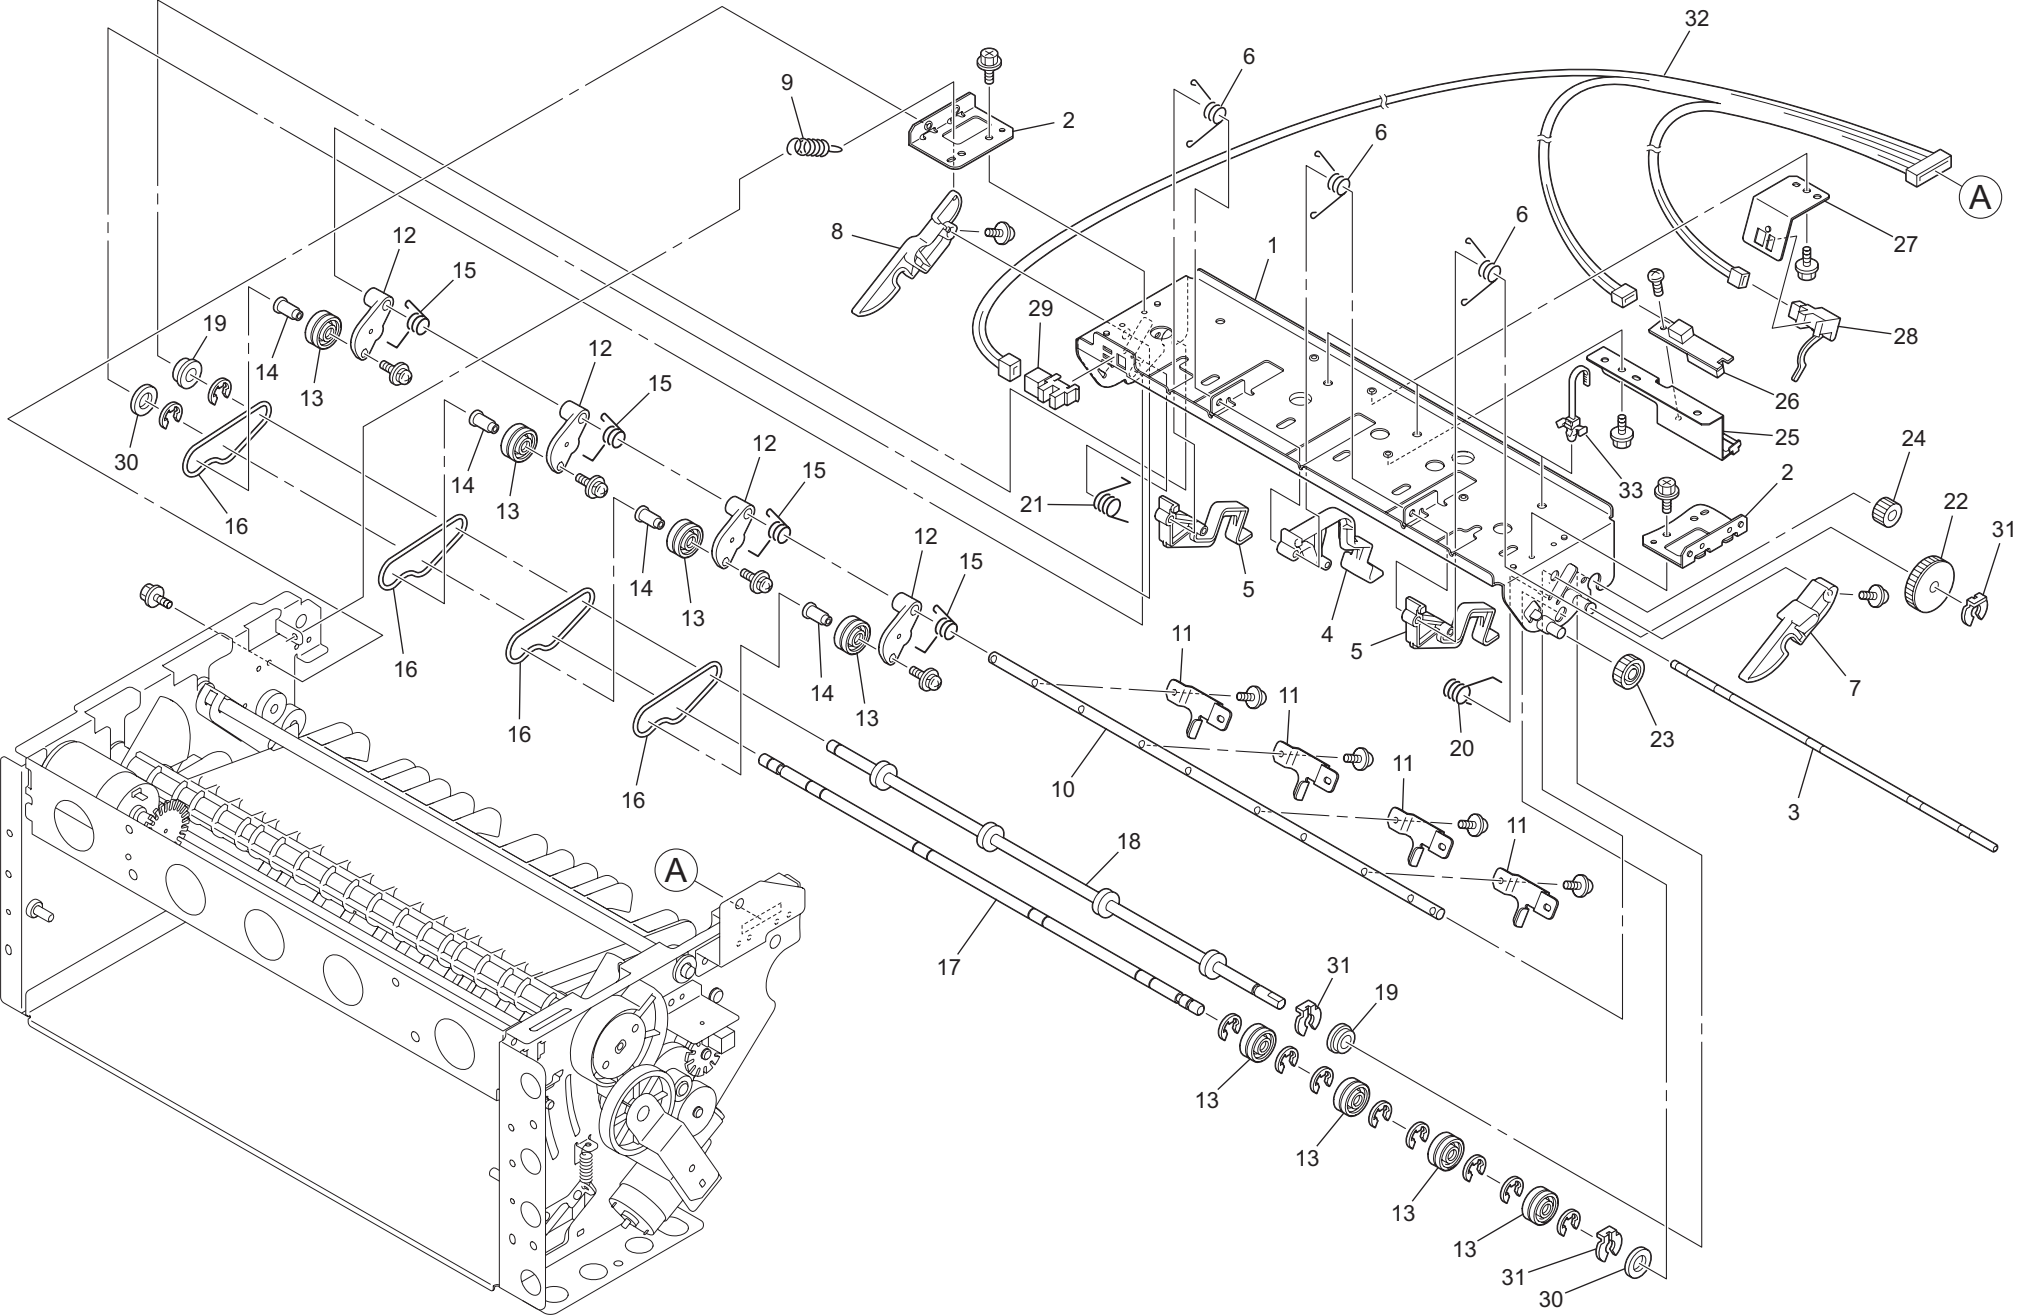


Fig 25. Master-Removal Area (2)

No.	Part No.	Part Name	Q'ty	Remark
	023-75135-259	Master Removal Unit (Fig25, Fig26)	1	
1	023-24021-305	*Housing; M.-Rmv.	1	
2	023-24128-002	*Bracket ; Housing; M.-RMV.	2	
3	023-24144-105	*Shaft; M-Rmv Guide	1	
4	023-24145-004	*M-Rmv Guide A	1	
5	023-24146-000	*M-Rmv Guide B	2	
6	023-24147-007	*Spring; M-Rmv Guide	3	
7	023-24130-007	*Hook F; M-Rmv Roller	1	
8	023-24131-003	*Hook R; M-Rmv Roller	1	
9	023-24137-001	*Spring Hook R; Trans. Roller; M-Rmv	1	
10	023-24066-104	*Shaft; Plate Pulley; M-Rmv	1	
11	023-24129-009	*Holding Plate; Pulley; M.-Rmv.	4	
12	023-24062-109	*Plate; M.-Rmv. Pulley	4	
13	023-24061-102	*Pulley; M-Rmv	8	
14	023-24063-300	*Shaft; Pulley; M-Rmv	4	
15	023-24067-003	*Spring; Plate Pulley; M-Rmv	4	
16	628-21401-009	*Transfer Belt 2; 2X140	4	
17	023-24057-105	*Master Removal Roller (UP)	1	
18	023-24025-300	*Pulley Shaft; M.-Rmv	1	
19	607-10009-000	*Metal; F6X10X6.5; 12X1.5	2	
20	023-24058-004	*Spring A Front; M-Rmv. Roller	1	
21	023-24059-000	*Spring A Rear; M-Rmv Roller	1	
22	612-10001-009	*Gear; M1.25X22	1	
23	612-10002-005	*Gear; M1.25X12	1	
24	612-10003-001	*Gear; M1.25X9	1	
25	023-24026-005	*Bracket Master Loading Sensor A3	1	
26	444-43007-200	*Master Loading Sensor	1	
27	023-24056-001	*Bracket; M.-RMV. Sensor	1	
28	444-41002-200	*Sensor; OS665633-703	1	
29	444-30008-100	*Sensor; LG-248NI1	1	
30	-	*Washer; D6	2	
31	023-17197-007	*Lock Ring 4	3	
32	023-24100-108	*Wire Harness; M-Rmv	1	
33	665-01212-009	Reuse Band ; RSG-130	3	

[illegible]


Fig.26 Master-Removal Area (3)

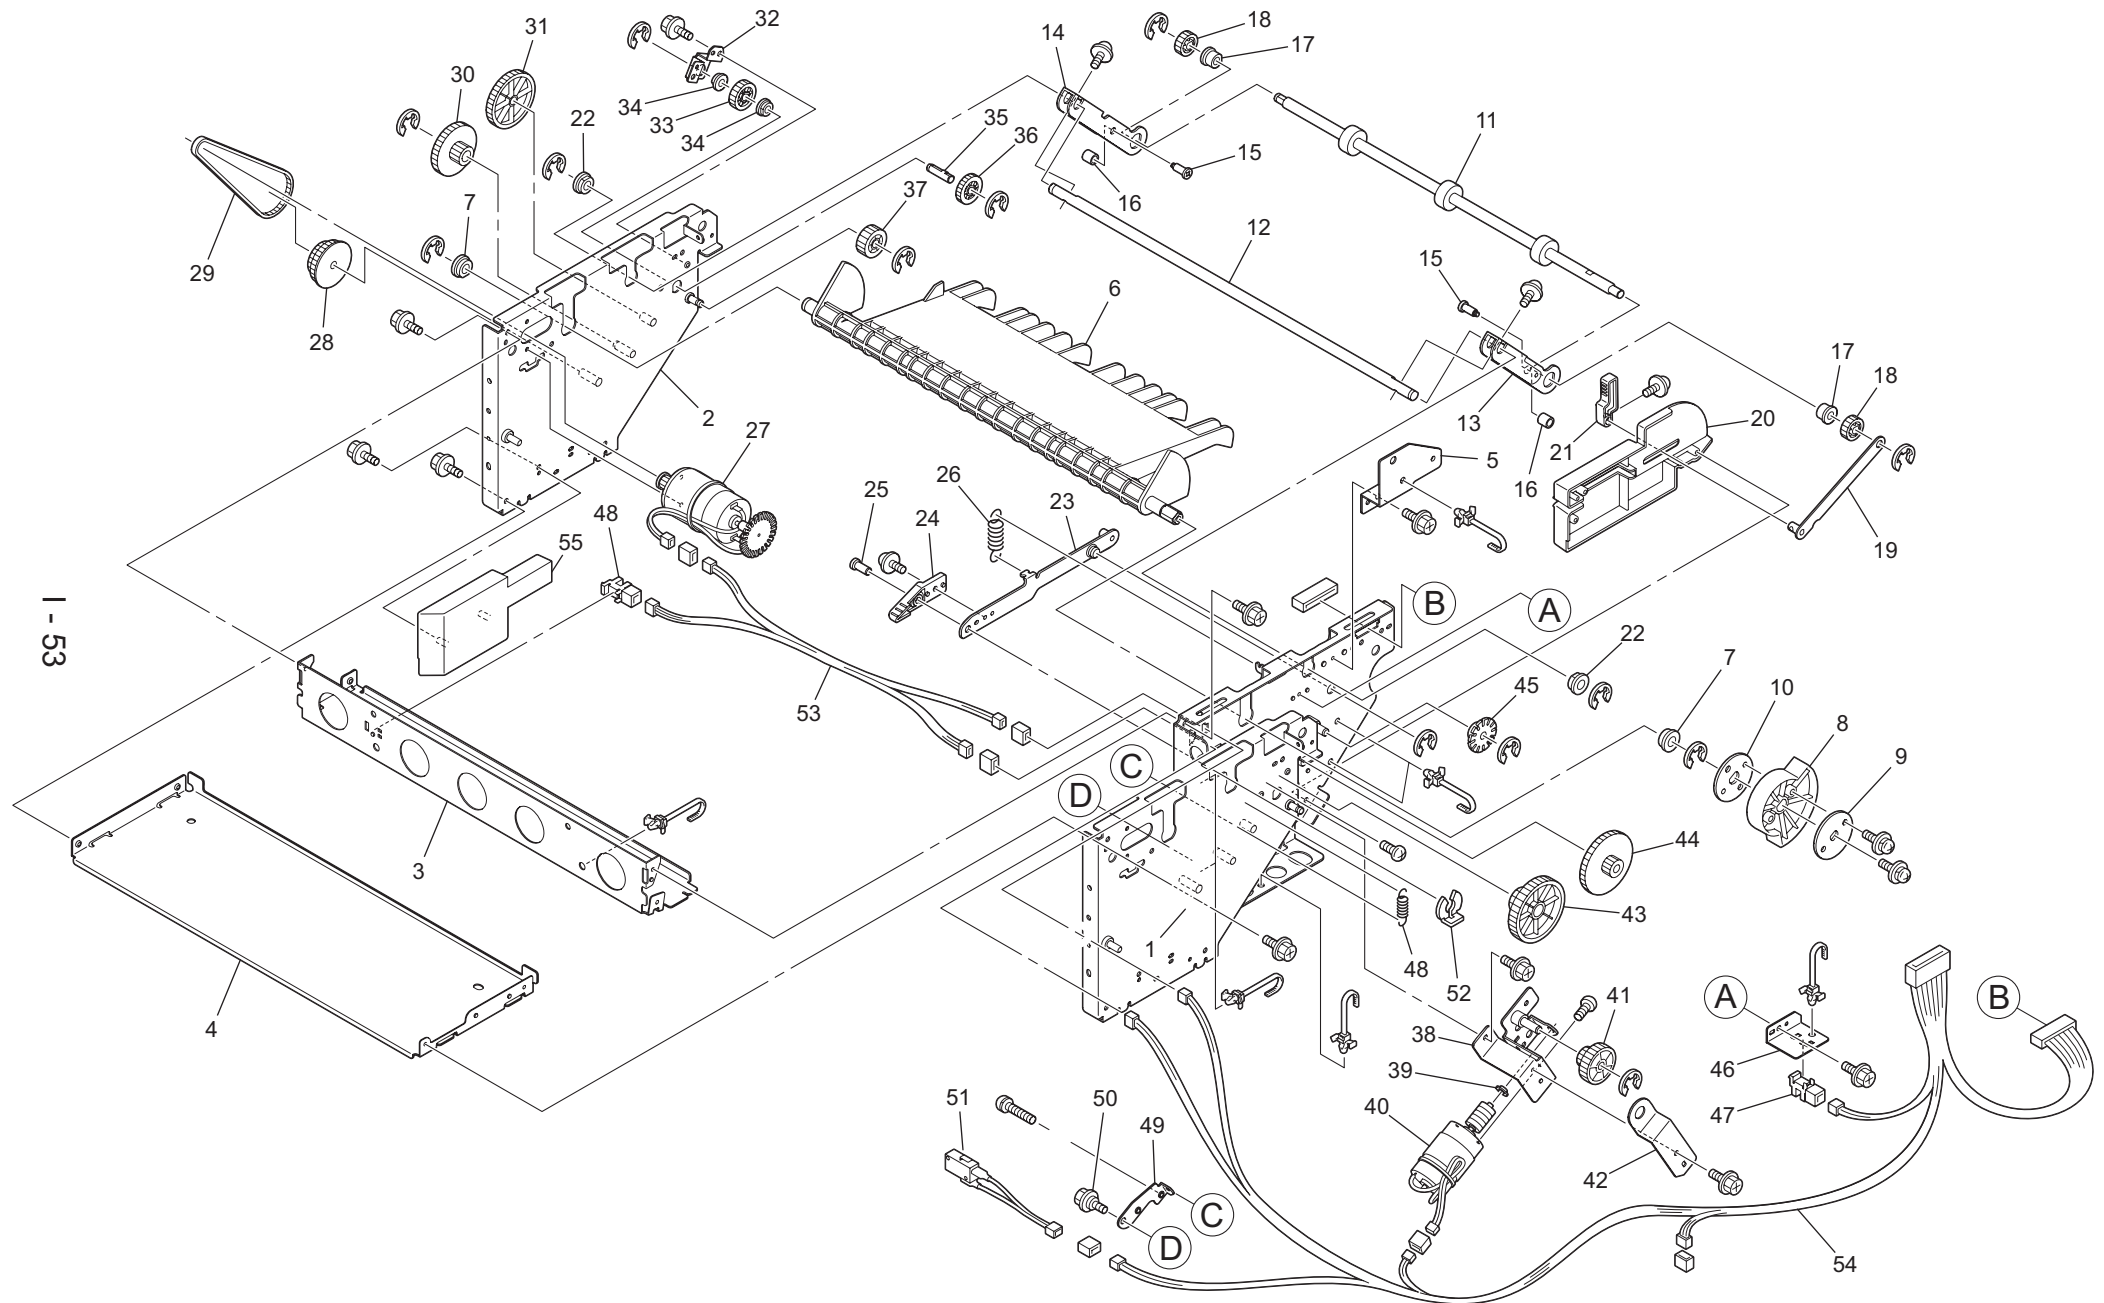

[illegible]

Fig. 27 Electrical Component Area (1)

I-55

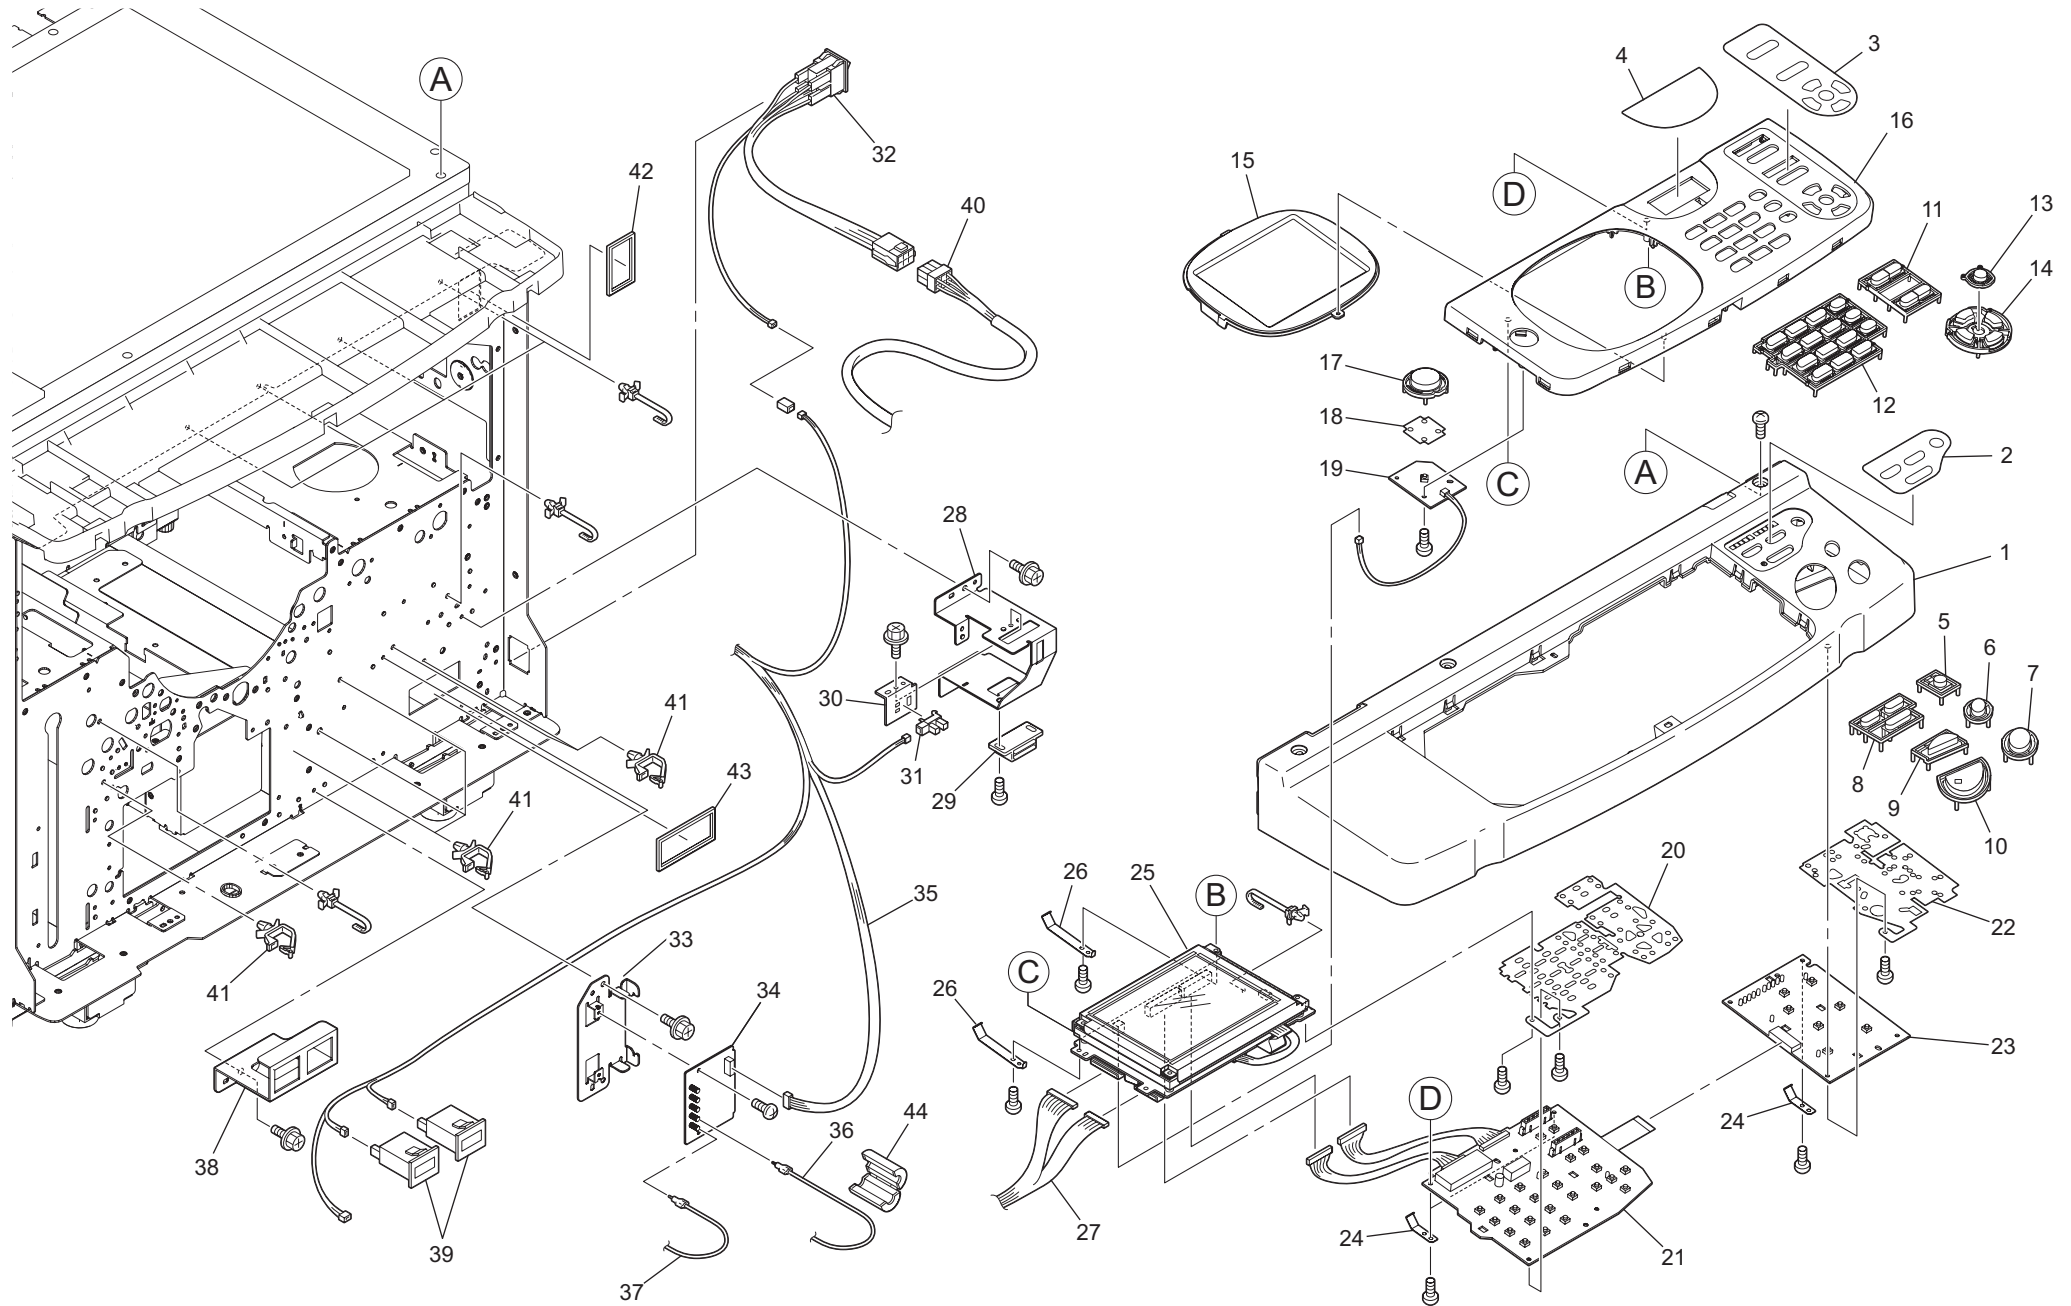

[illegible]

Fig.28 Electrical Component Area (2)

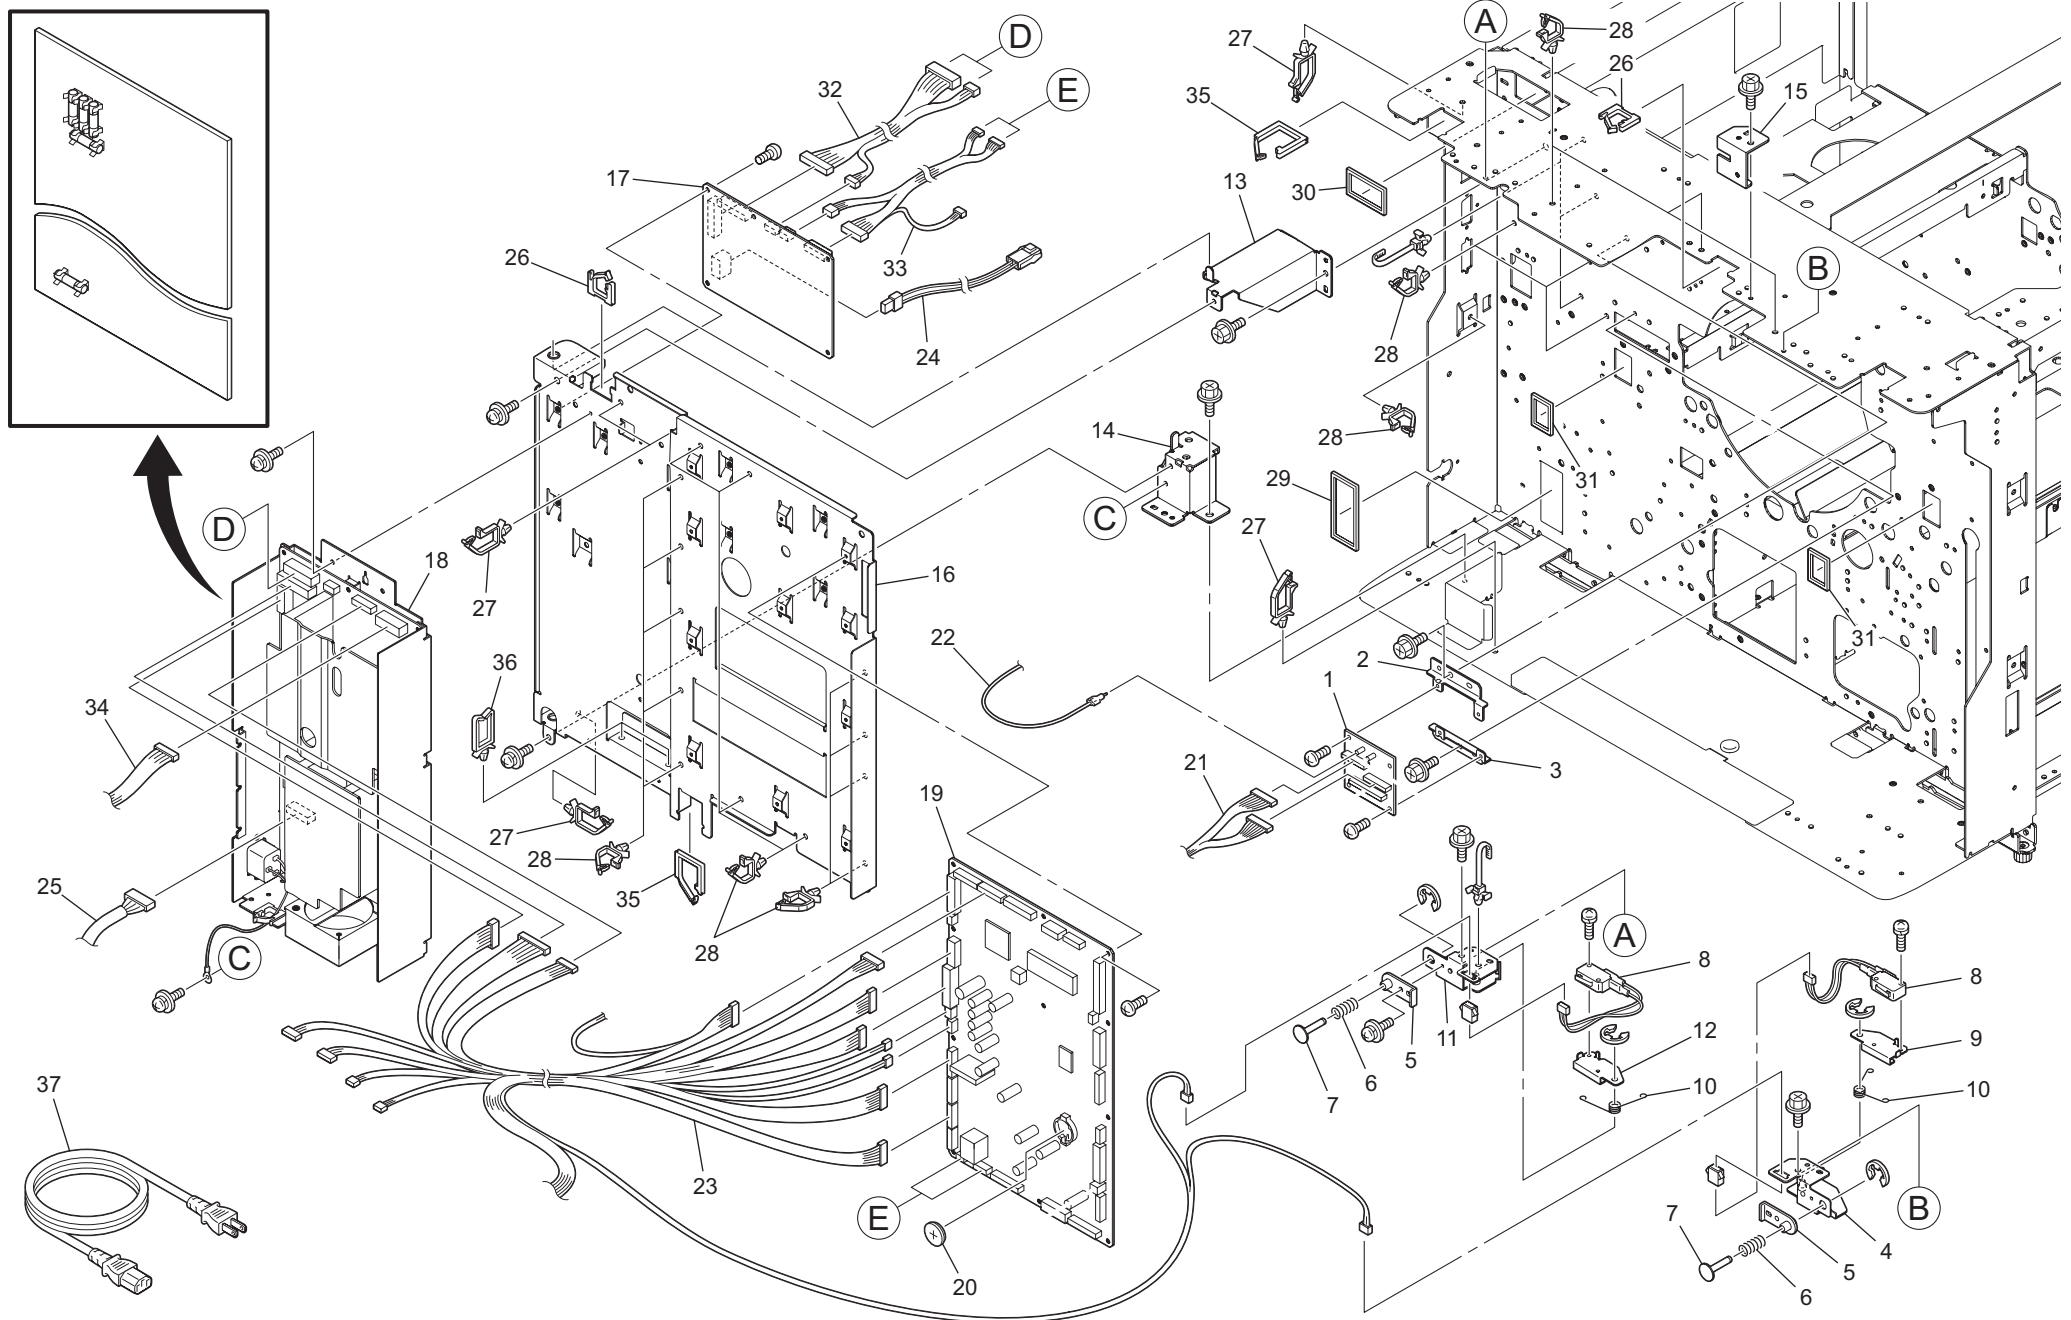


Fig 28. Electrical Component Area (2)

No.	Part No.	Part Name	Q'ty	Remark
1	023-28218-200	M.-Making Junction PCB	1	
2	023-28204-005	Bracket Upper; Junction PCB; M.-M.	1	
3	023-28221-007	Bracket Lower; Junction PCB; M.-M.	1	
4	023-50044-100	Frame; Drive Interlock SW; P.-F. Side	1	
5	023-50042-000	Shaft Bracket; Drive Interlock SW	2	
6	023-50041-004	Spring; Drive Interlock SW	2	
7	023-50055-102	Button; Drive Interlock SW	2	
8	023-53026-006	Drive Interlock Safety SW	2	
9	023-50052-103	Bracket Pf Side; Drive Interlock SW	1	
10	023-50053-002	Spring; SW Bracket; D Interlock SW	2	
11	023-50043-104	Frame; Drive Interlock SW; P.-Rcv. Side	1	
12	023-50051-107	Bracket P-Rcv Side; Drive Interlock SW	1	
13	045-50013-008	Hinge Upper; PCB Bracket	1	
14	045-50014-004	Hinge Lower; PCB Bracket	1	
15	045-50015-000	Bracket Upper; Power Supply PCB	1	
16	045-50020-004	Bracket; Power Supply & Mech PCB	1	
17	045-50002-103	M.-Motor Drive PCB	1	
18	045-50005-200	Power Supply; 17-HWW	1	
19	045-75280-051	Mech.-Control PCB; SU	1	
20	408-02300-001	Battery;CR-2032	1	
21	045-53006-002	Wire Harness; Paper Ejection Rear	1	
22	023-53003-006	Wire Harness; Master Rf-Tag	1	
23	045-53001-000	Wire Harness; FB Upper	1	
24	045-53009-001	Junction Wire Harness; M.-Motor	1	
25	045-50031-006	Wire Harness; Main Power SW	1	
26	665-00308-002	Edging Saddle; LES-25L	2	
27	665-02055-004	Wire Saddle; LWS-2218	5	
28	665-02043-006	Wire Saddle;LWS-1316	20	
29	665-04055-001	SB-6025	1	
30	665-04002-005	Square Bushing; SB4025	1	
31	665-04054-005	Square Bushing;Sb-2718	2	
32	045-53010-000	Wire Harness; M.-Drive Power	1	
33	045-53011-006	Wire Harness; Mech. CTL Drive	1	
34	045-53002-104	Wire Harness; TPH Drawer Connector H	1	

[illegible]

Fig.29 Electrical Component Area (3)

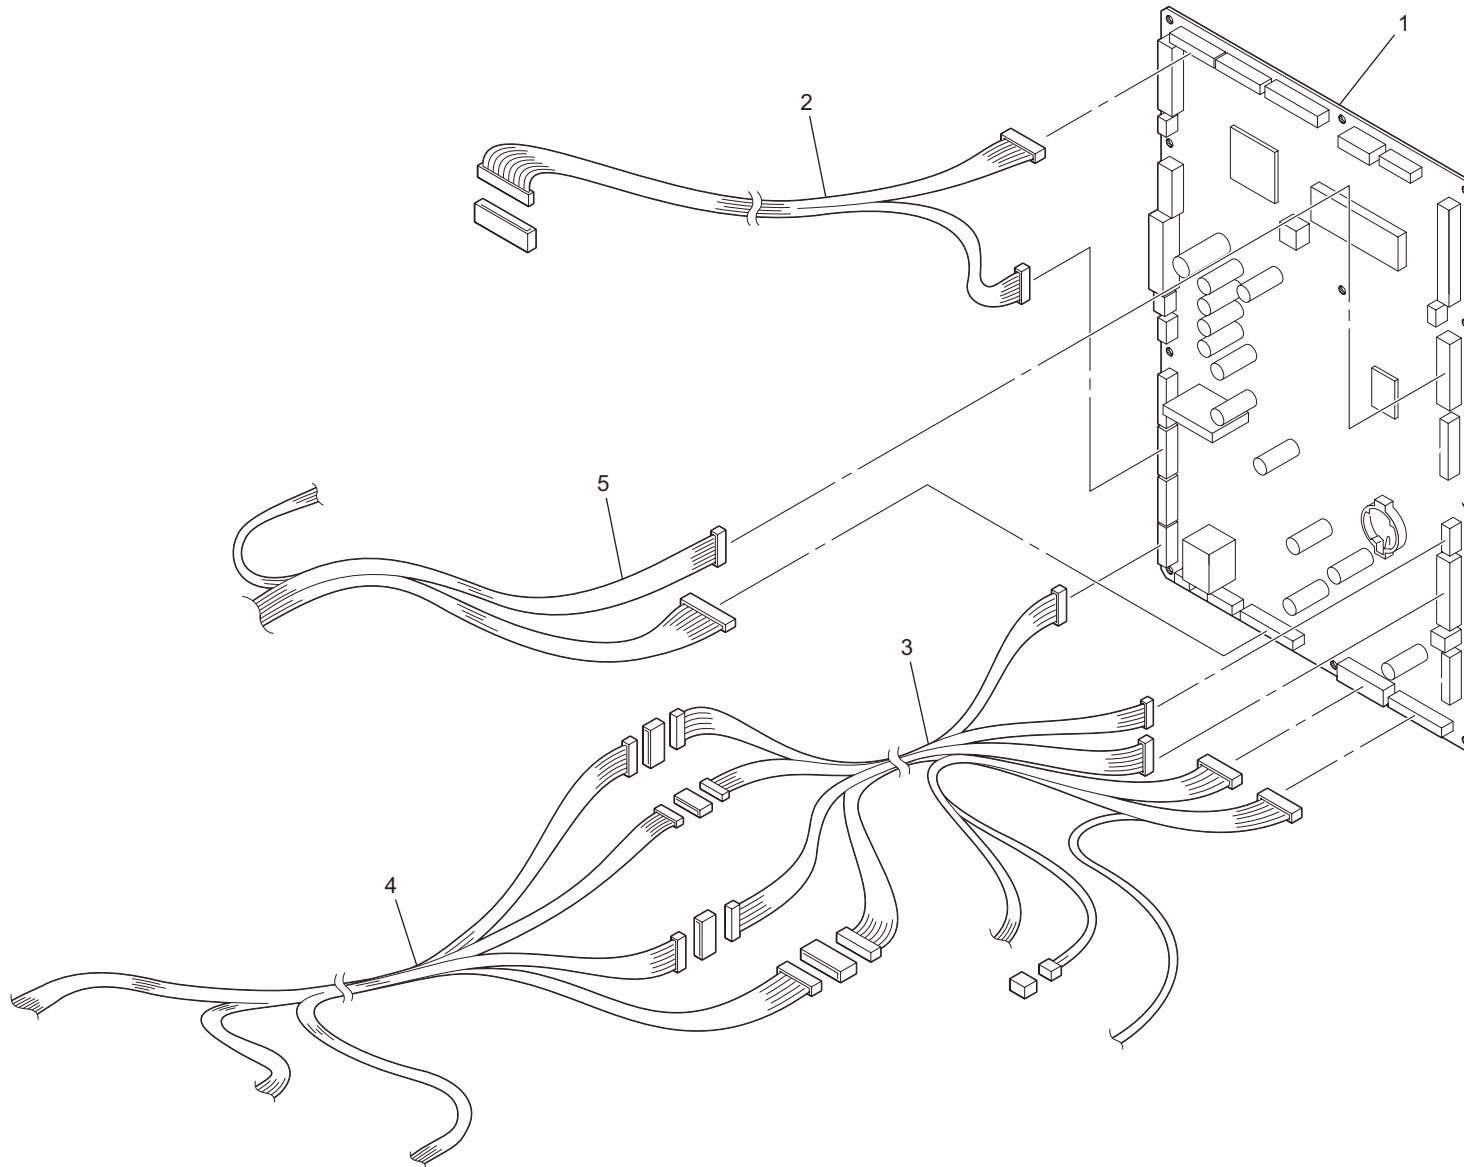


Fig 29. Electrical Component Area (3)

[illegible][illegible]

Fig.30 Electrical Component Area (4)

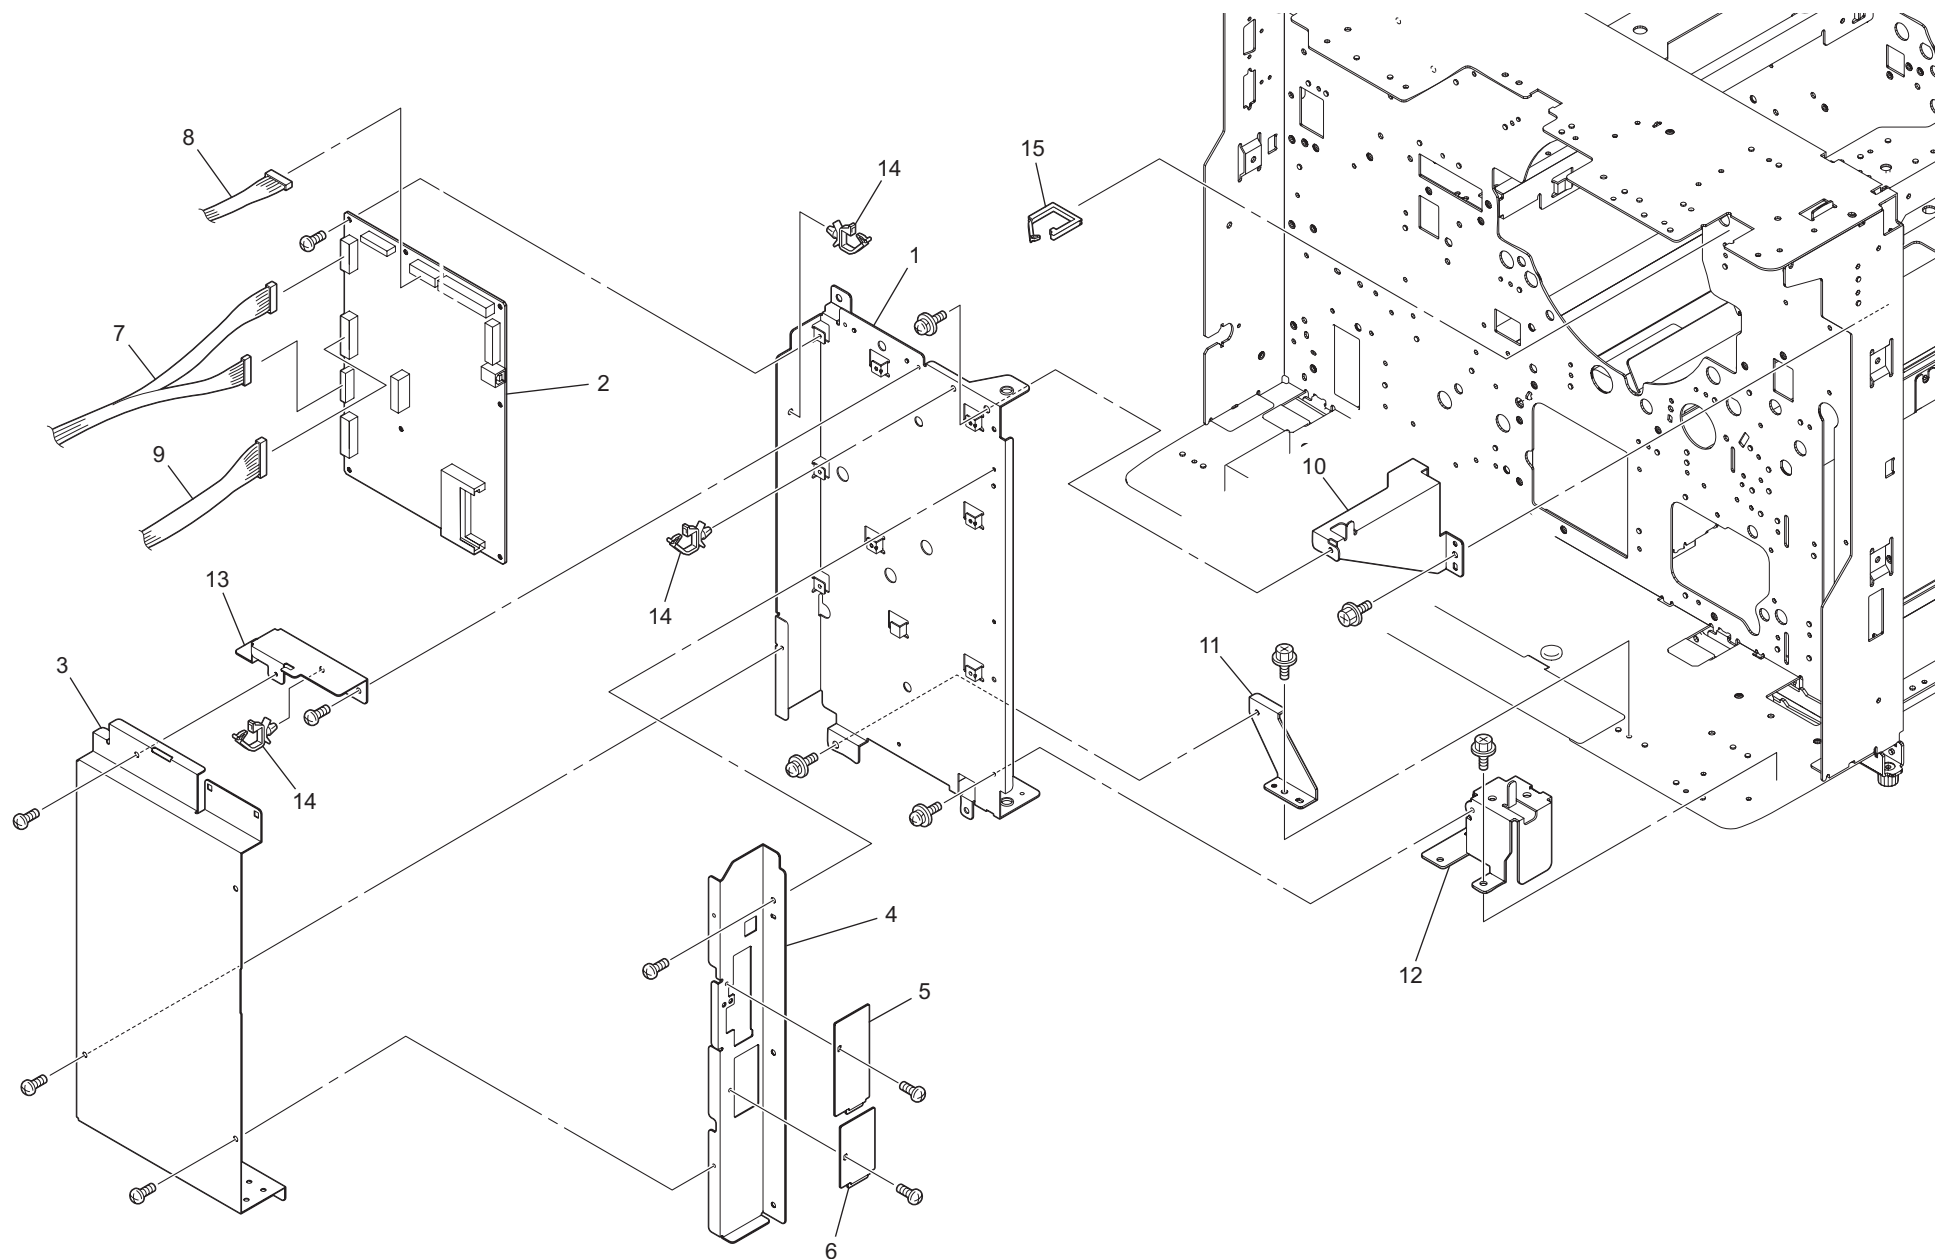


Fig 30. Electrical Component Area (4)

[illegible][illegible]

Fig.31 Stage Cover Area


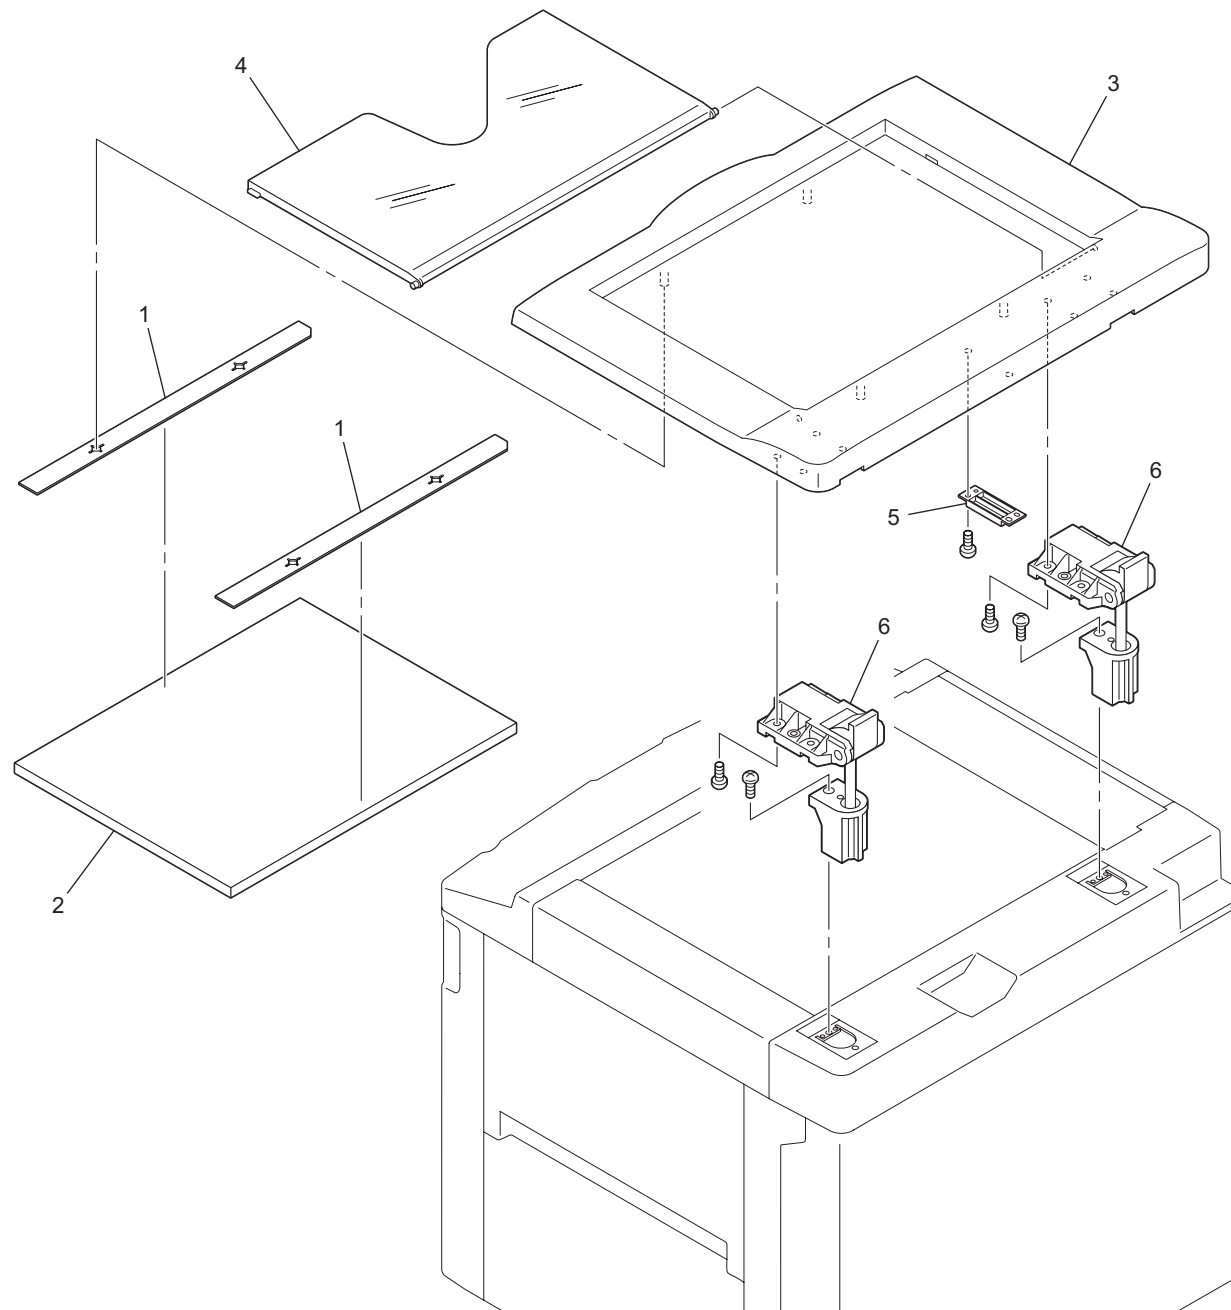


Fig 31. Stage Cover Area

[illegible][illegible]

Fig.32 Exterior Cover Area

1-65

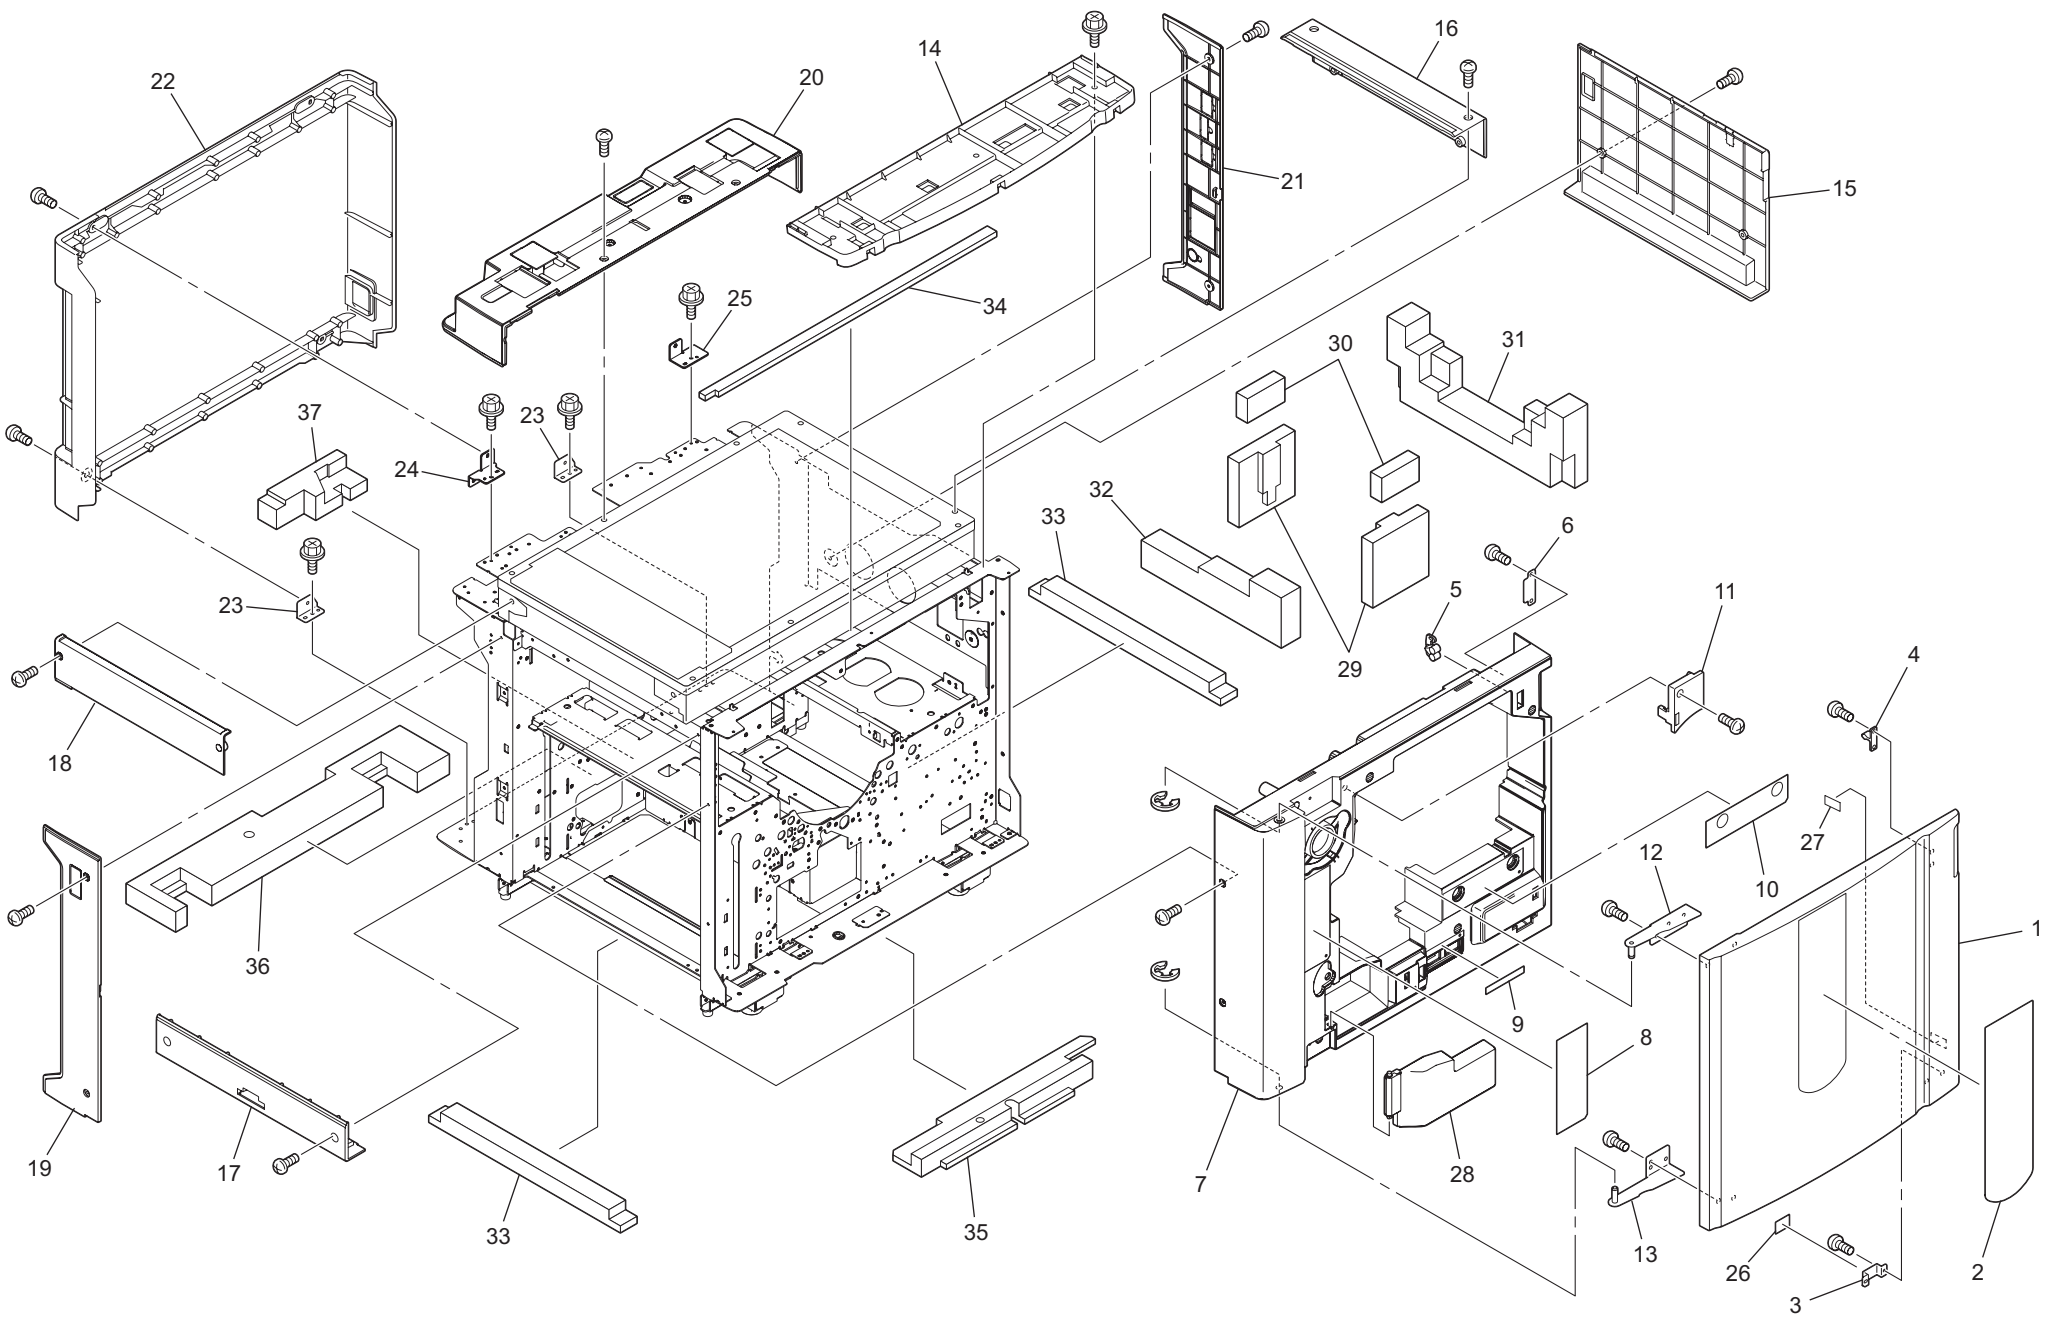

[illegible]

Fig.33 Auto Control Stacking Tray (1)

I - 67

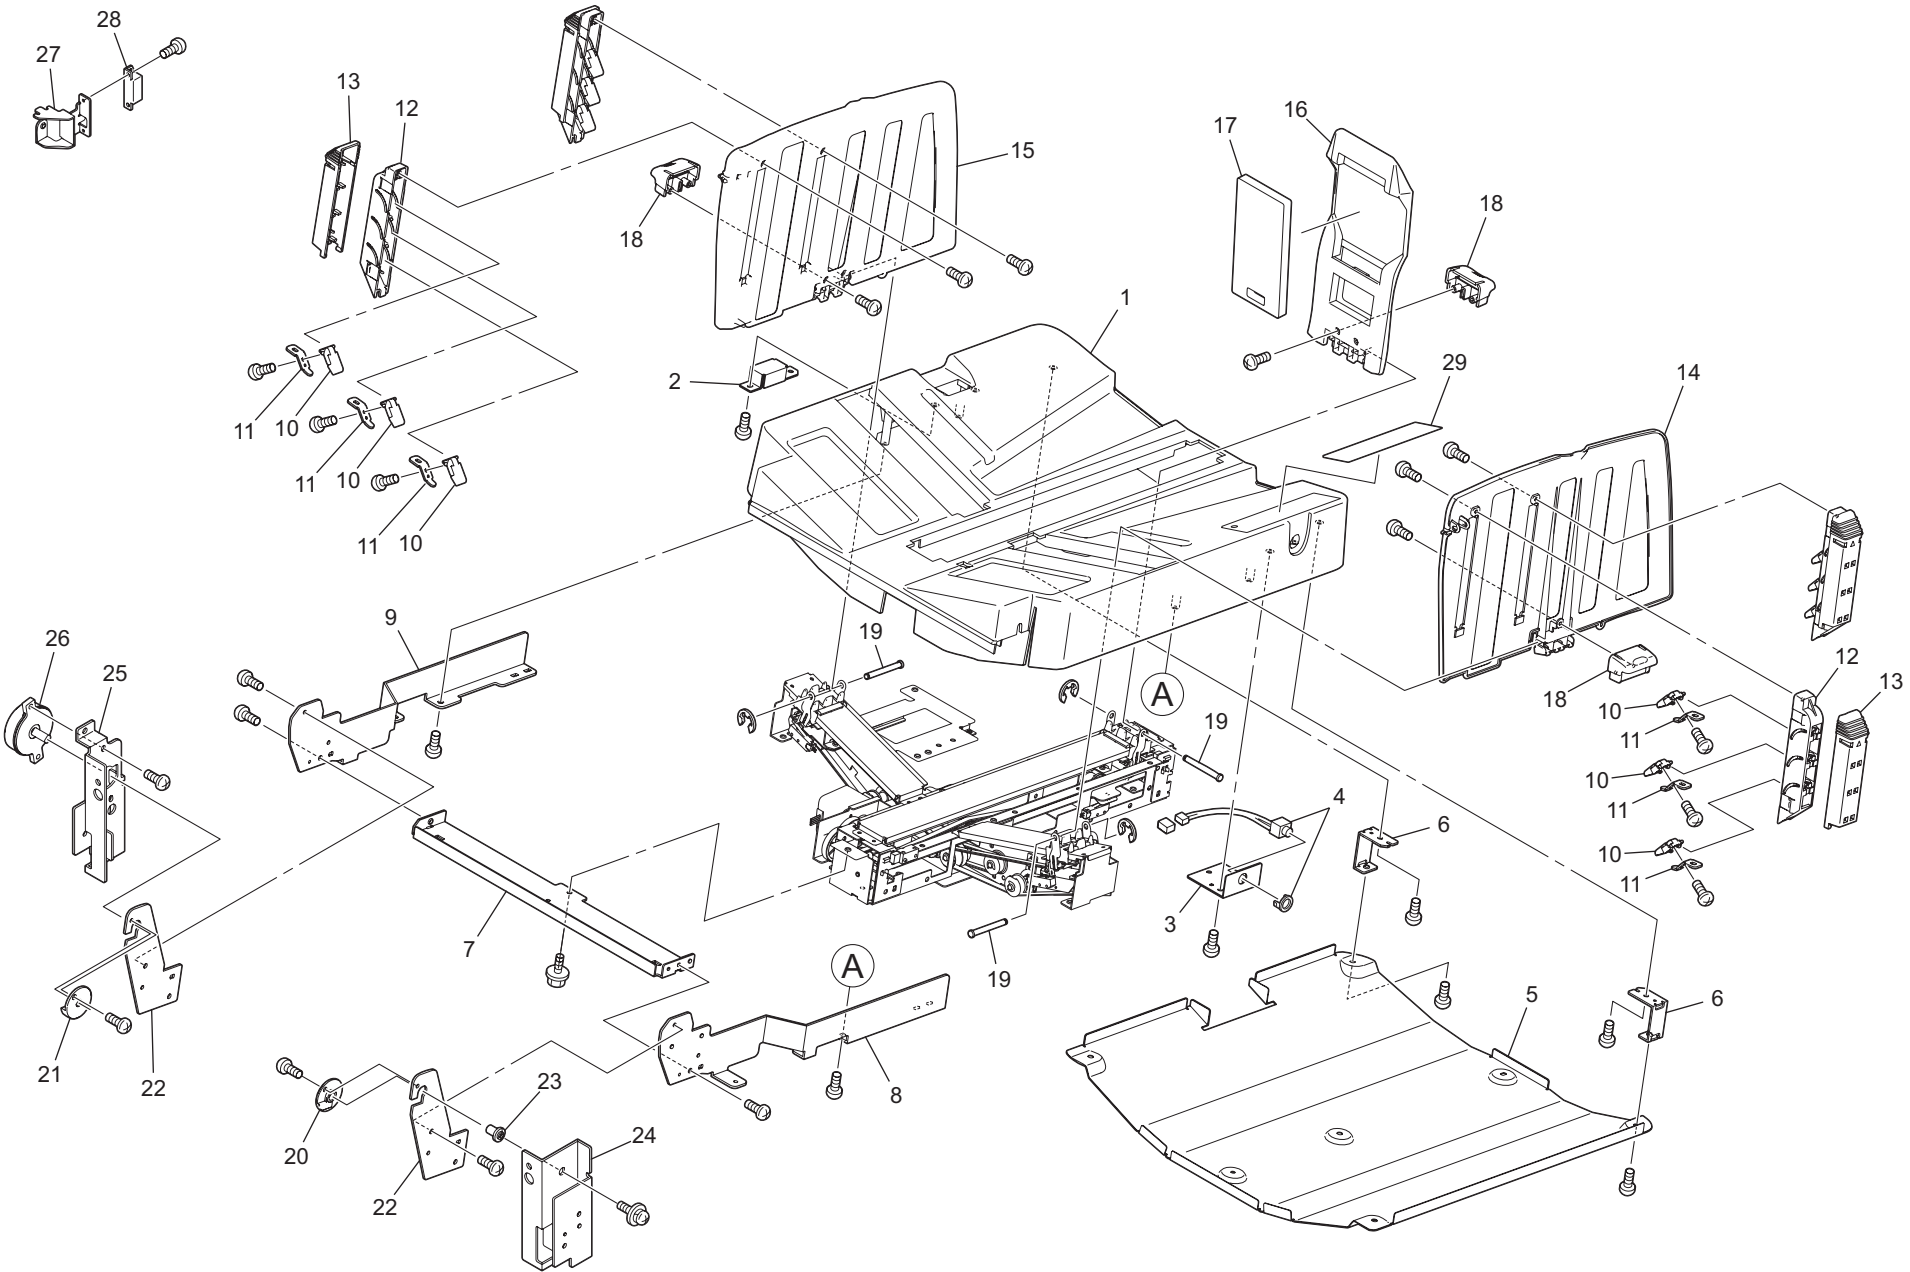


Fig 33. Auto Control Stacking Tray (1)

No.	Part No.	Part Name	Q'ty	Remark
1	045-22001-002	Paper Receiving Tray; AS	1	
2	045-22026-005	Plate; Catch	1	
3	030-22061-002	Bracket; SW	1	
4	021-51030-109	Push Button SW Assy	1	
5	045-22027-001	Cover; AS Lower	1	
6	045-22035-004	Bracket; AS Lower Cover	2	
7	045-22001-002	Frame M; AS Tray	1	
8	045-22003-001	Frame F; AS Tray	1	
9	045-22005-008	Frame R; AS Tary	1	
	023-75147-052	Flap; P.-Rcv.-T. Assy	4	
10	023-21612-108	*Flap; P.-Rcv.-T.	12	
11	023-21613-007	*Balancer; Flap; P.-RCV.-T.	12	
12	023-21615-204	*Holder; Flap; P.Rcv.-T.	4	
13	023-21614-003	*Flap Cover; P.-Rcv.-T.	4	
14	023-21606-205	Paper Guide F; P.-Rcv.-T.	1	
15	023-21607-201	Paper Guide R; P.-Rcv.-T.	1	
16	023-21608-003	Back Stopper; P.-RCV.-T	1	
17	018-33151-203	Fence Cushion	1	
18	023-21621-000	Lever; Paper Guide; P.-Rcv.-T.	3	
19	023-21634-004	Shaft; Fence	3	
20	030-22043-101	Lock Plate F; AS Tray	1	
21	030-22044-108	Lock Plate R; AS Tray	1	
22	045-22034-008	AS Tray Arm; RZ	2	
23	045-22043-007	Boss; AS Tray	1	
24	045-22031-009	Support Bracket F; AS Tary	1	
25	045-22029-004	Support Bracket R; AS Tary	1	
26	610-00015-007	Damper; AS Tray	1	
27	045-22028-008	Bracket; Magnet Catch	1	
28	660-05107-106	Magnet Catch; CA-0147B	1	
29	045-22801-009	Seal; AS Operation Pic.	1	

[illegible]

Fig.34 Auto Control Stacking Tray (2)

69 - I

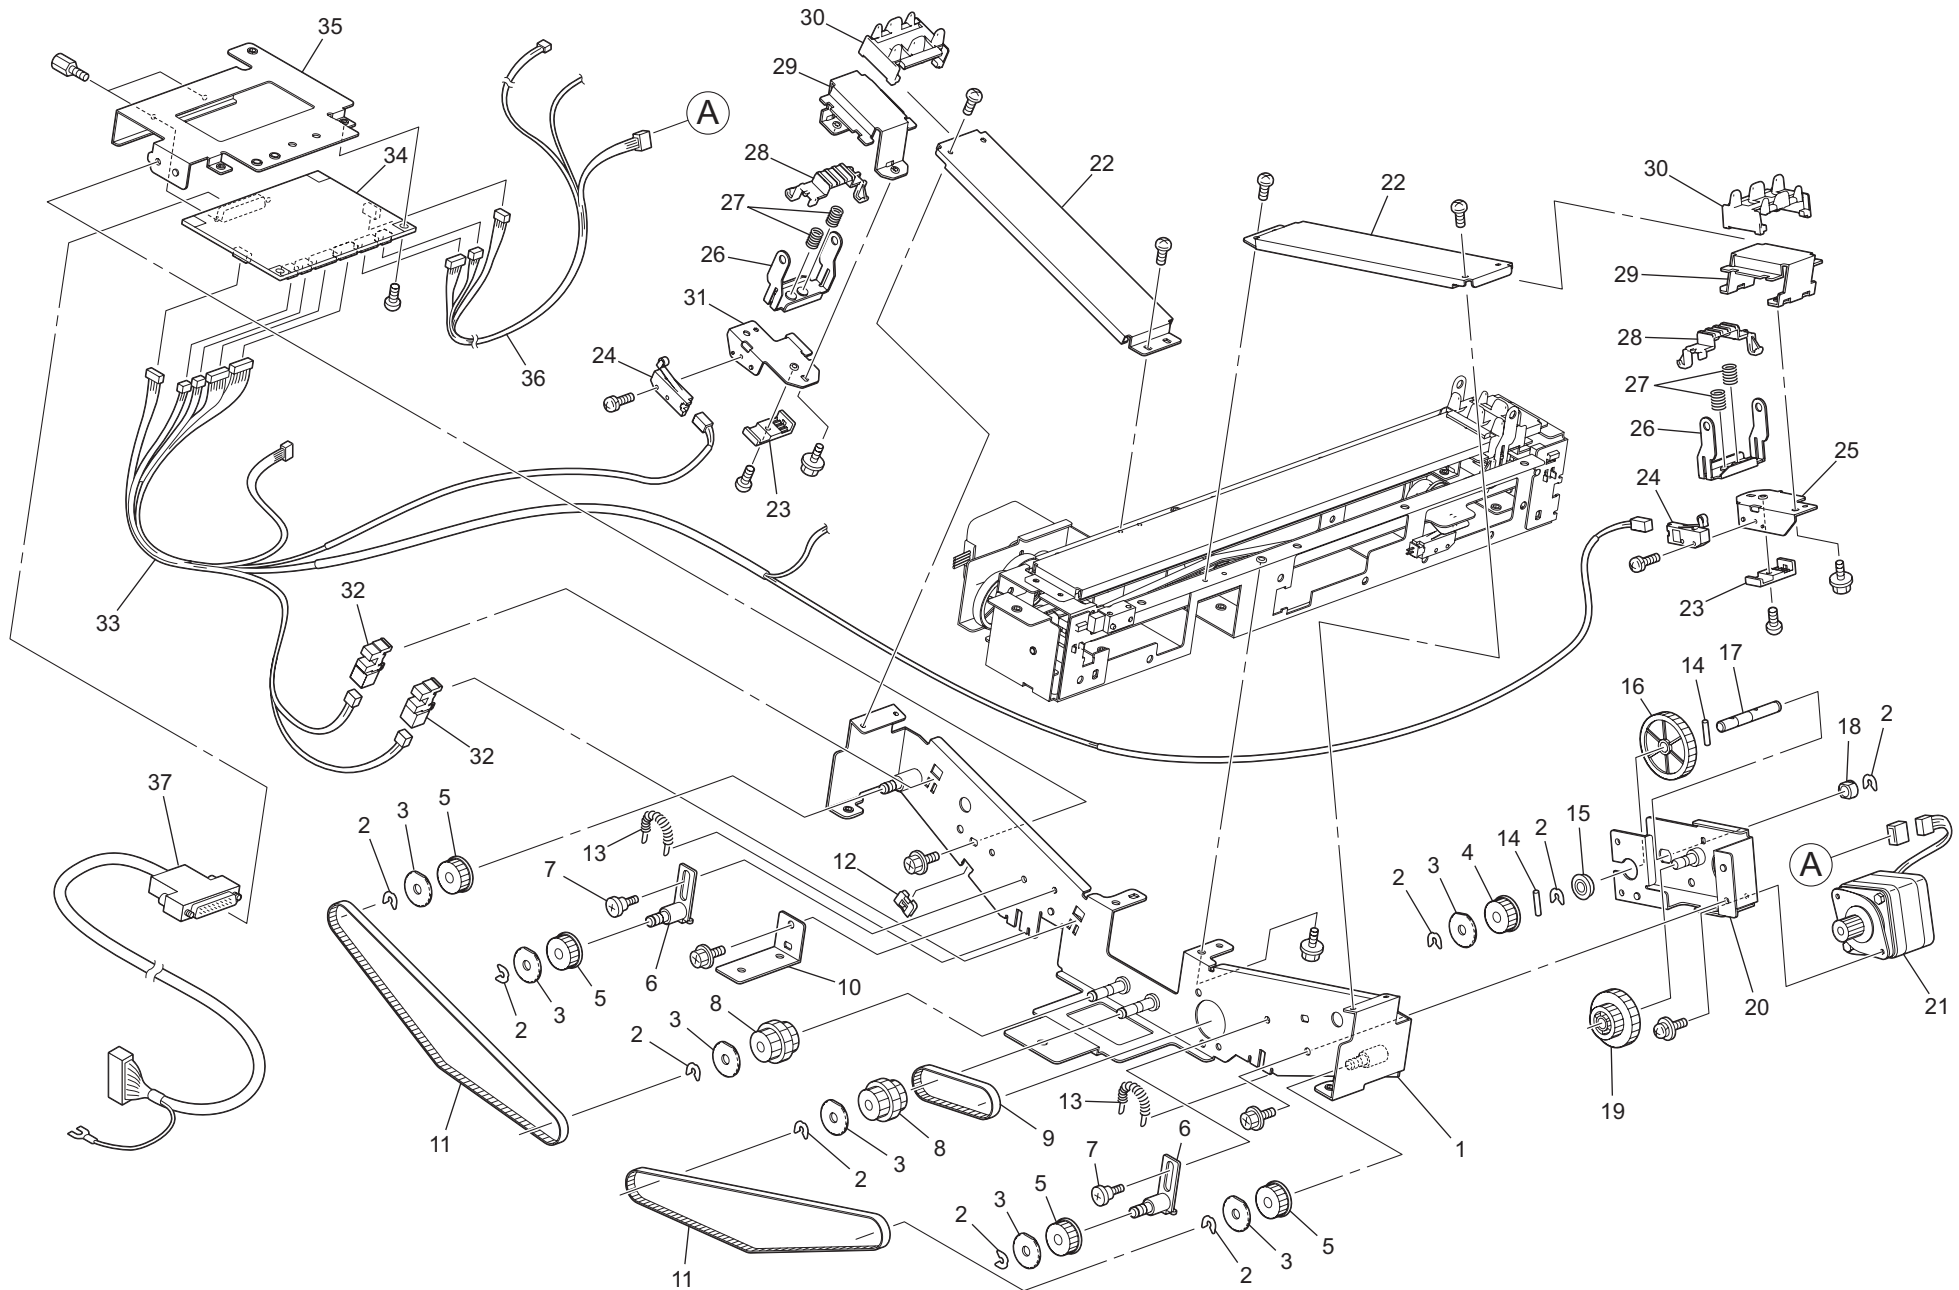


Fig 34. Auto Control Stacking Tray (2)

No.	Part No.	Part Name	Q'ty	Remark
1	045-22032-005	Frame; Side Fence	1	
2	634-00003-000	Lock Ring; JRE4	9	
3	030-22007-008	Flange	7	
4	030-22002-006	Pulley; 2	1	
5	030-22058-001	Pulley; 5	4	
6	030-22008-004	Tension Plate	2	
7	030-22029-001	Stepped Screw; M4X6	2	
8	030-22004-106	Pulley; 4	2	
9	620-00004-001	Belt; 60S3M150	1	
10	030-22030-107	Bracket; Harness Clamp	1	
11	620-00019-008	Belt; 60S3M438	2	
12	665-04061-001	Edging Saddle; ES-0505-2	1	
13	030-22031-006	Tension Spring; Side	2	
14	X-520	Pin; 2X12	2	
15	609-00003-008	Bearing; TPF-613ZZ-5	1	
16	030-22017-003	Gear; 2 Side	1	
17	030-22088-008	Shaft5; Side	1	
18	030-22073-000	Metal; 1	1	
19	030-22015-000	Gear; 1 Side	1	
20	030-22086-005	Gear Box; Side	1	
21	490-33013-204	17PM-K046-G1ST	1	
22	045-22022-000	Rail; Side Fence	2	
23	030-22006-001	Clamp; Belt	2	
24	444-12000-002	D3M-01L2-3	2	
25	045-22020-007	Belt Slider F; AS	1	
26	045-22012-004	Slide Base; AS	2	
27	045-22013-000	Spring; AS Slide Base	4	
28	045-22014-007	Slide Plate L; AS	2	
29	045-22021-003	Rail Slider; AS	2	
30	045-22010-001	Slide Plate U; AS	2	
31	045-22023-006	Belt Slider R; AS	1	
32	444-30006-000	EE-SX1235A-P2	2	
33	045-22202-008	Wire Harness; AF 1	1	

[illegible]

Fig.35 Auto Control Stacking Tray (3)

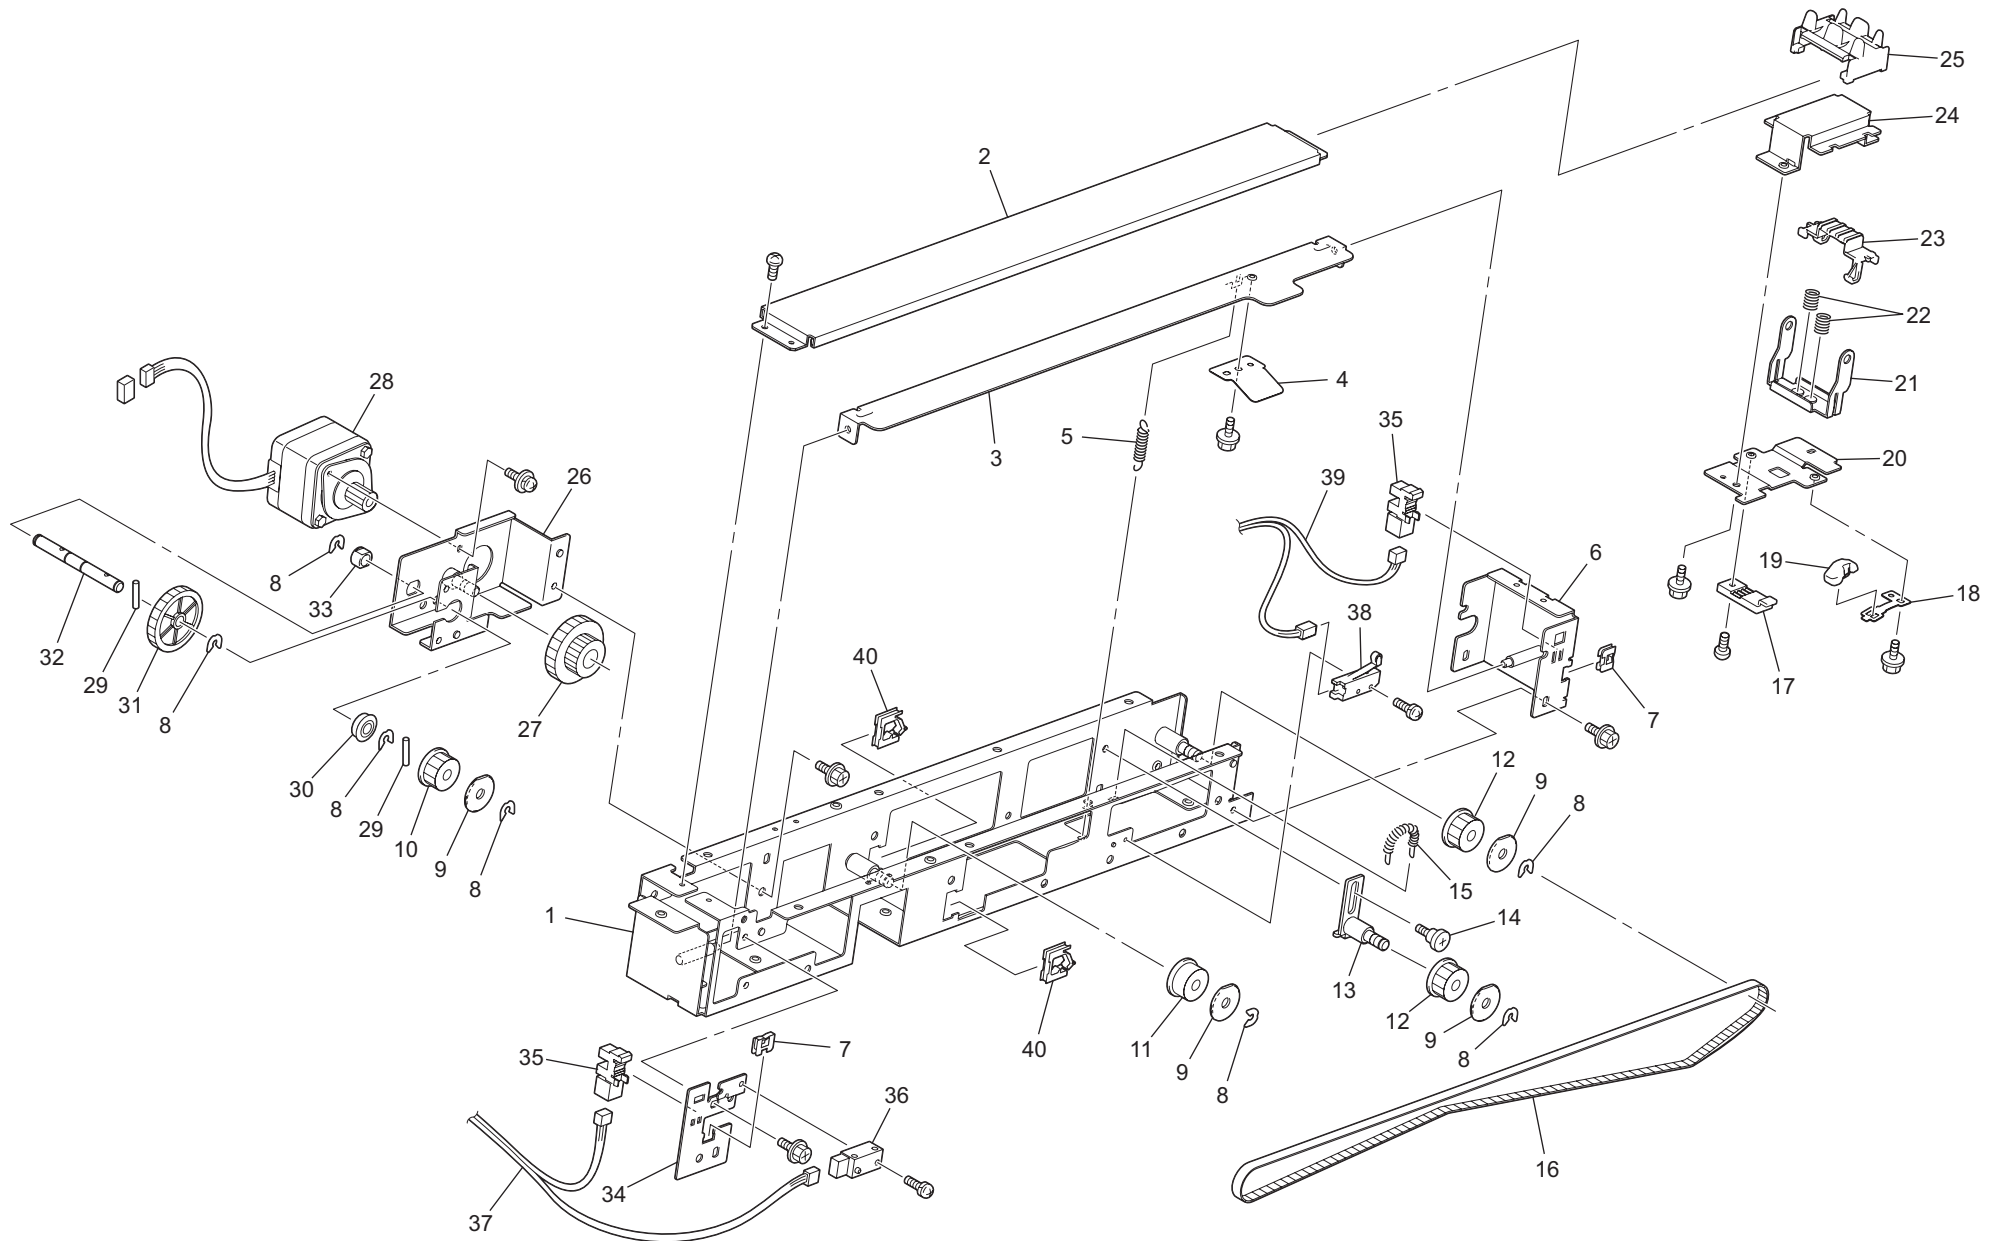


Fig 35. Auto Control Stacking Tray (3)

No.	Part No.	Part Name	Q'ty	Remark
1	030-22067-205	Frame; End Fence	1	
2	045-22006-004	Rail; End Fence	1	
3	030-22039-007	Actuator; Fence SW	1	
4	030-22048-006	Plate; Actuator	1	
5	030-22027-009	Spring; End SW	1	
6	045-22015-003	End Fence Bracket	1	
7	665-04061-001	Edging Saddle; ES-0505-2	2	
8	634-00003-000	Lock Ring; JRE4	7	
9	030-22007-008	Flange	4	
10	030-22002-006	Pulley; 2	1	
11	030-22003-002	Pulley; 3	1	
12	030-22058-001	Pulley; 5	2	
13	030-22008-004	Tension Plate	1	
14	030-22029-001	Stepped Screw; M4X6	1	
15	030-22031-006	Spring; Tension Plate	1	
16	620-00008-007	Belt; 60S3M825	1	
17	030-22022-007	Clamp; Belt; End	1	
18	045-22007-000	Actuator; SW Cam	1	
19	045-22009-003	SW Cam; AS	1	
20	045-22008-007	Belt Slider M; AS	1	
21	045-22012-004	Slide Base; AS	1	
22	045-22013-000	Spring; AS Slide Base	2	
23	045-22014-007	Slide Plate L; AS	1	
24	045-22011-008	Rail Slider M; AS	1	
25	045-22010-001	Slide Plate U; AS	1	
26	030-22070-001	Gear Box; End	1	
27	030-22014-004	Gear; 1 End	1	
28	490-33013-204	17PM-K046-G1ST	1	
29	X-520	Pin; 2X12	2	
30	609-00003-008	TPF-613ZZ-5	1	
31	030-22016-007	Gear; 2 End	1	
32	030-22012-001	Shaft; 5 End	1	
33	030-22073-000	Metal; 1	1	

[illegible]

Fig.36 Multi Tray Paper Feeder (1)

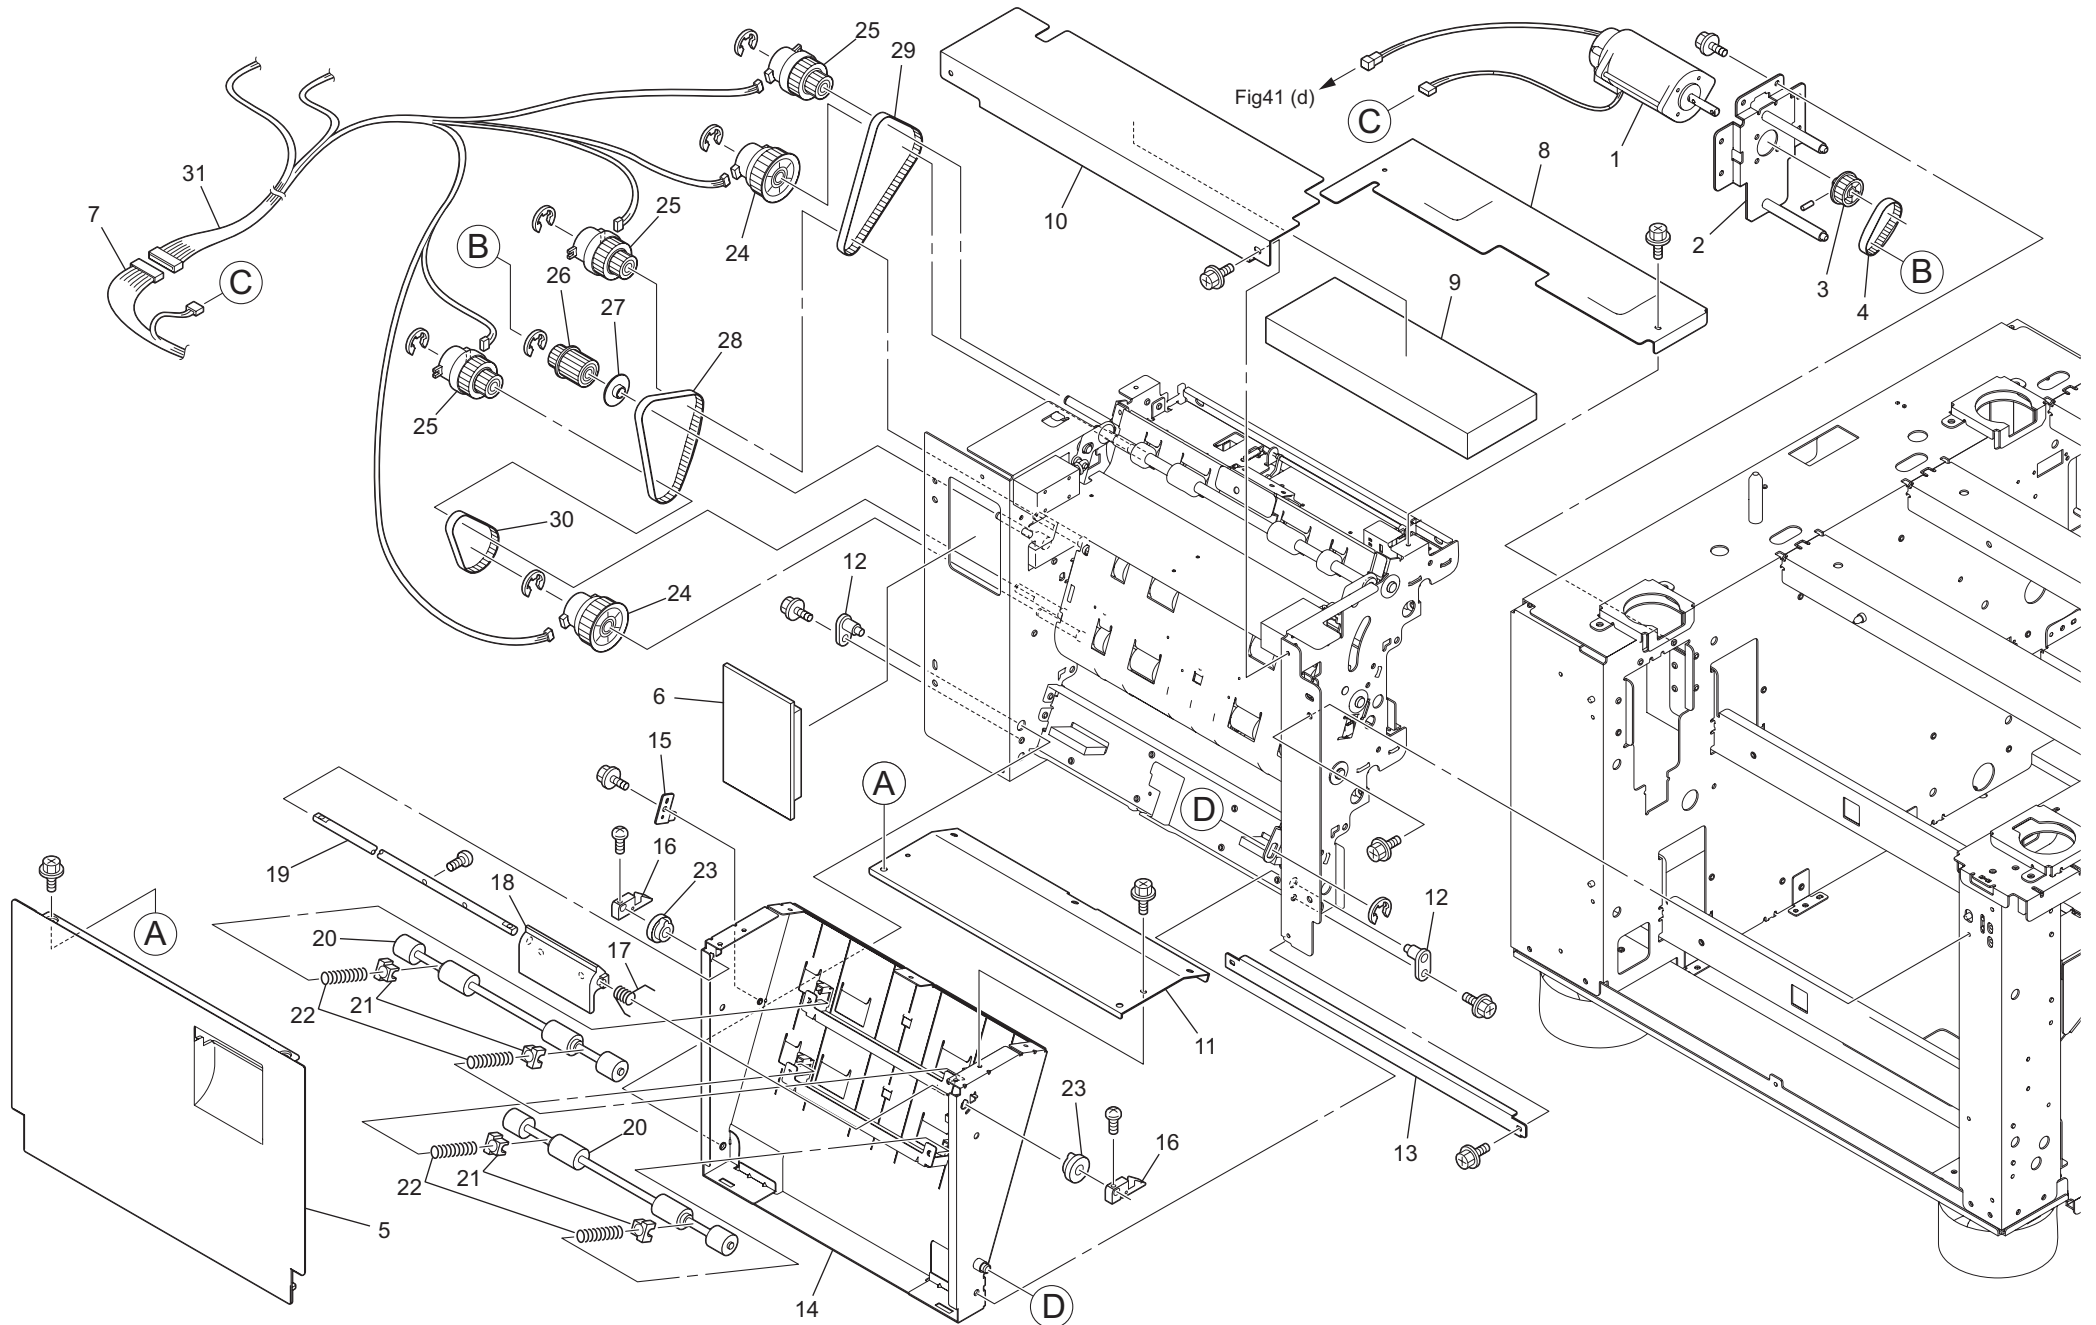


Fig 36. Multi Tray Paper Feeder (1)

No.	Part No.	Part Name	Q'ty	Remark
	045-75313-057	Transfer Motor Assy; SU	1	
1	490-20007-000	*TD3357-240	1	
2	045-14015-002	*Bracket; Transfer Motor	1	
3	611-90021-008	*Pulley; P28S3M10	1	
4	620-00015-003	Belt; 80S3M132	1	
5	033-34014-001	Side Cover; MTPF 1	1	
6	045-34116-000	S.-Reduction Sponge; MTPF Drive Rear	1	
7	045-53016-008	Wire Harness K; MTPF	1	
	045-75312-050	Transfer Unit Lower; MTPF	1	
8	045-14053-001	*Cover; Paper Feed Upper	1	
9	045-34115-003	S.-Reduction Sponge; MTPF Cover	1	
10	045-14010-000	*Cover; Transfer Unit Upper	1	
11	033-12061-006	*Cover; Guide Lower	1	
12	030-21397-007	*Hinge	2	
13	030-21409-005	*Bottom Stay	1	
14	033-12059-400	*Bracket Ass'y; Guide Lower	1	
15	030-21358-109	*Arm; SW	1	
16	030-21360-006	*Latch; Guide Bracket Ass'y	2	
17	030-21365-008	*Spring; Latch Front	1	
18	030-21361-002	*Handle Latch	1	
19	030-21031-100	*Shaft; Latch	1	
20	030-21362-106	*Roller; Tension 1	2	
21	030-21363-005	*Plate; Tension	4	
22	030-21364-206	*Spring; Tension	4	
23	607-60003-002	*Metal 6	2	
24	490-51016-105	*Clutch; HI-MIC5-27	2	
25	490-51017-101	*Clutch; HI-MIC5-28	3	
26	611-90019-003	*Pulley; P22+P27-S3M	1	
27	033-12233-109	*Flange	1	
28	620-00011-008	*Belt; 80S3M312	1	
29	620-00012-004	*Belt; 80S3M336	1	
30	620-00013-000	*Belt; 80S3M195	1	
31	045-14077-008	*Wire Harness H; MTPF	1	

[illegible]

Fig.37 Multi Tray Paper Feeder (1)

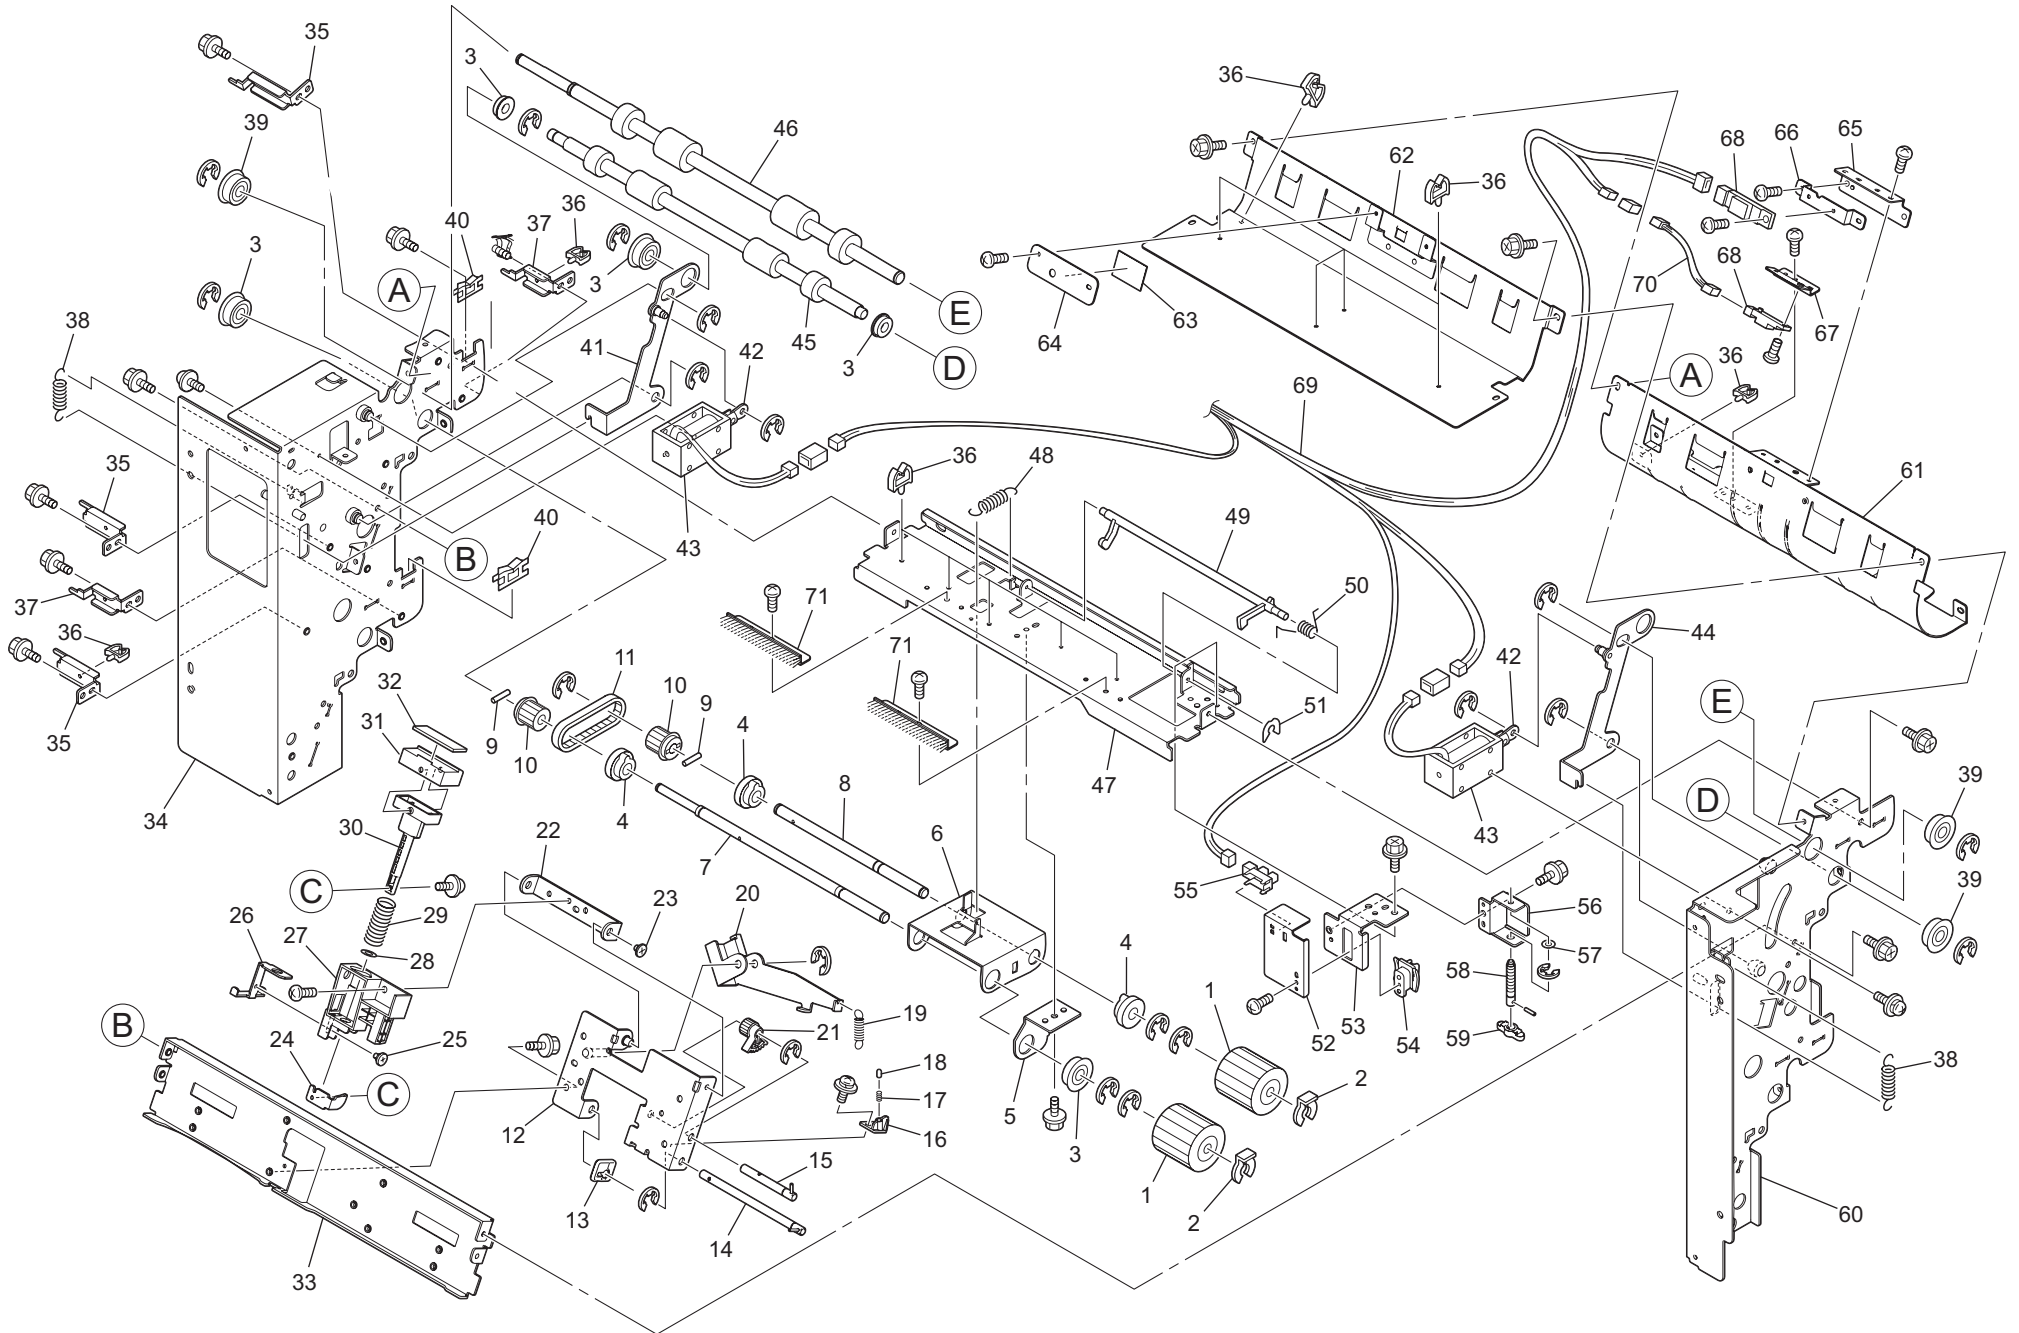


Fig 37. Multi Tray Paper Feeder (2)

No.	Part No.	Part Name	Q'ty	Remark
1	030-21016-100	*Roller; Pick-up	2	
2	030-21203-105	*Lock Ring; Roller	2	
3	609-00002-001	*Bearing; TPF-816ZZ-5	5	
4	607-60002-006	*Metal; 8	3	
5	030-21329-109	*Bracket; Paper Feed Shaft	1	
6	030-21328-102	*Bracket; Pick-up Roller	1	
7	033-12188-103	*Shaft; Paper Feed	1	
8	030-21026-203	*Shaft; Pick-Up Roller	1	
9	X-520	*Pin; 2X12	2	
10	030-21330-000	*Pulley; Paper Feed	2	
11	620-00004-001	*Belt; 60S3M150	1	
12	033-12137-002	*Base Bracket; Separation	1	
13	033-12142-006	*Cam; Stripper	1	
14	033-12152-109	*Shaft; P-Adjust	1	
15	033-12151-005	*Shaft; Stripper Angle	1	
16	033-12154-004	*Base; Plunger	1	
17	033-12155-000	*Spring; Plunger	1	
18	033-12156-007	*Plunger Pin	1	
19	033-12146-001	*Spring; P-Release	1	
20	033-12144-009	*Lever; P-Release	1	
21	033-12148-004	*Gear; Stripper Angle	1	
22	033-12143-002	*Bracket; Separation 2	1	
23	635-17624-006	*Stepped Screw; 6X2.2;M4X2.5	1	
24	033-12145-005	*Bracket; P-Release	1	
25	635-17523-102	*Stepped Screw; 5X2;M3X3	1	
26	033-12149-000	*Lever; P-Adjust	1	
27	033-12141-000	*Bracket; Separation	1	
28	033-12068-000	*Spacer 1	1	
29	030-21343-004	*Spring; Separation	1	
30	033-12206-004	*Shaft; Stripper	1	
31	030-21339-007	*Holder; Separation Pad	1	
32	030-14376-002	*Stripper Pad; Foam	1	
33	033-12147-008	*Stay; Transfer Unit Lower	1	

No.	Part No.	
34	033-12055-103	*Side F
35	033-12231-009	*Stopp
36	665-02065-000	*Cable
37	033-12230-002	*Stopp
38	033-12008-008	*Spring
39	601-10195-004	*Bearin
40	665-02038-002	*Edging
41	033-12004-002	*Arm; T
42	033-12006-005	*Link; S
43	490-50008-109	*TDS-1
44	033-12001-003	*Arm; T
45	033-12007-001	*Roller
46	033-12229-004	*Roller
47	033-12192-003	*Stay; f
48	030-21418-004	*Spring
49	030-21347-000	*Shaft;
50	030-21348-006	*Spring
51	634-00002-004	*Clip Jf
52	033-12196-009	*Bracke
53	033-12193-000	*Base l
54	030-14347-002	*Base;
55	444-30000-109	*Sensc
56	033-12194-006	*Slide f
57	033-12200-006	*Space
58	033-12195-002	*Shaft;
59	033-12198-001	*Knob;
60	033-12053-208	*Side F
61	033-12220-104	*Guide
62	033-12225-106	*Guide
63	021-15015-101	*Light /
64	045-14057-007	*Plate;
65	045-14021-002	*Base;
66	045-14020-006	*Bracke

Fig 37. Multi Tray Paper Feeder (2)

[illegible][illegible]

Fig.38 Multi Tray Paper Feeder (3)

1-78

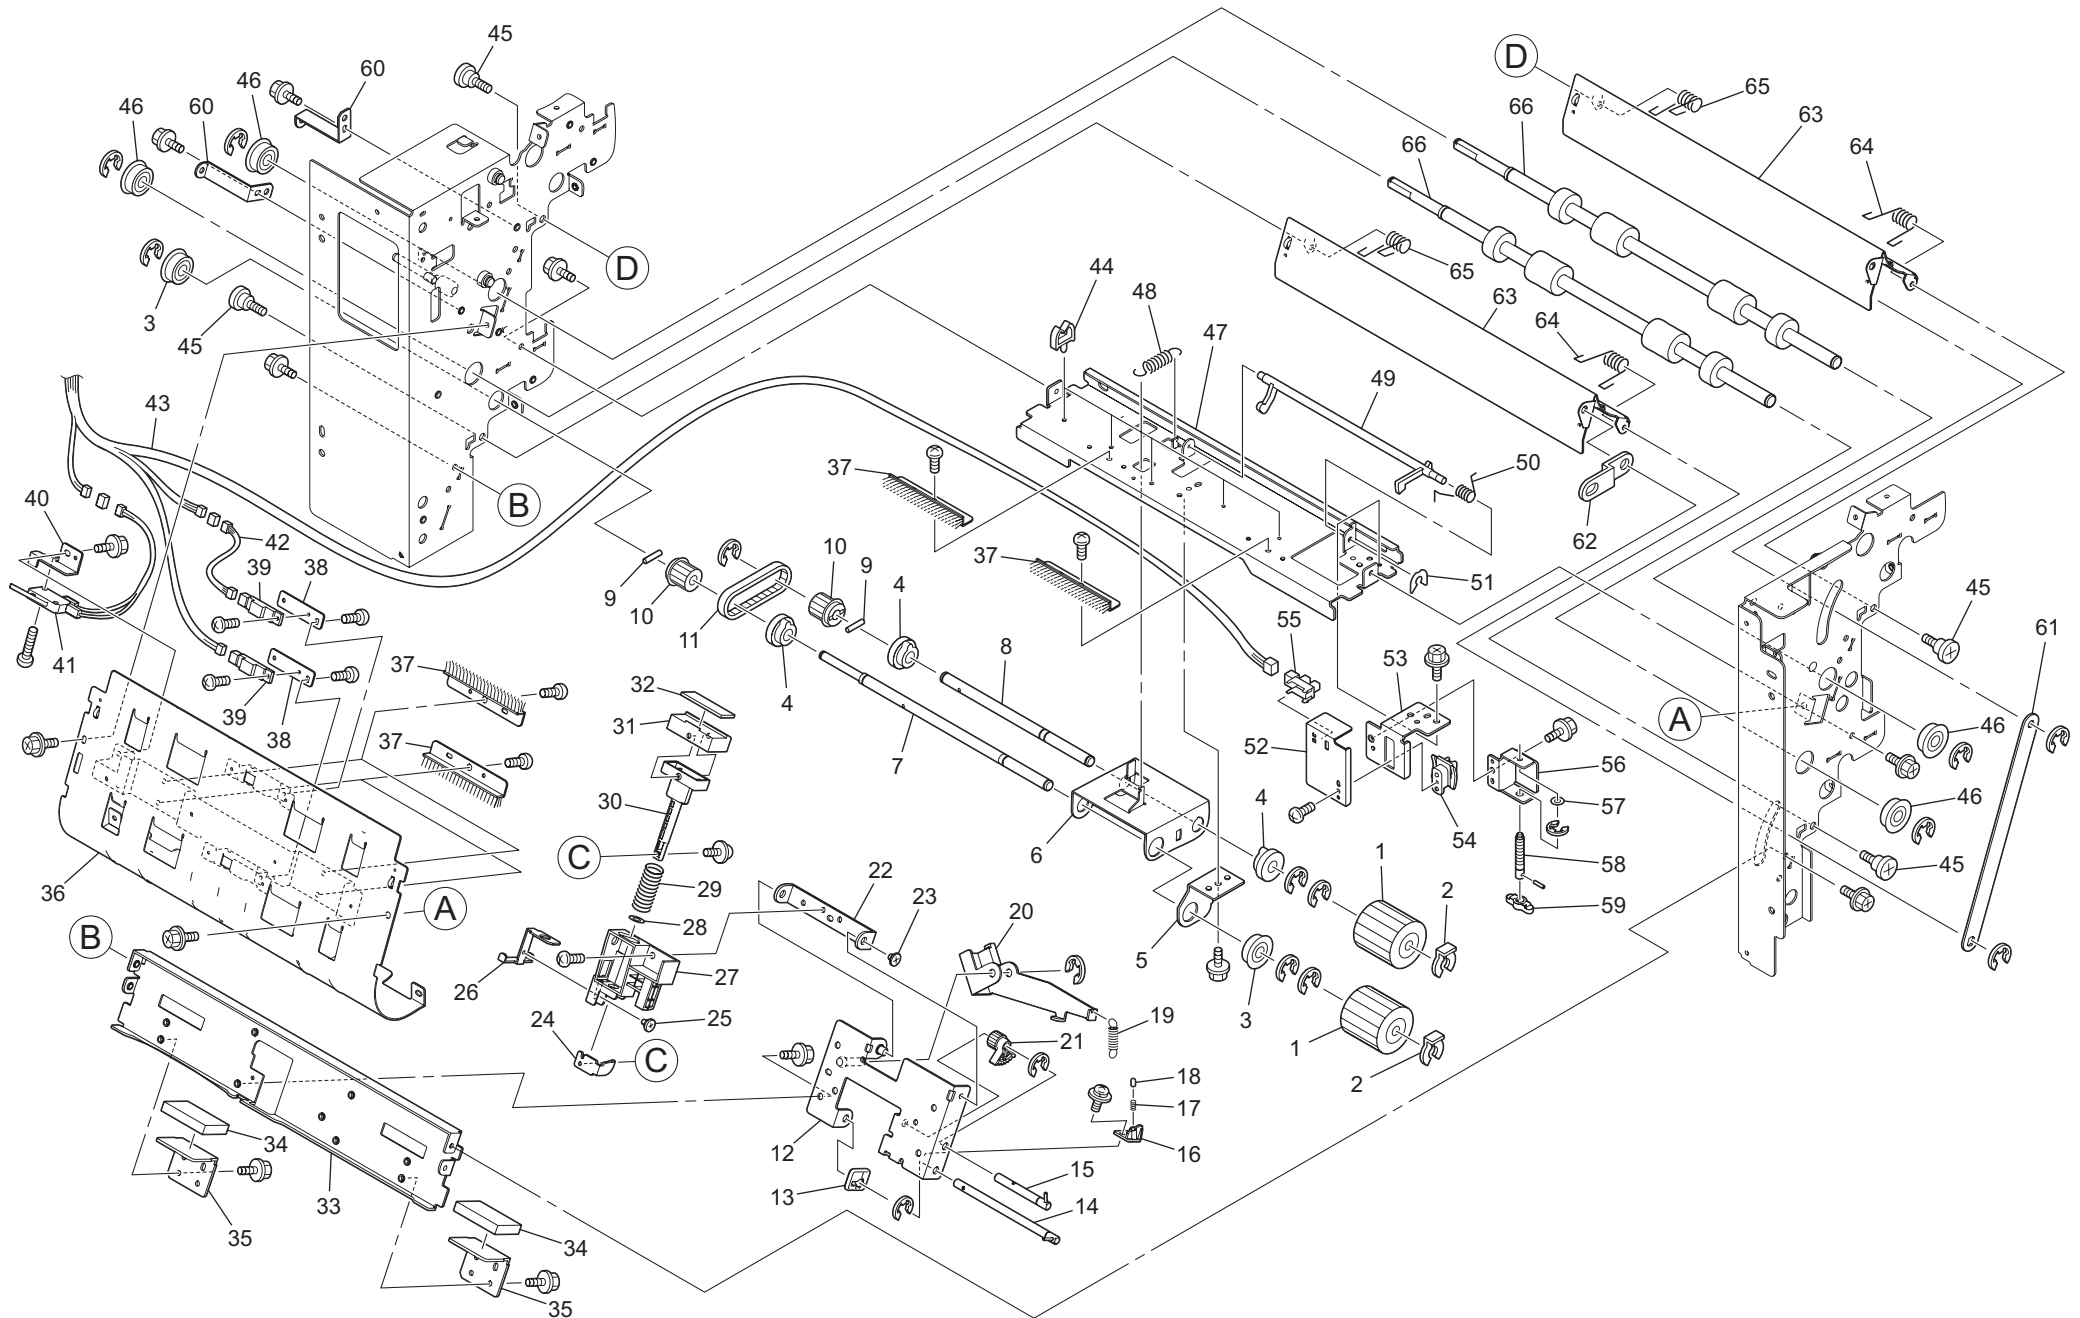


Fig 38. Multi Tray Paper Feeder (3)

No.	Part No.	Part Name	Q'ty	Remark
1	030-21016-100	*Roller; Pick-up	2	
2	030-21203-105	*Lock Ring; Roller	2	
3	609-00002-001	*Bearing; TPF-816ZZ-5	2	
4	607-60002-006	*Metal; 8	3	
5	030-21329-109	*Bracket; Paper Feed Shaft	1	
6	030-21328-102	*Bracket; Pick-up Roller	1	
7	033-12188-103	*Shaft; Paper Feed	1	
8	030-21026-203	*Shaft; Pick-Up Roller	1	
9	X-520	*Pin; 2X12	2	
10	030-21330-000	*Pulley; Paper Feed	2	
11	620-00004-001	*Belt; 60S3M150	1	
12	033-12137-002	*Base Bracket; Separation	1	
13	033-12142-006	*Cam; Stripper	1	
14	033-12152-109	*Shaft; P-Adjust	1	
15	033-12151-005	*Shaft; Stripper Angle	1	
16	033-12154-004	*Base; Plunger	1	
17	033-12155-000	*Spring; Plunger	1	
18	033-12156-007	*Plunger Pin	1	
19	033-12146-001	*Spring; P-Release	1	
20	033-12144-009	*Lever; P-Release	1	
21	033-12148-004	*Gear; Stripper Angle	1	
22	033-12143-002	*Bracket; Separation 2	1	
23	635-17624-006	*Stepped Screw; 6X2.2;M4X2.5	1	
24	033-12145-005	*Bracket; P-Release	1	
25	635-17523-102	*Stepped Screw; 5X2;M3X3	1	
26	033-12149-000	*Lever; P-Adjust	1	
27	033-12141-000	*Bracket; Separation	1	
28	033-12068-000	*Spacer 1	1	
29	030-21343-004	*Spring; Separation	1	
30	033-12206-004	*Shaft; Stripper	1	
31	030-21339-007	*Holder; Separation Pad	1	
32	030-14376-002	*Stripper Pad; Foam	1	
33	033-12147-008	*Stay; Transfer Unit Lower	1	

No.	Part No.	
34	030-21352-003	*Cushion
35	033-12009-004	*Stopper
36	030-21381-100	*Guide
37	030-21349-100	*Brush
38	030-21385-009	*Plate;
39	443-32005-100	*Sensor
40	030-21407-002	*Bracket
41	045-53027-000	*Tray S
42	033-12255-005	*Juncti
43	045-14077-008	*Wire h
44	665-02067-002	*Cable
45	030-21419-000	*Stepp
46	601-10195-004	*Bearin
47	033-12192-003	*Stay; f
48	030-21418-004	*Spring
49	030-21347-000	*Shaft;
50	030-21348-006	*Spring
51	634-00002-004	*Clip; J
52	033-12196-009	*Brack
53	033-12193-000	*Base f
54	030-14347-002	*Base;
55	444-30000-109	*GP1A
56	033-12194-006	*Slide f
57	033-12200-006	*Space
58	033-12195-002	*Shaft;
59	033-12198-001	*Knob;
60	033-12191-007	*Brack
61	030-21395-004	*Link; J
62	030-21396-000	*Link; J
63	030-21376-000	*Guide
64	030-21416-001	*Spring
65	030-21417-008	*Spring
66	033-12229-004	*Roller

Fig.39 Multi Tray Paper Feeder (4)

08-1

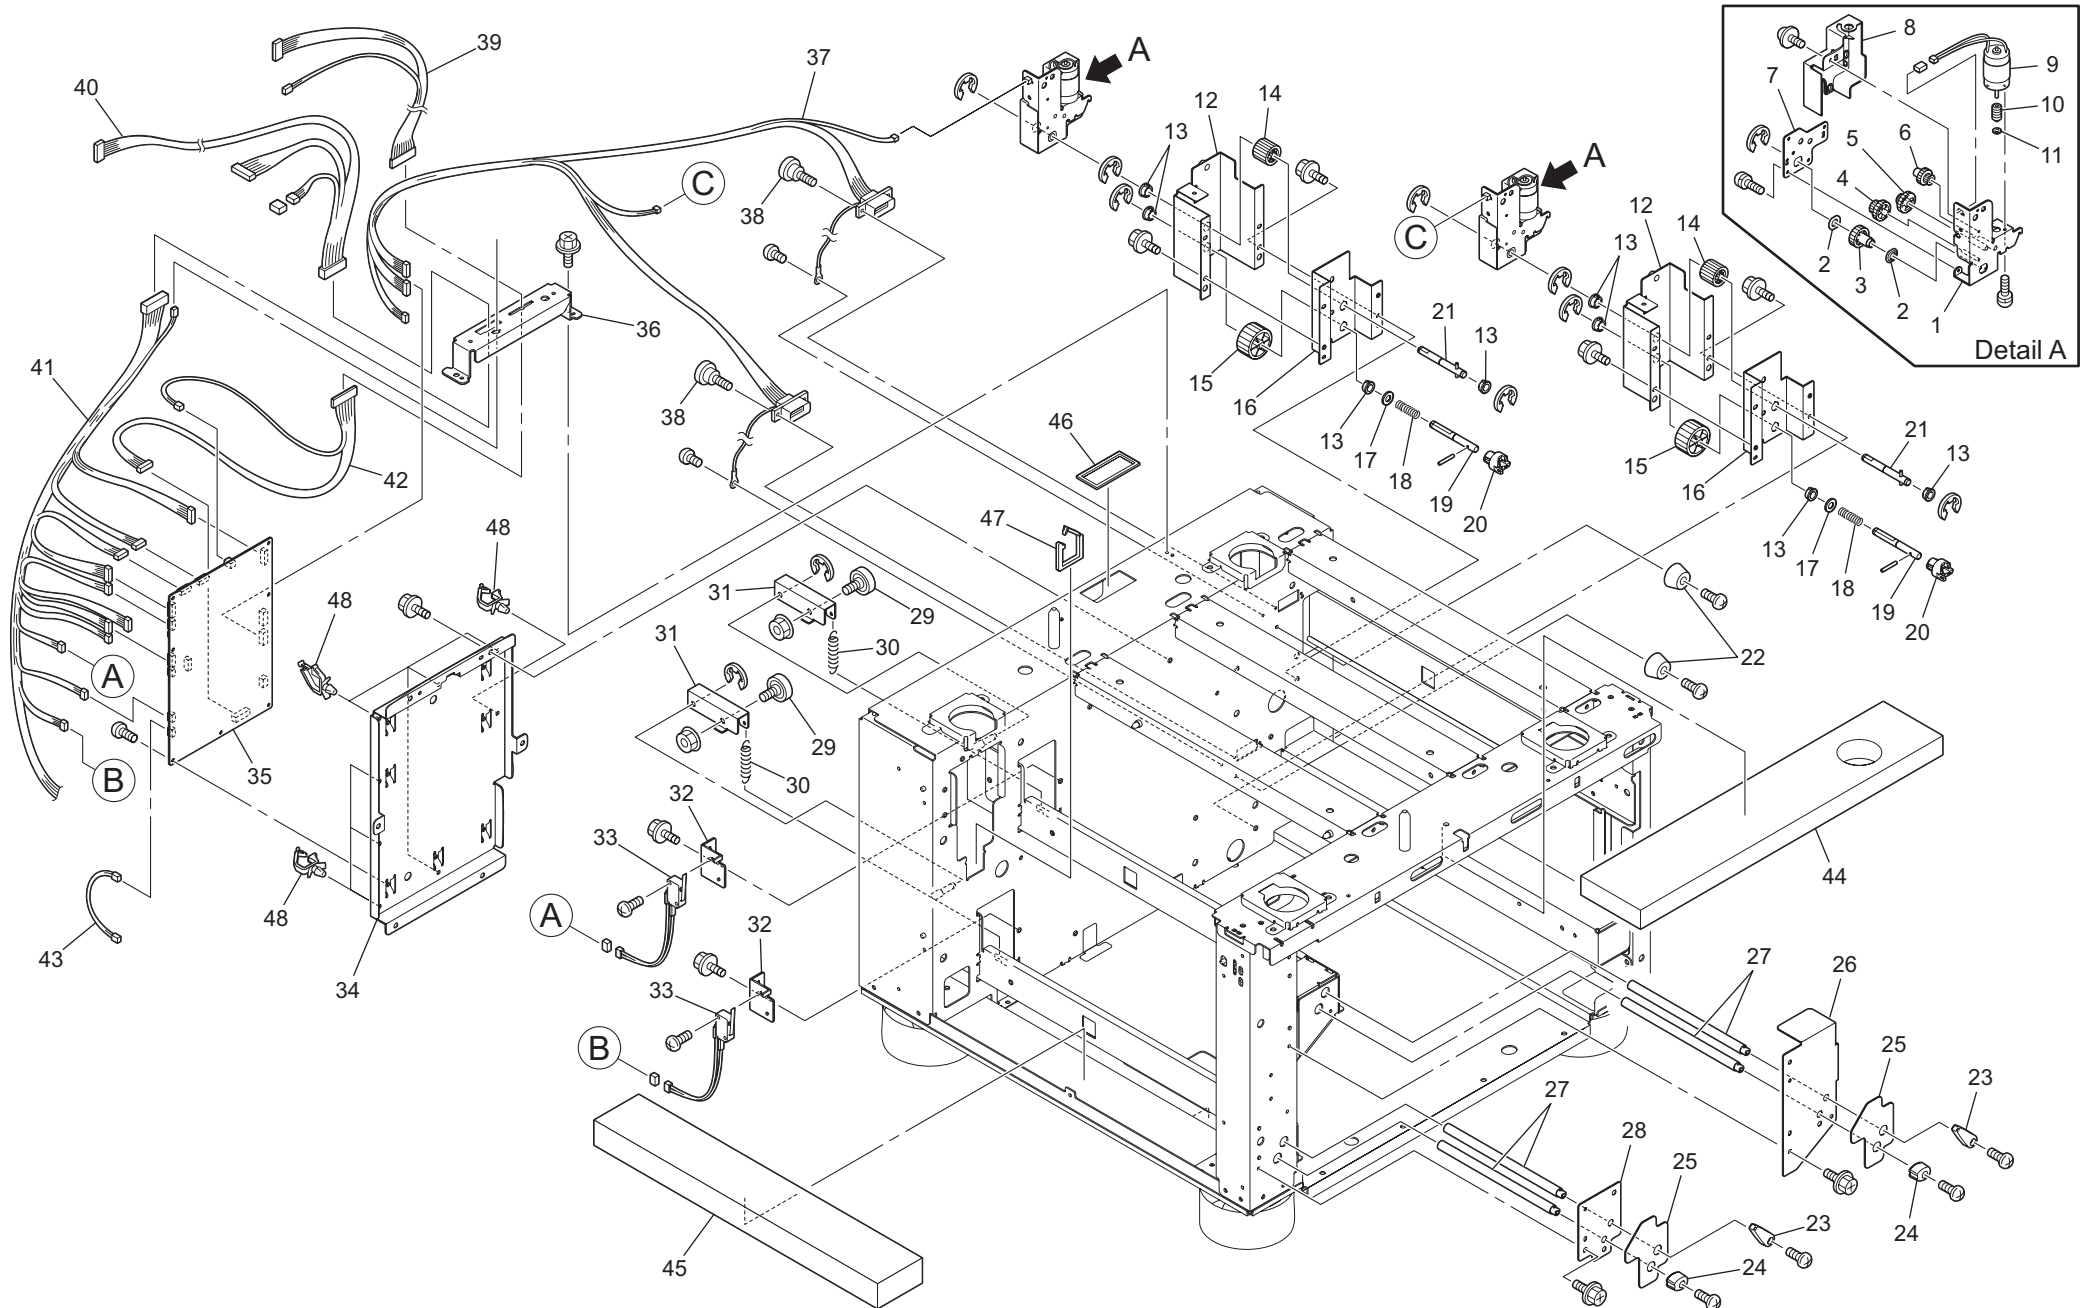


Fig 39. Multi Tray Paper Feeder (4)

No.	Part No.	Part Name	Q'ty	Remark
1	023-12234-109	Motor Chassis; Elevator Motor	1	
2	023-12244-104	Elevator Motor Collar	2	
3	612-10009-107	Gear; M1X24	1	
4	612-80013-004	Gear; M0.8X29+M1X14	1	
5	612-80012-008	Gear; M0.8X30+M0.8X14	1	
6	612-80011-001	Gear; M0.8X23+M0.8X14	1	
7	023-12223-000	Gear Cover; Elevator Motor	1	
8	023-12247-006	Cover; Elevator Motor	1	
9	023-74001-054	Motor Assy 445	1	
10	612-51001-005	Worm Gear; M0.8X1	1	
11	030-19205-001	Support; Clamp Worm	1	
12	045-14005-007	Bracket; Elevator Motor	2	
13	607-60002-006	Metal; 8	8	
14	030-21209-006	Gear; Elevator 1	2	
15	030-21210-004	Gear; Elevator 2	2	
16	033-12245-000	Cover; Elevator Motor Bracket	2	
17		Washer	2	
18	030-21248-001	Spring; Gear	2	
19	030-21028-109	Shaft; Elevator 2	2	
20	030-21017-000	Joint; Elevator	2	
21	045-14001-001	Shaft; Elevator	2	
22	660-01012-003	Rubber Foot; TK-26	2	
23	033-12051-000	Knob; Angle	2	
24	033-12050-004	Knob; Pressure	2	
25	033-12014-008	Sheet; Separation Adj.	2	
26	033-12207-108	Cover; Stripper 2	1	
27	033-12153-008	Shaft; Adjuster	4	
28	033-12208-104	Cover; Stripper 1	1	
29	609-00001-005	Bearing; A-19-B2	2	
30	030-21240-000	Spring; Tray Lock	2	
31	030-21238-103	Bracket; Tray Lock	2	
32	030-21430-004	Bracket; Interlock	2	
33	045-53027-000	Tray Safety SW	2	

[illegible]

Fig.40 Multi Tray Paper Feeder (5)

1-82

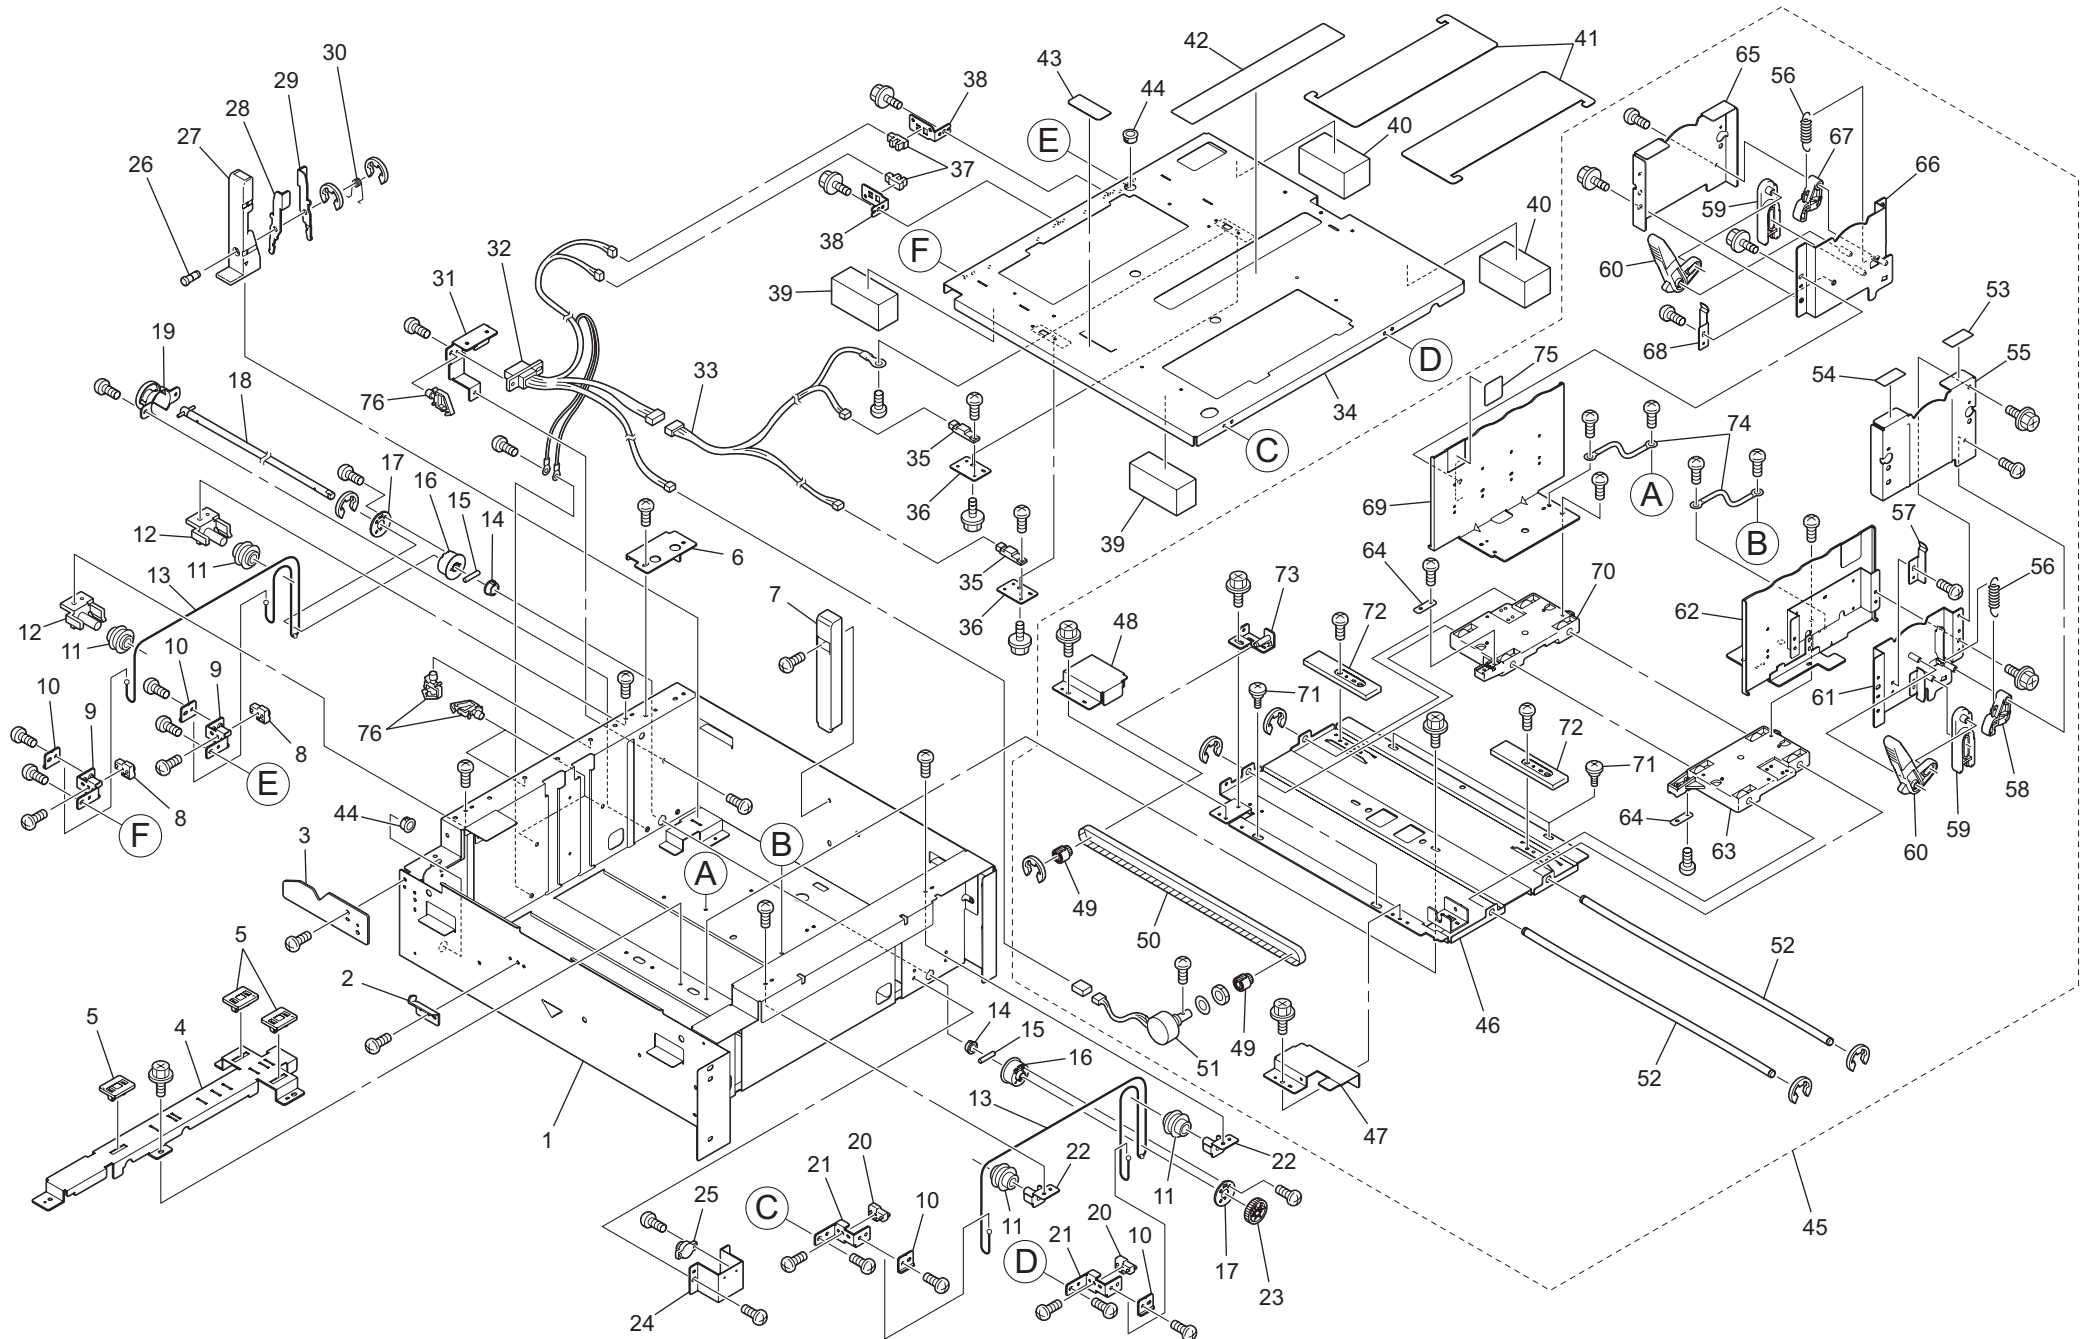


Fig 40. Multi Tray Paper Feeder (5)

No.	Part No.	Part Name	Q'ty	Remark
	045-75310-058	Tray Unit; SU	1	
1	033-12161-302	*Frame; Tray	1	
2	030-21314-101	*Bracket; Separation	1	
3	030-21315-108	*Lever; Tray Lock	1	
4	030-21301-107	*Stay; Guide	1	
5	030-21302-006	*Stopper; Table	3	
6	033-12016-000	*Drawer Cover	1	
7	033-12164-000	*End Fence; Fixed	1	
8	030-21261-008	*Slider; Wire 2	2	
9	030-21260-109	*Bracket; Wire 2	2	
10	030-21262-101	*Bracket; Wire Fixation	4	
11	030-21266-000	*Idler Pulley	4	
12	030-21270-104	*Holder; Pulley R	2	
13	030-21020-000	*Wire; Tray	2	
14	607-60002-006	*Metal; 8	2	
15	X-520	*Pin; 2X12	2	
16	030-21258-007	*Pulley; Wire F 12X5404	2	
17	030-21259-100	*Plate; Pulley Wire F12-5404	2	
18	030-21073-104	*Shaft; Drive	1	
19	030-21208-000	*Holder; Drum Wire	1	
20	030-21264-007	*Slider; Wire 1	2	
21	030-21263-108	*Bracket; Wire 1	2	
22	030-21267-103	*Holder; Pulley F	2	
23	030-21265-003	*Gear; Damper	1	
24	030-21312-109	*Bracket; Damper	1	
25	610-00020-000	*TM-189-4HG	1	
	045-75311-054	*Guide Support Assy; SU	1	
26	030-21319-103	**Pin; Support	1	
27	030-21061-009	**Guide; Support	1	
28	030-21317-100	**Lever; Ratchet 1	1	
29	030-21316-104	**Lever; Ratchet	1	
30	030-21318-000	**Spring; Lock	1	
31	030-21303-100	*Bracket; Tray	1	

No.	Part No.	
32	033-12246-405	*Wire H
33	033-12248-106	*Juncti
34	030-21304-106	*Base I
35	443-32005-100	*Sensc
36	030-21307-105	*Plate;
37	444-30000-109	*Sensc
38	033-12011-009	*Bracke
39	030-21309-108	*Cushio
40	030-21310-009	*Cushio
41	030-21311-200	*Cover
42	030-04025-007	*Seal; ;
43	030-21306-001	*L.O. S
44	665-04063-004	*Bushin
45		
46	030-21207-003	*Bracke
47	030-21291-101	*Cover
48	030-21292-108	*Cover
49	030-21288-003	*Pulley
50	621-00002-006	*Belt; 4
51	030-51093-100	*Poten
52	030-21290-105	*Shaft;
53	030-04038-109	*Seal; ;
54	030-04128-108	Seal; S
55	030-21059-101	*Plate;
56	030-21295-000	*Spring
57	030-21296-006	*Plate ;
58	030-21055-009	*Latch;
59	030-21204-004	*Lever;
60	030-21297-002	*Lever;
61	030-21051-003	*Bracke
62	030-21278-105	*Guide
63	030-21206-104	*Holder
64	030-21289-107	*Plate;

Fig 40. Multi Tray Paper Feeder (5)

[illegible][illegible]

Fig.41 Multi Tray Paper Feeder (1)

1 - 85

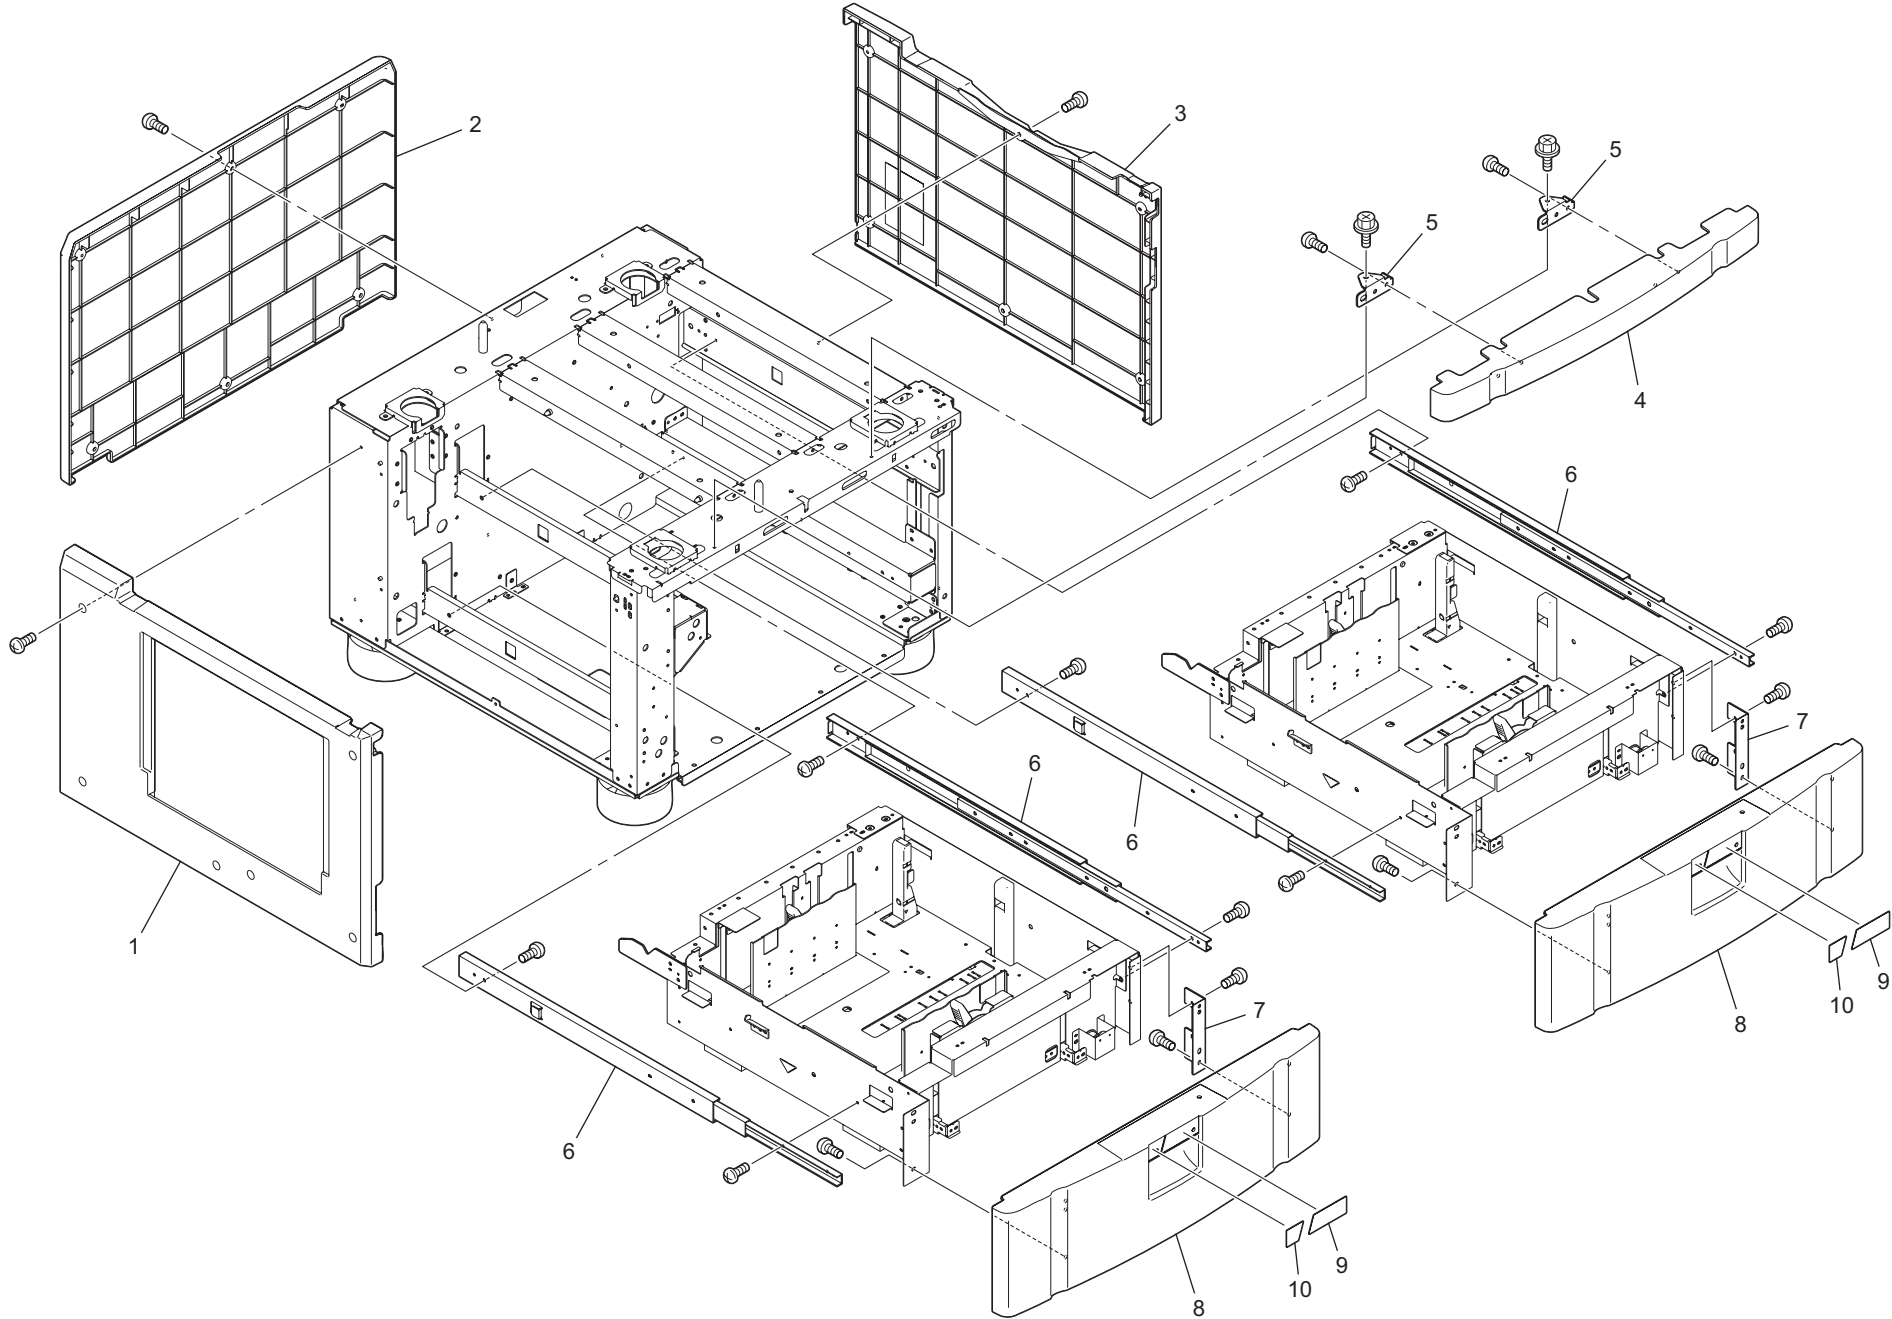


Fig 41. Multi Tray Paper Feeder (6)

[illegible][illegible]

Fig.42. Multi Tray Paper Feeder (7)

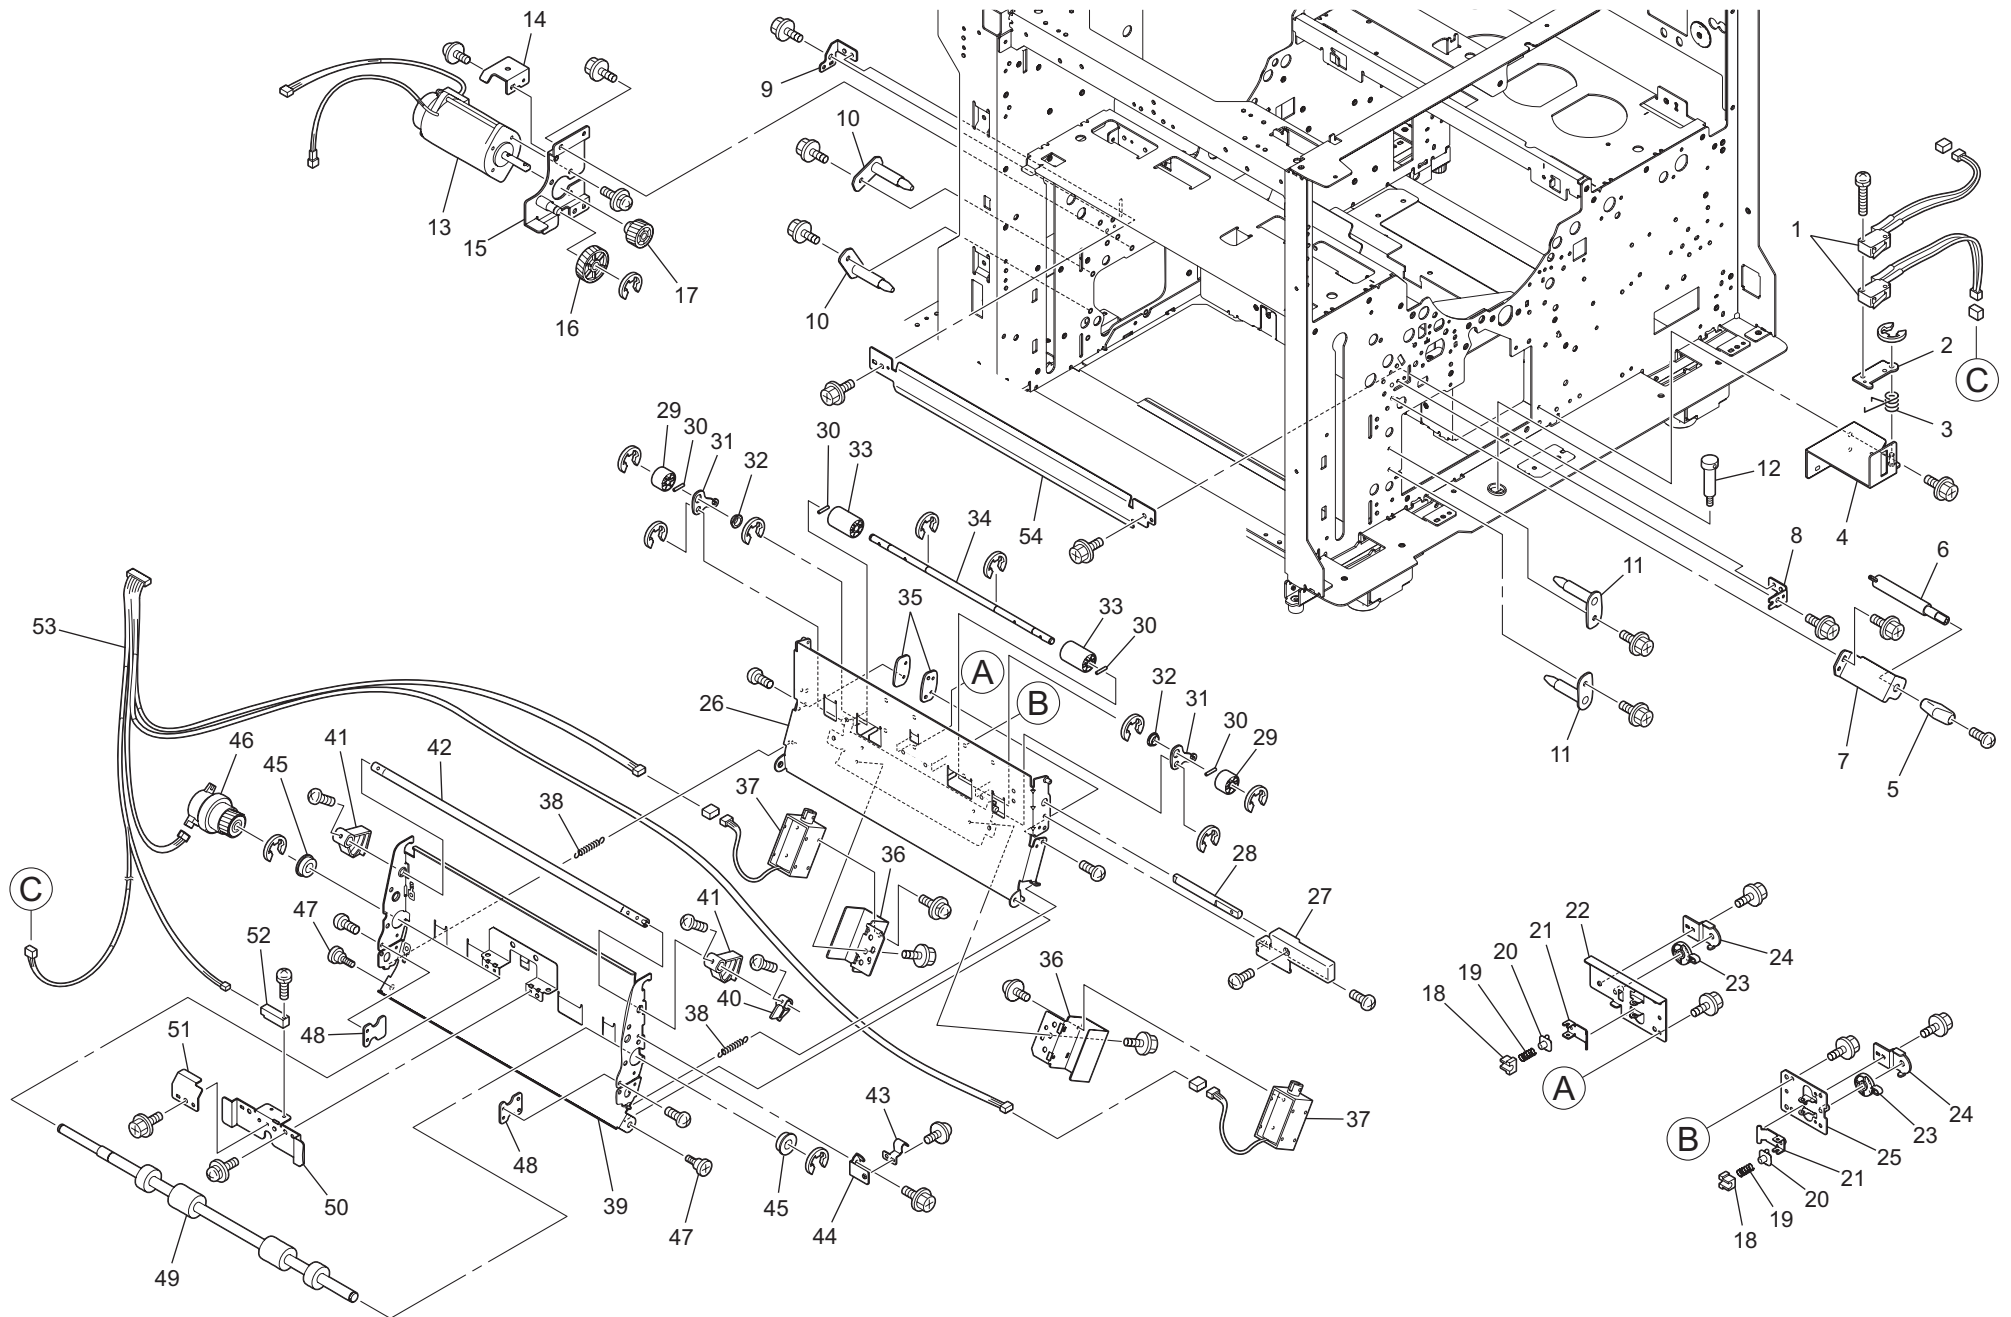


Fig 42. Multi Tray Paper Feeder (7)

No.	Part No.	Part Name	Q'ty	Remark
1	444-10001-001	AM50031A431F1	2	
2	021-11317-103	SW Plate	1	
3	021-11318-002	Spring; SW	1	
4	045-34101-100	Bracket; Jam Release Cover SW	1	
5	045-14069-005	Lever; Jam Release Cover	1	
6	045-14055-004	Shaft; Release Lever	1	
7	045-14075-005	Stay; Release Lever Shaft	1	
8	045-14056-000	Bracket F; Transfer Guide Plate	1	
9	045-14074-009	Bracket R; Transfer Guide Plate	1	
10	045-14048-008	Joint Shaft R; Transfer Guide	2	
11	045-14047-001	Joint Shaft F; Transfer Guide	2	
12	045-11020-102	Fixing Screw	1	
13	490-20007-000	Motor; TD3357-240	1	
14	045-14046-005	Stopper Plate	1	
15	045-14043-006	Bracket; Transfer Motor	1	
16	612-30003-008	Gear; M1X34X9	1	
17	612-30002-001	Gear; M1X24X12	1	
	045-75325-055	Transfer Guide Unit (18-26,29-53)	2	
18	030-21363-005	*Plate; Tension	2	
19	045-14023-005	*Nip Spring	2	
20	045-14024-001	*Holder; Nip Spring	2	
21	045-14025-008	*Pressure Adj. Plate	2	
22	045-14062-000	*Base Plate R; Pressure Adj.	1	
23	045-14067-002	*Lever Cam; Pressure Adj.	2	
24	045-14068-009	*Hold Plate; Lever Cam	2	
25	045-14027-000	*Base Plate F; Pressure Adj.	1	
26	045-14033-000	*Guide Plate 1	1	
27	030-21502-005	Lever; FL Guide Plate Release	1	
28	045-14038-002	Shaft; Guide Plate Release Lever	1	
29	030-21491-003	*Roller Tension Upper 1	2	
30	X-520	*Pin; 2X12	4	
31	045-14026-004	*Release Lever	2	
32	607-13003-002	*Metal; F6X8X3;10X1	2	

[illegible]

II. INDEX

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
1	000-06123-007	Stopper;Paper Guide Roller	2	2	23	
2	011-11522-100	Paper Guide Roller	2	2	22	
3	014-15011-004	*De-Electricity Bar ; M.-M.; A3	1	22	22	
4	015-36317-305	Shaft Screw; Ink Blocking Plate	2	12	12	
5	015-36318-000	Spring; Ink Blocking Plate	2	12	14	
6	018-16411-307	*Original Holder Cover (Upper);Stage Cover	1	31	4	
7	018-31614-001	*Ground Spring;Roller System	1	8	54	
8	018-33151-203	*Fence Cushion	1	17	2	
9	019-11812-106	Lock Ring	3	2	17	
10	019-11812-106	*Lock Ring	1	21	42	
11	019-11831-100	**Base F;Stripper Pad	1	8	60	
12	019-11832-000	**Cover F;Stripper Pad	1	8	59	
13	019-11833-006	**Stripper Pad;70	1	8	61	
14	019-13511-103	*Arm;Air Pump	1	6	35	
15	019-13511-103	*Arm;Air Pump	1	15	19	
16	019-13512-002	*Arm Shaft;Air Pump	1	6	36	
17	019-13512-002	*Arm Shaft;Air Pump	1	15	25	
18	019-13516-105	*Piston Head II;Air Pump	1	6	37	
19	019-13516-105	*Piston Head II;Air Pump	1	15	23	
20	019-13517-004	*Cylinder Valve II ; Air Pump	1	6	40	
21	019-13517-004	*Cylinder Valve II ; Air Pump	1	15	21	
22	019-13518-000	*Cylinder Valve Sheet ; Air Pump	1	6	39	
23	019-13518-000	*Cylinder Valve Sheet ; Air Pump	1	15	22	
24	019-15255-007	**Guide Flange;Master Holder	1	22	64	
25	019-35025-208	**Liner	1	22	26	
26	019-91740-003	*Unit/Stripper Pad; 70 (59-61)	1	8		
27	020-11520-009	*L.O. Sheet	1	4	4	
28	020-11811-100	Spring B;P.-F.Pressure Adj.	1	2	28	
29	020-11813-006	Arm;P.-F.Pressure Adj.	1	2	27	
30	020-13114-202	Fixing Pin	2	15	15	
31	020-13114-202	Fixing Pin	2	16	53	
32	020-13116-205	*P.-E. Pulley; Suction	3	16	1	
33	021-04050-002	Seal; Counter; Eng.	1	32	9	
34	021-04051-009	Seal; Counter; Pic.	1	32	9	
35	021-11140-106	Fixed Plate;Rotary Catch	1	32	6	
36	021-11220-100	Magnet Catch	1	32	3	
37	021-17129-104	*Spring; Actuator	1	18	6	
38	021-17501-208	*Frame; Assy-Frame-Lower	1	19	7	
39	021-17505-203	*Bracket; K-BKT-M; Scanner	1	19	3	
40	021-17506-102	*Bracket Rear; Pulley; K-DV-R	1	19	27	
41	021-17507-109	*Wire Front; Wr-7X7-S-F	1	19	32	
42	021-17508-105	*Wire Rear; Wr-7X7-Z-R	1	19	33	
43	021-17509-004	*Mirror; Carriage 1; Mir-1	1	19	12	
44	021-17510-207	*Stage Glass; Gls-Platen	1	18	22	
45	021-17512-005	*Shading Plate;E-20	1	18	23	
46	021-17514-008	*Mylar; Mir-Frame-U; Scanner	2	18	18	
47	021-17515-004	*Sponge; Spng-Pg-1	1	18	14	
48	021-17516-000	*Sponge; Spng-Pg-2	2	18	15	
49	021-17516-000	*Sponge; Spng-Pg-2	2	18	16	
50	021-17516-000	*Sponge; Spng-Pg-2	2	18	19	
51	021-17517-007	*Sponge; Spng-Ccd-Cable	2	18	40	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
52	021-17518-003	*Mylar; Inverter; Mir-Inv	1	19	11	
53	021-17521-101	*Pulley Drive Shaft; Ply-Drive	1	19	31	
54	021-17523-007	*Support Shaft; Sft-Cr2; Carriage 2	1	19	26	
55	021-17525-000	*Screw;Scr-M3-1.6	2	18	3	
56	021-17528-009	*Plate Spring; Mirror 1; Spr-Mir-1	2	19	14	
57	021-17529-005	*Plate Spring; Spr-Mir-2	4	19	40	
58	021-17530-100	*Sponge; Spr-Glass-F	1	18	21	
59	021-17531-107	*Sponge; Spr-Glass-R	1	18	20	
60	021-17538-306	*Frame; Frm-Upper; Scanner	1	18	13	
61	021-17540-106	*Bracket; Pulley; BKT-DV	2	19	37	
62	021-17541-102	*Bracket; FB Pulse Motor; BKT-MOT	1	19	4	
63	021-17543-105	*Plate-APS-Sensor	1	18	36	
64	021-17544-101	*Plate; Plt-Ccd-Cable; Scanner	1	18	38	
65	021-17545-205	*Adj. Plate; PLT-ADJ-GLASS	1	18	4	
66	021-17546-104	*Plate; Plt-Hinge; Scanner	2	18	47	
67	021-17547-100	*Guide Plate; Plt-Ccd-Cable2	1	18	41	
68	021-17553-003	*Cover; CVR-LENS-UNIT	1	18	24	
69	021-17554-107	*Frame; Carriage 1;Frm-Cr1	1	19	8	
70	021-17555-103	*Adj. Bracket Rear; BKT-ADJ-CR1	1	19	13	
71	021-17556-002	*Reflector	1	19	19	
72	021-17557-106	*Bracket; BKT-WIRE-HOLD	2	19	39	
73	021-17558-102	*Cover; Inverter; CVR-INV	1	19	10	
74	021-17559-109	*Adj. Bracket Front; BKT-ADJ-CR1-F	1	19	16	
75	021-17560-107	*Frame; Carriage 2;Frm-Cr2	1	19	23	
76	021-17561-103	*Bracket F; BKT-SLIDE-CR2-F	1	19	24	
77	021-17562-207	*Bracket Front;Pulley; BKT-DV-CR2-F	1	19	30	
78	021-17564-005	*Slide Guide; SlIde-Bush; Carriage	8	19	17	
79	021-17565-001	*Guide Pulley; Ply-Turn	1	19	29	
80	021-17567-004	*Bracket; HP-SENS; Scanner	1	18	44	
81	021-17568-108	*Blind Cover;Guide	1	18	1	
82	021-17569-007	*Guide Bracket; Guide-Ffc-Frame	1	18	39	
83	021-17570-005	*Guide Bracket; Guide-Ffc-Cr1	1	19	18	
84	021-17574-000	*Pulley; Ply-S1.5M-75	1	19	34	
85	021-17575-007	*Pulley; Ply-S1.5M-90-30	1	19	2	
86	021-17579-002	*Shaft; Pulley; Sft-Dv	2	19	38	
87	021-17581-007	*Mirror 2; Carriage 2	2	19	25	
88	021-17582-003	*Pulley; Dv-19-H5-W0.25	6	19	28	
89	021-17583-000	*Belt; ST1173060	1	19	36	
90	021-17584-006	*Belt;ST1116060	1	19	35	
91	021-17585-002	*Tape-Frm-U; Scanner	6	18	17	
92	021-17589-008	*Sponge; Mirror 1; Spng-Mir	2	19	15	
93	021-17592-106	*Band; Lens Assy	1	18	32	
94	021-17593-102	*Cover; Lens Assy	1	18	34	
95	021-50535-100	*PCB;Pba-Chukei	1	18	46	
96	021-50536-106	*Inverter;Pws-Pxz170E4-B	1	19	9	
97	021-51029-208	Elevator SW Ass'y	1	2	8	
98	021-51029-208	Push Button SW Ass'y	2	20	38	
99	021-51032-209	*Potentiometer; P.-F.-T.	1	4	22	
100	021-51120-000	*Wire Harness;Assy-Ffc	1	19	21	
101	021-51121-007	*Wire Harness;ASM-H.Psens	1	18	45	
102	021-51122-100	*Harness; Empty Sensor	1	18	37	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
103	021-53142-001	*Sensor;Ey3A-1061	8	18	26	
104	021-53143-105	*Lamp;Uxfl-08Yg37P2	1	19	22	
105	021-53201-008	*Motor;Kh42Jm2B154	1	19	5	
106	021-75014-007	*Sponge;Blind Cover Guide	4	18	2	
107	023-10003-002	Bottom Stay; Main Frame	2	1	12	
108	023-10005-005	Stay; Paper Feeding; Main Frame	1	1	11	
109	023-10007-008	Scanner Stay; Main Frame	2	1	5	
110	023-10008-004	Transportation Support Plate	4	1	16	
111	023-10010-106	Panel Board; Main Frame	1	1	4	
112	023-10012-109	Upper Stay; Drum	1	1	6	
113	023-10017-100	Lifting Handle	4	1	17	
114	023-10018-000	Spacer; Rubber Foot	4	1	13	
115	023-10024-000	Noise Absorber; Bottom; Main Frame	2	1	15	
116	023-10030-000	Stopper; Lifting Handle	4	1	18	
117	023-12201-006	Elevator Rack; P.-F.	2	3	10	
118	023-12202-002	Spring; Elevator	2	3	17	
119	023-12203-009	Bracket; Elevator Spring; P.-F.	2	3	18	
120	023-12205-001	Lower Limit Frame; P.-F.	1	3	7	
121	023-12206-008	Support; Lower Limit Frame; P.-F.	1	3	8	
122	023-12223-000	*Gear Cover; Elevator Motor	1	3	25	
123	023-12233-102	Bracket; Lower Limit Sensor	1	3	15	
124	023-12234-109	*Motor Chassis; Elevator Motor	1	3	24	
125	023-12237-000	Spring; Elevator Safety SW; Lower	2	3	13	
126	023-12244-104	*Elevator Motor Collar	2	3	30	
127	023-12247-006	*Cover; Elevator Motor	1	3	23	
128	023-12251-003	Bracket F; Spring; Lower Safety SW	1	3	11	
129	023-12252-000	Bracket R; Spring; Lower Safety SW	1	3	12	
130	023-12305-006	Pick-Up Roller; RZ (15-16)	2	2		
131	023-12306-002	*Core; Pick-up Roller	2	2	16	
132	023-12308-005	Actuator; Upper limit; Card; P.-F.-T.	1	2	25	
133	023-12310-000	Stay; Paper Feed	1	2	26	
134	023-12312-100	P.-F.Pressure Adj. Lever	1	2	29	
135	023-12313-009	Spring;Pf Pressure Adj. Lever	1	2	30	
136	023-12314-005	Bracket A; Upper Limit Sensor	1	2	31	
137	023-12315-001	E Switch Plate	1	2	6	
138	023-12316-105	Cover; P.-Feed	1	2	1	
139	023-12319-007	Upper Guard	2	2	4	
140	023-12325-007	Bracket; Upper Limit Sensor	1	2	35	
141	023-12328-103	Support; Pick-Up Roller Shaft	1	2	14	
142	023-12329-002	Shaft; Pick-Up Roller	1	2	11	
143	023-12330-000	Scraper Shaft; Pickup	1	2	18	
144	023-12333-204	Frame Bracket; Pick-Up	1	2	10	
145	023-12334-006	Actuator; Upper limit; Std; P.-F.-T.	1	2	24	
146	023-12337-102	Extention Shaft; Pick-Up Roller	1	2	21	
147	023-12338-001	Joint Shaft Assy	1	2	20	
148	023-12344-001	Spring; Elevator Safety SW; Upper	1	2	7	
149	023-12402-109	*Bracket; Stripper Base	1	8	56	
150	023-12403-008	*Spring Tension; Stripper	1	8	48	
151	023-12404-306	*Shaft; Stripper RZ-L	1	8	58	
152	023-12405-000	*Adjuster Dial; Stripper Unit	2	8	69	
153	023-12408-301	*Housing; Stripper RZ-L	1	8	57	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
154	023-12409-200	*Worm Gear Box; Stripper Unit	1	8	67	
155	023-12412-007	*Arm; Stripper pressure	1	8	55	
156	023-12428-000	*Lock Lever; Stripper Unit	1	8	53	
157	023-12429-104	*Spring; Angle Adj.; Stripper	1	8	47	
158	023-12430-005	*Unfix Lever; Stripper Unit	1	8	51	
159	023-12431-001	*Guide Block Front; Stripper Unit	1	8	50	
160	023-12503-100	Bearing; Timing Roller	1	8	19	
161	023-12507-105	Adj. Plate; Timing Roller	1	8	16	
162	023-12510-009	Collar; Load Spring	1	8	10	
163	023-12513-105	*Pressure Shaft; Guide Roller	1	8	27	
164	023-12515-000	*Support F; Guide Roller	1	8	22	
165	023-12516-104	*Support R; Guide Roller	1	8	26	
166	023-12519-006	*Lock Plate; Guide Roller	1	8	25	
167	023-12536-105	Stay; Guide Plate	2	1	23	
168	023-12542-202	Cover; Guide Roller	1	1	19	
169	023-12543-004	Back Cover; Stripper Unit	1	8	46	
170	023-12544-108	Noise Absorber; Guide Roller Cover	1	1	20	
171	023-12545-007	*Adj. Plate; Guide Roller	1	8	23	
172	023-12602-108	Wire Harness; Elevator Motor	1	3	33	
173	023-15006-204	Tensioner Lever; Main Belt	1	7	4	
174	023-15012-000	Bracket; Pressure Shaft	1	7	3	
175	023-15018-008	Pressure Spring 21	1	6	14	
176	023-15019-004	Noise Reduction; Pressure Spring	1	6	15	
177	023-15023-109	*Base Bracket; Pressure Control	1	6	1	
178	023-15025-101	*Gear Shaft; Pressure Control	1	6	6	
179	023-15027-007	*Cover Plate; Pressure Control	1	6	2	
180	023-15028-003	*Gear; Pressure Control	1	6	5	
181	023-15029-107	*Worm Shaft; Pressure Control	1	6	4	
182	023-15030-008	*Worm Gear; Pressure Control	1	6	3	
183	023-15031-004	*Gear Wheel; Pressure Control	1	6	12	
184	023-15032-000	*Bracket; HP sensor; Pressure Control	1	6	9	
185	023-15033-104	*Rotation Plate; Pressure Control	1	6	13	
186	023-15034-208	*Print Positioning Base	1	5	3	
187	023-15037-002	Lever Ass'y; Separator	1	7	34	
188	023-15038-009	Spring; Separator	1	7	35	
189	023-15046-001	*Actuator; B position sensor	1	7	13	
190	023-15055-108	*Sector Cam	1	5	16	
191	023-15058-301	Lever Plate; Sector Gear	1	6	21	
192	023-15059-006	Sector Gear	1	6	22	
193	023-15060-209	Spring; Sector Gear	1	6	23	
194	023-15061-000	Guide Roller Lever	1	6	20	
195	023-15063-100	Spring; Guide Roller Release	1	6	19	
196	023-15068-005	*Sector Gear; Ver. Print Position	1	5	11	
197	023-15070-000	*Idler Spring; Vertical	1	5	17	
198	023-15103-005	*Cover; Ver. Print pos. Planet Gear	1	5	12	
199	023-15104-303	*Arm Front; Ver. Print Pos.	1	5	4	
200	023-15105-008	*Arm Rear; Ver. Print Pos.	1	5	7	
201	023-15115-100	Cover; Paper Feed Drive	1	5	2	
202	023-15116-000	*Bracket; Vertical Centering Sensor	1	5	21	
203	023-15150-003	Bracket; B Position Sensor	1	7	14	
204	023-15154-408	Base Bracket; Guide Roller Release	1	6	18	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
205	023-17004-306	Light Absorber Strip(328X18)	1	10	3	
206	023-17006-201	Drum Flange Rear	1	10	14	
207	023-17007-003	Drum Seal	2	10	7	
208	023-17011-000	Weight Balance R; A	1	10	15	
209	023-17012-104	Flange Front	1	10	8	
210	023-17014-000	Weight Balance F; A	1	10	9	
211	023-17024-005	*Cartridge Guide; Upper	1	11	15	
212	023-17025-109	Bottle Stay	1	11	1	
213	023-17026-105	*Bottle Set SW Ass'y	1	11	10	
214	023-17040-108	*Block R; Squeegee	1	12	29	
215	023-17041-104	*Block F; Squeegee	1	12	20	
216	023-17044-200	Drum Frame Rear	1	9	36	
217	023-17054-001	Lock Spring; B Pos.	1	9	32	
218	023-17061-105	Drum Support Right; Rail	1	13	3	
219	023-17062-101	Drum Support Left; Rail	1	13	2	
220	023-17063-205	Slide Rail	1	20	13	
221	023-17069-009	*Collar D12; Clamp	2	10	26	
222	023-17092-000	Drum Guide	4	9	35	
223	023-17094-003	liner Pom; Rear Frame; Drum	1	9	38	
224	023-17116-007	Flange Support Roller; Drum	3	12	2	
225	023-17139-104	Pre-Pressure Spring; Right; Drum	2	13	5	
226	023-17139-104	Pre-Pressure Spring; Right; Drum	2	20	15	
227	023-17140-102	Pre-Pressure Spring; Left; Drum	2	13	4	
228	023-17140-102	Pre-Pressure Spring; Left; Drum	2	20	17	
229	023-17145-104	Ink Pump Ass'y	1	11	17	
230	023-17155-100	*Cartridge Guide; Lower	1	11	6	
231	023-17156-009	*Holder; Rf-Tag Reader; Drum	1	11	14	
232	023-17157-102	*Bottle Catch	1	11	9	
233	023-17158-001	*Bracket; Ink Bottle Set SW	1	11	8	
234	023-17160-006	*Maintenance Cap	1	11	7	
235	023-17176-000	Cover; Rear Handle	1	9	37	
236	023-17177-006	Spring; Drum Lock link	1	9	19	
237	023-17191-106	*Release Lever; Clamp Plate	1	10	25	
238	023-17192-005	Stay; Drum Frame Front	2	9	33	
239	023-17197-007	Lock Ring 4	3	12	3	
240	023-17197-007	*Lock Ring 4	1	23	8	
241	023-17197-007	*Lock Ring 4	3	25	31	
242	023-17197-007	*Lock Ring 4	1	26	52	
243	023-17226-007	Ink Blocking Plate; Rear	1	12	16	
244	023-17227-003	Ink Blocking Plate; Front	1	12	11	
245	023-17228-000	Base ; Ink Blocking Plate (Rear)	1	12	15	
246	023-17229-006	Base ; Ink Blocking Plate (Front)	1	12	10	
247	023-17244-005	Cover; B Position Lock Lever	1	9	28	
248	023-17248-108	*Arm; RF-Tag Reader holder; Drum	1	11	12	
249	023-17249-104	*Shaft; Rf-Tag Reader; Drum	1	11	11	
250	023-17250-005	*Spring; Rf-Tag Reader; Drum	1	11	13	
251	023-17251-001	*Spring; Clamp Plate Base	2	10	23	
252	023-17254-000	Ground Plate; Ink	1	11	4	
253	023-17261-007	Weight Balance R; B	1	10	16	
254	023-17262-003	Weight Balance F; B	1	10	10	
255	023-17263-000	Metal Stopper; Drum	1	10	17	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
256	023-17275-008	*Spring; Clamp Plate Close	2	10	27	
257	023-17294-002	Fixing Plate; Drive Shaft A3	1	12	32	
258	023-17301-009	Seal; Setting Cartridge	1	9	41	
259	023-17302-005	Seal; Drum Set Position	2	9	40	
260	023-17302-005	Seal; Drum Set Position	2	13	9	
261	023-17305-004	Ink Replace Instruction Sticker; Pic	1	32	8	
262	023-17306-108	Seal; Ink Color	1	9	43	
263	023-17307-007	B Position Marking Sticker	1	9	42	
264	023-17307-007	B Position Marking Sticker	1	10	12	
265	023-17321-301	Seal; Drum Type	1	9	44	
266	023-17333-008	Spring ; Doctor Roller	2	12	5	
267	023-17334-209	*Adj. Plate R; Squeegee Gap	1	12	30	
268	023-17336-201	*Adj. Plate L; Squeegee Gap	1	12	24	
269	023-17344-204	Light Absorber Strip(65X18)	2	10	30	
270	023-17351-103	Seal; Drum Type C	1	9	44	C
271	023-21001-001	Release Plate	1	15	33	
272	023-21003-004	Adjustment Plate	1	15	12	
273	023-21005-007	Stopper; Separator	1	15	13	
274	023-21007-000	Release Lever; Separator	1	15	10	
275	023-21010-000	*Spring; Adj. Valve; Air Blow	1	6	42	
276	023-21010-000	*Spring; Adj. Valve; Air Blow	1	15	27	
277	023-21011-104	*Adj. Valve; Air blow	1	15	26	
278	023-21013-409	*Cylinder Base Bracket; Air Pump	1	15	16	
279	023-21016-106	Air Hose; Separator	1	15	6	
280	023-21017-102	*Base; Separation Fan	1	15	1	
281	023-21018-001	*Air Nozzle	2	15	3	
282	023-21021-002	*Cylinder; Air Pump	1	6	41	
283	023-21021-002	*Cylinder; Air Pump	1	15	20	
284	023-21023-200	*Timing Plate; Air Pump	1	15	18	
285	023-21321-103	*M Wing Rear	1	16	9	
286	023-21322-100	*M Wing Front	1	16	4	
287	023-21323-106	*S Wing; Rear	1	16	10	
288	023-21324-102	*S Wing; Front	1	16	5	
289	023-21328-000	*Spring; Wing Front	2	16	7	
290	023-21329-104	*link Plate; S Wing	1	16	13	
291	023-21331-001	*link Plate; M Wing	1	16	14	
292	023-21332-008	*Spring; Wing Rear	2	16	8	
293	023-21361-105	*Shaft; Belt Driven Pulley	1	16	2	
294	023-21381-203	Cover plate; Suction	1	16	50	
295	023-21384-008	Cover plate; suction cover	1	16	48	
296	023-21393-007	*light Absorber Strip(35X28)	1	15	4	
297	023-21408-004	*MW cam; Wing	1	16	34	
298	023-21409-108	*SW cam; Wing	1	16	36	
299	023-21410-106	*W Cam Shaft; Wing	1	16	33	
300	023-21411-102	*Wing Shaft Suction	1	16	29	
301	023-21601-106	*Paper Receiving Tray	1	17	20	
302	023-21602-307	*Side Frame F; P.-Rcv.-T.	1	17	18	
303	023-21603-303	*Side Frame R; P.-Rcv.-T.	1	17	17	
304	023-21606-205	*Paper Guide F; P.-Rcv.-T.	1	17	10	
305	023-21607-201	*Paper Guide R; P.-Rcv.-T.	1	17	9	
306	023-21608-003	*Back Stopper; P.-RCV.-T	1	17	1	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
307	023-21612-108	**Flap; P.-Rcv.-T	12	17	13	
308	023-21613-007	**Balancer; Flap; P.-RCV.-T.	12	17	14	
309	023-21614-003	**Flap Cover; P.-Rcv.-T.	4	17	11	
310	023-21615-204	**Holder; Flap; P.Rcv.-T	4	17	12	
311	023-21621-000	*Lever; Paper Guide; P.-Rcv.-T.	3	17	8	
312	023-21622-006	Magnet Catch; P.-Rcv.-T.	1	1	28	
313	023-21633-105	*Ground Plate; Slide Rail; P.Rcv.-T.	1	17	19	
314	023-21634-101	*Shaft; Fence	3	17	3	
315	023-21635-108	*Slide Base; P.Rcv.-T.	3	17	4	
316	023-21636-007	*Slide Plate(Upper); P.-Rcv.-T.	3	17	7	
317	023-21637-003	*Slide Plate(Lower); P.-Rcv.-T.	3	17	5	
318	023-21638-000	*Plate Spring; P.-Rcv.-T	6	17	6	
319	023-21639-006	*Slide Rail; Paper Guide; P.-Rcv.-T.	2	17	15	
320	023-21640-004	*Slide Rail; Paper Stopper; P.-Rcv.-T.	1	17	16	
321	023-21641-400	Support Plate F; P.-Rcv.-T.	1	1	26	
322	023-21642-406	Support Plate R; P.-Rcv.-T.	1	1	27	
323	023-21643-003	Bracket; Magnet Catch; P.-Rcv.-T.	1	4	36	
324	023-21643-003	*Bracket; Magnet Catch; P.-Rcv.-T.	1	17	22	
325	023-21801-008	Seal; Folding Tray Inst.; P.-Rcv.-T.	1	16	49	
326	023-21802-004	*Seal; P.-Pcv.-T.Folding Pic	1	17	21	
327	023-24002-203	*Side Frame F; M.-Rmv.	1	26	1	
328	023-24009-208	*Side Frame R; M.-Rmv.	1	26	2	
329	023-24016-107	*Stay A; M.-Rmv.	1	26	3	
330	023-24017-200	*Stay B; M.-Rmv.	1	26	4	
331	023-24021-305	*Housing; M.-Rmv.	1	25	1	
332	023-24025-300	*Pulley Shaft; M.-Rmv	1	25	18	
333	023-24026-005	*Bracket Master Loading Sensor A3	1	25	25	
334	023-24030-100	*Master Removal Roller	1	26	11	
335	023-24035-403	*Disposal Box	1	24	2	
336	023-24036-108	*Cover; Disposal Box	1	24	1	
337	023-24043-007	*Bracket; Master removal unit	1	26	5	
338	023-24056-001	*Bracket; M.-RMV. Sensor	1	25	27	
339	023-24057-105	*Master Removal Roller (UP)	1	25	17	
340	023-24058-004	*Spring A Front; M-Rmv. Roller	1	25	20	
341	023-24059-000	*Spring A Rear; M-Rmv Roller	1	25	21	
342	023-24061-102	*Pulley; M-Rmv	8	25	13	
343	023-24062-109	*Plate; M.-Rmv. Pulley	4	25	12	
344	023-24063-300	*Shaft; Pulley; M-Rmv	4	25	14	
345	023-24066-104	*Shaft; Plate Pulley; M-Rmv	1	25	10	
346	023-24067-003	*Spring; Plate Pulley; M-Rmv	4	25	15	
347	023-24074-000	*Bracket; FG Sensor; Compression Plate	1	26	46	
348	023-24084-102	*Shaft H; Gear	1	26	35	
349	023-24091-109	*Bracket; Compressing Motor	1	26	38	
350	023-24097-107	*Gear Cover; Compression Plate	1	26	42	
351	023-24099-304	*M Compression Plate	1	26	6	
352	023-24100-108	*Wire Harness; M-Rmv	1	25	32	
353	023-24101-007	*Wire Harness M; M-Rmv Unit	1	26	53	
354	023-24102-003	*Wire Harness U; M-Rmv Unit	1	26	54	
355	023-24103-000	Cover; M.-Rmv.	2	24	9	
356	023-24113-102	*Release Lever; M.-Rmv.	1	26	23	
357	023-24117-000	*Knob; Release Lever; M.-Rmv.	1	26	24	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
358	023-24118-007	*Spring; M.-Rmv Release Lever	1	26	26	
359	023-24119-003	*Guide Plate; Disposal Box	1	26	20	
360	023-24120-001	*Manual Compression Lever	1	26	21	
361	023-24121-105	*Link Plate; M.-Rmv.	1	26	19	
362	023-24124-104	*Hook Shaft; M Removal Roller Lower	1	26	12	
363	023-24125-208	*Holding Plate Front; M.-Rmv.	1	26	13	
364	023-24126-000	*Roller; Hook; M.-Rmv.	2	26	16	
365	023-24127-200	*Holding Plate Rear; M.-Rmv.	1	26	14	
366	023-24128-002	*Bracket ; Housing; M.-RMV.	2	25	2	
367	023-24129-009	*Holding Plate; Pulley; M.-Rmv.	4	25	11	
368	023-24130-007	*Hook F; M-Rmv Roller	1	25	7	
369	023-24131-003	*Hook R; M-Rmv Roller	1	25	8	
370	023-24132-000	Bracket; M.-Rmv.	2	24	8	
371	023-24133-103	*Bracket; Gear; M.-RMV.	1	26	32	
372	023-24134-100	*Spring; Safety SW; M-Rmv Unit	1	26	48	
373	023-24135-009	*Set Plate;Safety SW; M.-Rmv.	1	26	49	
374	023-24136-102	*Stopper Boss	1	26	25	
375	023-24137-001	*Spring Hook R; Trans. Roller; M-Rmv	1	25	9	
376	023-24140-304	*Box Lever; Disposal box	1	24	3	
377	023-24143-109	*Seal; Disposal Instruction; Pic	1	24	7	
378	023-24144-105	*Shaft; M-Rmv Guide	1	25	3	
379	023-24145-004	*M-Rmv Guide A	1	25	4	
380	023-24146-000	*M-Rmv Guide B	2	25	5	
381	023-24147-007	*Spring; M-Rmv Guide	3	25	6	
382	023-24148-003	*Handle Spring; Disposal Box	1	24	5	
383	023-24166-109	*Box Guide R; M.-Rmv.	1	26	55	
384	023-26000-100	**Bracket Plate; Clamp Drive	1	14	3	
385	023-26005-005	*Bracket ;Clamp Sensor	1	14	8	
386	023-26018-000	*Wire Harness; Clamp Unit	1	14	10	
387	023-28001-007	Bracket Front Upper; Rail; M.-M.	1	20	14	
388	023-28002-003	Bracket Rear Upper; Rail; M.-M.	1	20	16	
389	023-28003-107	Bracket; Slide Lock; M.-M.	1	20	33	
390	023-28006-106	*Master Flange; Front	1	22	45	
391	023-28007-005	**Master Flange; Rear	1	22	63	
392	023-28010-006	Guide Bracket;Wire Harness; M.-M.	1	20	29	
393	023-28012-009	Bracket Rear Bottom; Rail; M.-M.	1	20	20	
394	023-28013-200	*Bottom Stay; M.-M Unit	1	22	14	
395	023-28014-109	*Upper Stay; M.-M Unit	1	23	5	
396	023-28015-008	*Box Stay; M.-Making	1	22	21	
397	023-28016-004	*Bracket; PCB; M.-Making	1	20	6	
398	023-28021-202	**Plate T-Rear; TPH	1	21	35	
399	023-28022-209	**Plate T-Front; TPH	1	21	36	
400	023-28024-104	**Holding Roller; TA3	1	21	39	
401	023-28036-200	*Shaft; M Set Guide Plate	1	22	37	
402	023-28037-206	**Write Roller; D23-A3	1	22	25	
403	023-28044-105	*Shaft; M. Loading Roller	1	23	10	
404	023-28045-101	*Stocker Roller; A3	1	22	33	
405	023-28046-108	*M. Loading Roller; A3	1	23	7	
406	023-28048-100	*Load Roller; A3	1	23	13	
407	023-28051-004	*Guide Plate; Stoker	1	23	14	
408	023-28052-000	*Hook Spring; Stoker Guide Plate	1	23	15	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
409	023-28053-104	*Cover; Master Pos. Sensor	1	23	46	
410	023-28057-100	**Cutter Guide Upper; A3	1	23	32	
411	023-28058-106	**Cutter Guide Lower; A3	1	23	33	
412	023-28070-009	*Handle; M.-M.	1	22	4	
413	023-28071-102	*Hook Right; Handle; M.-M.	1	22	7	
414	023-28072-001	*Spring; Hook; M-M	2	22	9	
415	023-28073-008	*Lower Stay; M.-Making	1	22	17	
416	023-28074-101	*Reinforcement Plate; M.-M. Frame	1	22	16	
417	023-28076-104	*Shaft; Drawer Connector; M.-M Unit	2	23	3	
418	023-28078-000	*Spring; Drawer Connector	2	21	64	
419	023-28082-007	*Positioning Pin; Front; M.-M	2	22	13	
420	023-28084-000	Bracket Front Bottom; Rail; M.-M.	1	20	19	
421	023-28085-006	Bracket; Drawer Connector; M.-M.	1	20	25	
422	023-28086-002	Positioning Pin; Rear; M.-M	2	20	23	
423	023-28092-207	*Rear Frame; M.-M Unit	1	22	1	
424	023-28093-106	**Shaft; Load Roller Upper; A3	1	23	37	
425	023-28114-200	*M Set Guide Plate B;A3	1	22	35	
426	023-28115-207	*Spring B Front; M Set Guide Plate	1	22	38	
427	023-28117-005	Guide Upper; Flexible Wire; M.-M	1	20	28	
428	023-28119-008	Cover; M.-M. Unit Safety SW	1	20	39	
429	023-28121-002	Hook Stopper; Handle; M.-M.	1	20	35	
430	023-28122-203	Shaft; Stopper; M.-M.	1	20	34	
431	023-28124-109	*Master Roll Holder; Bottom	1	22	19	
432	023-28130-001	**Fulcrum Plate; Master Roll Holder	1	22	52	
433	023-28131-105	**Shaft; Master Roll Holder	1	22	53	
434	023-28132-101	**Lever Shaft; Master Roll Holder	1	22	54	
435	023-28133-000	**Lever; Master roll Holder	1	22	56	
436	023-28134-007	**Hook; Master Roll Holder	1	22	58	
437	023-28135-003	**Lever Spring; Master Roll Holder	1	22	57	
438	023-28136-000	**Guide Spring; Master Holder	1	22	60	
439	023-28141-003	*Fulcrum Lever; Stoker	1	23	21	
440	023-28148-105	*Hook Shaft; M.-M Unit	2	23	4	
441	023-28150-304	*Frame; M-M Upper Unit	1	21	1	
442	023-28151-106	*Pivot Support Plate Front; M.-M Up	1	21	14	
443	023-28152-005	*Spring Hook Bracket Rear; TPH Pressure	1	21	7	
444	023-28154-202	*Shaft; M.-M Upper Unit	1	21	10	
445	023-28155-004	*Spring Front; M.-M Up	1	21	13	
446	023-28156-000	*Spring Rear; M.-M Up	1	21	8	
447	023-28157-104	*Shaft; Handle; M-M Up	1	21	2	
448	023-28158-305	*Pivot Shaft; TPH	1	21	23	
449	023-28159-301	*Pressure Lever Bracket; M.-M Up	2	21	25	
450	023-28160-008	*Pressure Release Plate; TPH Press	1	21	24	
451	023-28162-000	*Bottom Cover; TPH; M.-M.	1	21	21	
452	023-28165-000	**Cam; TPH Pressure	1	21	45	
453	023-28166-103	**Shaft; TPH Pressure Cam	1	21	47	
454	023-28168-106	**Bracket; TPH Pressure Motor	1	21	44	
455	023-28172-006	**Holding Plate; Worm Gear	1	21	58	
456	023-28173-304	*TPH Alignment Shaft	1	21	27	
457	023-28174-505	**TPH Holder; TA3	1	21	29	
458	023-28175-200	**Bracket; TPH Brush; TA3	1	21	37	
459	023-28177-202	*Safety Stopper; M.-M Up	1	21	15	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
460	023-28184-101	**Shaft; Stoker roller Upper; A3	1	23	34	
461	023-28190-209	**M Transfer Roller; Wide Width	2	23	35	
462	023-28191-205	**M Transfer Roller; Middle Width	4	23	36	
463	023-28192-201	**M Transfer Roller; Short Width	2	23	38	
464	023-28194-107	*Holding Plate R; Stoker Guide Plat.	1	23	16	
465	023-28195-103	**Bracket; Write Pulse Motor	1	20	1	
466	023-28196-100	**Bracket; Load Pulse Motor	1	23	27	
467	023-28199-001	Guide Lower; Flexible Wire; M.-M	1	20	27	
468	023-28200-000	Guide Roller; Wire Harness; M.-M.	1	20	32	
469	023-28202-207	Bracket; M.-M. Unit Safety SW	1	20	40	
470	023-28204-005	Bracket Upper; Junction PCB; M.-M.	1	28	2	
471	023-28206-105	*Hook Left; Handle; M.-M.	1	22	6	
472	023-28207-004	*Actuator plate; M.-M. Set Sensor	1	22	8	
473	023-28209-007	*Spring; Handle; M-M	1	22	12	
474	023-28210-005	*Master Guide Roller	2	22	20	
475	023-28213-101	**Shaft; Gear; TPH lift Motor	2	21	51	
476	023-28214-108	*Bracket; Set sensor; M.-M Upper	1	23	48	
477	023-28215-201	*Pushing Plate F; Set-Guide Plate	1	21	11	
478	023-28218-200	M.-Making Junction PCB	1	28	1	
479	023-28221-007	Bracket Lower; Junction PCB; M.-M.	1	28	3	
480	023-28222-003	Front Cover; M.-M. Unit	1	20	10	
481	023-28228-109	*Spring B Rear; M Set Guide Plate	1	22	36	
482	023-28229-105	*Stopper Front; M.-M Unit	1	22	39	
483	023-28231-002	*Stopper; M.-M. Close	1	22	48	
484	023-28232-009	*Base Bracket; Stopper; M.-M. Close	1	22	47	
485	023-28233-005	*Stopper Spring; M.-M Close	1	22	50	
486	023-28236-004	*Hook Lever; M.-M Up	1	21	3	
487	023-28237-000	*Hook; M.-M Up	2	21	4	
488	023-28238-104	Flexible Wire; M.-M	1	20	31	
489	023-28239-208	*Wire Harness; M.-M Unit	1	20	9	
490	023-28242-101	*Wire Harness; M Pos. Sensor	1	23	51	
491	023-28245-003	*Reinforce Plate; Lower; M.-M. Unit	1	22	18	
492	023-28247-103	*Stopper Rear; M.-M Unit	1	22	40	
493	023-28251-003	*Slide Guide 2; M.-M.	1	22	15	
494	023-28252-107	*Pivot Support Plate Rear; M.-M Up	1	21	9	
495	023-28253-103	*Pushing Plate R; Set-Guide Plate	1	21	6	
496	023-28315-206	**Protection Plate; TPH connector TA3	1	21	32	
497	023-28317-004	*Master Set Guide Bar	1	23	47	
498	023-28323-004	*Cutter Cover	1	23	45	
499	023-28327-204	**Master Guide Plate A;A3(D23)	1	23	42	
500	023-28328-103	*Gear Cover; M.-M UP	1	21	60	
501	023-28336-009	*Handle Stopper; M.-M.	1	22	10	
502	023-28338-109	*Shaft; Handle; M-M	1	22	3	
503	023-28339-008	Spring; Stopper; M.-M	1	20	36	
504	023-28340-006	**Guide; Master Loading	1	23	39	
505	023-28341-002	*Bracket Rear; Write Roller	1	22	31	
506	023-28342-106	*Bracket Front; Write Roller	1	22	29	
507	023-28343-005	*Guide; Handle; M.-M.	1	22	5	
508	023-28353-000	Holding Plate; Wire Harness; M.-M.	1	20	30	
509	023-28356-000	*Hook Spring; M.-M Up	1	21	5	
510	023-28358-002	Stopper; M.-M. Unit	1	1	24	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
511	023-28361-003	**Pressure Detection Plate; TPH	1	21	49	
512	023-28367-001	*Guide Block; M.-M. Unit Mount	2	23	6	
513	023-28371-009	**Master Holder Base; A3	1	22	55	
514	023-28372-005	**Damper Case; Master Holder	1	22	61	
515	023-28376-205	*Bracket; Gear Shaft; M Loading	1	23	24	
516	023-28377-007	*Rear Cover; M.-M. Unit	1	22	51	
517	023-28378-100	*Support Plate; Rear Frame; M.-M	1	22	65	
518	023-28380-008	*Pressure Plate; Write Roller	1	22	32	
519	023-28380-008	*Pressure Plate; Write Roller	1	23	20	
520	023-28381-004	*Bracket Front; TPH Pressure spring	1	21	12	
521	023-28382-205	*Bracket; TPH Drawer Connector UP	1	21	63	
522	023-28383-104	*Fulcrum Plate; Master Stocker	1	23	19	
523	023-28394-009	**Reinforcement Plate; Master Holder Base	1	22	59	
524	023-28396-001	*Bracket; Stopper; M Set Guide Plate	1	22	41	
525	023-28397-105	*Shaft; Stopper; M Set Guide Plate	1	22	42	
526	023-28398-004	*Stopper; M Set Guide Plate	1	22	43	
527	023-28399-000	*Stopper Spring; M Set Guide Plate	1	22	44	
528	023-28401-005	*Bracket Bottom; Master Making PCB	1	20	7	
529	023-28402-206	Slide Rail 2	1	20	18	
530	023-28403-008	*Spring; Safety SW /Drum&Mm	1	20	41	
531	023-28404-004	*Bracket; M.-M. Unit set SW	1	20	42	
532	023-28405-108	*Bracket; De-Elect. Brush; M Loading	1	23	11	
533	023-28408-000	Protection Plate; Wire Harness; M.-M.	1	1	25	
534	023-28410-004	*De-Electricity Brush ; A3	1	21	22	
535	023-28411-000	**De-electricity Brush; TPH A3	1	21	38	
536	023-28412-201	**TPH Boss	2	21	31	
537	023-28413-100	**TPH Pressure Assist Plate; A3	2	21	30	
538	023-28415-006	*De-Electricity Brush; M Loading	1	23	12	
539	023-28417-009	*Lower Bracket; Master End Sensor	1	22	23	
540	023-28418-005	*Upper Bracket A3; Master End Sensor	1	21	17	
541	023-28421-200	**Cutter Unit(rotary)	1	23	41	
542	023-28423-009	Seal; TPH; Pic.	1	21	62	E,U
543	023-28424-005	Seal; TPH; Eng.	1	21	62	A
544	023-28425-001	Seal; TPH; Ch.	1	21	62	C
545	023-28426-202	*Seal; Master Making Unit	1	21	16	
546	023-28427-004	*Cover; Master End Sensor	1	21	19	
547	023-28428-000	Seal; Master Making Unit Cover	1	20	12	
548	023-28431-001	*light Absorber Strip(21X15)	1	21	18	
549	023-28432-105	**Write Roller liner 3	1	22	27	
550	023-28433-101	**Shaft; Gear 8; TPH lift Motor	1	21	53	
551	023-28435-007	*Spring; TPH Alignment Shaft	1	21	68	
552	023-28942-103	*Seal; TPH Cleaning; Pic.	1	21	61	
553	023-28944-009	Seal;Setting Master;Pic.	1	20	11	
554	023-28946-001	*Seal; Pos. Leading Edge Of Master; Pic	1	23	43	
555	023-30003-009	Bracket; FB Scanner	6	18	9	
556	023-30006-008	*Actuator Plate; Stage cover Actuator	1	31	5	
557	023-30007-004	*Frame; Stage Cover	1	31	3	
558	023-30008-000	*Stage Cover	2	31	1	
559	023-30070-105	*Stage Cover Hinge Ass'y 3	2	31	6	
560	023-30071-004	*Bracket; Stage cover closing sensor	1	18	8	
561	023-30073-007	*Actuator 2; Scanner	1	18	7	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
562	023-30075-000	Stage Pad 2; Stage Cover	1	31	2	
563	023-34005-308	Front Door	1	32	1	
564	023-34006-207	Hinge Top; Front Door	1	32	12	
565	023-34007-203	Hinge Bottom; Front Door	1	32	13	
566	023-34015-001	Cover; Master Loading	1	32	11	
567	023-34024-108	Bracket Lower; Rear Cover	2	32	23	
568	023-34030-000	Side Cover; Paper Ejection Side	1	32	15	
569	023-34032-100	Side Cover; Paper Feeding Side	1	32	17	
570	023-34041-100	Cover; Scanner; P.-Rcv. Side	1	32	16	
571	023-34053-205	Bracket; Sensor; Front Cover	1	27	30	
572	023-34054-007	Seal; Magnet Adjuster	1	32	26	
573	023-34101-200	Rear Cover; RZ5	1	32	22	
574	023-37031-008	*Start Key; Eng.	1	27	10	U,A
575	023-37032-004	*Start Key; Pic.	1	27	10	E
576	023-37033-108	*Start Key; Ch.	1	27	10	C
577	023-37036-000	*Stop Key; Eng.	1	27	7	U,A
578	023-37037-006	*Stop Key; Pic.	1	27	7	E
579	023-37038-002	*Stop Key; Ch.	1	27	7	C
580	023-37041-003	*Test Print Key; Eng.	1	27	9	U,A
581	023-37042-000	*Test Print Key; Pic.	1	27	9	E
582	023-37043-006	*Test Print Key; Ch.	1	27	9	C
583	023-37046-005	*Reset Key; Eng.	1	27	6	U,A
584	023-37047-001	*Reset Key; Pic.	1	27	6	E
585	023-37048-008	*Reset Key; Ch.	1	27	6	C
586	023-37050-100	*Print Mode Key	1	27	8	
587	023-37056-000	*Wake-Up Key	1	27	5	
588	023-43775-400	*LCD Control Unit	1	27	25	
589	023-50004-001	Hinge Bracket; Lower	1	30	12	
590	023-50022-000	Bracket; Counter	1	27	38	
591	023-50024-002	Bracket; Rf-Tag PCB	1	27	33	
592	023-50041-004	Spring; Drive Interlock SW	2	28	6	
593	023-50042-000	Shaft Bracket; Drive Interlock SW	2	28	5	
594	023-50043-104	Frame; Drive Interlock SW; P.-Rcv. Side	1	28	11	
595	023-50044-100	Frame; Drive Interlock SW; P.-F. Side	1	28	4	
596	023-50051-107	Bracket P-Rcv Side; Drive Interlock SW	1	28	12	
597	023-50052-103	Bracket Pf Side; Drive Interlock SW	1	28	9	
598	023-50053-002	Spring; SW Bracket; D Interlock SW	2	28	10	
599	023-50055-102	Button; Drive Interlock SW	2	28	7	
600	023-53003-006	Wire Harness; Master Rf-Tag	1	27	37	
601	023-53003-006	Wire Harness; Master Rf-Tag	1	28	22	
602	023-53017-007	*Wire Harness; FB Pulse Motor	1	6	8	
603	023-53023-007	Elevator Safety SW	1	2	9	
604	023-53023-007	Elevator Safety SW	1	3	14	
605	023-53025-000	Safety SW Ass'y ; M-M,M-Rmv. Unit	1	20	43	
606	023-53026-006	Drive Interlock Safety SW	2	28	8	
607	023-53031-000	*Safety SW Assy; M.-Rmv.	1	26	51	
608	023-74001-054	*Motor Assy(CWRS-445PA)	1	3	31	
609	023-74001-054	**Motor Assy (CWRS-445PA)	1	14	7	
610	023-74001-054	**Motor Assy (CWRS-445PA)	1	21	56	
611	023-74001-054	*Motor Assy (CWRS-445PA)	1	26	40	
612	023-74002-050	*Suction Motor;Ccws-55PH	1	26	27	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
613	023-75070-050	*Clamp Motor Assy (3-7)	1	14		
614	023-75071-056	*Pressure Roller Support; Front Ass'y	1	8	4	
615	023-75072-052	*Pressure Roller Support; Rear Ass'y	1	8	5	
616	023-75076-058	Pressure Control Assy(1-10,12,13)	1	6		
617	023-75078-050	Elevator Motor Assy (23-32)	1	3		
618	023-75081-051	*Cutter Unit	1	23		
619	023-75095-052	P.-Rcv.-T Unit(1-23)	1	17		
620	023-75097-357	Disposal Box Unit (1-7)	1	24		
621	023-75113-050	Unit / Stage Cover(1-6)	1	31		
622	023-75114-057	*Write Roller Assy A3(25-27)	1	22		
623	023-75123-056	Cartridge Guide Assy(6-15)	1	11		
624	023-75135-259	Master Removal Unit (Fig25, Fig26)	1	25		
625	023-75137-057	*Master Roll Holder Assy A3(52-64)	1	22		
626	023-75140-058	*Master Guide Assy (31-40)	1	23		
627	023-75143-057	*TPH Pressure Motor Assy SU	1	21		
628	023-75144-053	*Load Pulse Motor Assy	1	23		
629	023-75145-050	*Write Pulse Motor Ass'y; SU (#1-5)	1	20		
630	023-75147-052	*Flap ; P.-Rcv.T. Ass'y	4	17		
631	023-75159-050	Elevator Shaft Ass'y	1	3	4	
632	023-75165-050	*Front Frame; M.-M. Unit	1	22	2	
633	024-12101-009	*Feed Tray Cover	1	4	3	
634	024-12102-102	*PFT Table L	1	4	1	
635	024-12105-004	*Shaft; PF Tray	1	4	8	
636	024-12106-000	*Fence; Tray F	1	4	26	
637	024-12107-007	*Fence; Tray R	1	4	27	
638	024-12108-100	*PFT Table S	1	4	30	
639	024-12109-000	*Shaft; Hinge	1	4	15	
640	024-12110-008	*Slide Rack; P-F-T	2	4	11	
641	024-12111-004	*Cover; Hinge	1	4	14	
642	024-12112-000	*Frame; PF Tray F	1	4	13	
643	024-12113-007	*Frame; PF Tray R	1	4	18	
644	024-12116-006	FFC Cover	1	4	32	
645	024-12119-005	Fixed Plate; PFT	2	4	31	
646	024-12120-003	*Lever; Fence Lock	2	4	25	
647	024-12121-000	*Seal; Fence Set	1	4	29	
648	024-12122-006	*Seal; PFT Close	1	4	2	
649	024-12123-002	*Fence Sheet	4	4	28	
650	024-12125-005	FFC Holder	1	4	33	
651	024-12127-008	*Bracket; Potentiometer	1	4	20	
652	024-12201-100	Plate; Elevator F	1	3	2	
653	024-12206-005	Absorber Gear	1	3	3	
654	024-12207-109	Plate; Elevator R	1	3	1	
655	024-12209-101	Bracket; PFR-PCB	1	3	34	
656	024-12210-002	Reinforce Elevator	1	3	5	
657	024-12211-009	Guide Shaft	1	3	6	
658	024-12213-001	Elevator Guide	1	3	9	
659	024-12214-008	FFC GUIDE	1	3	20	
660	024-12215-101	E Spring Hook R	1	3	19	
661	024-12216-000	Detection Plate; Paper Volume	1	3	39	
662	024-12401-100	*Base; Stripper Unit	1	8	49	
663	024-12403-005	*Stripper Cam	1	8	64	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
664	024-12404-109	*Shaft; Stripper Cam	1	8	68	
665	024-12405-008	*Stripper ADJ Arm	1	8	65	
666	024-12406-004	*Plate;Stripper Shaft Catch	1	8	66	
667	024-12510-200	*Cover; Multiple Sensor U	1	8	35	
668	024-12519-100	*Multiple Sensor Shield	1	8	34	
669	024-12530-007	*Pressure Plate; Guide Roller	1	8	29	
670	024-12531-208	*Guide Roller; MZ	1	8	21	
671	024-12602-105	*PF-TRAY-PCB	1	4	19	
672	024-12607-107	Wire Harness; PF Tray	1	3	37	
673	024-12607-107	Wire Harness; PF Tray	1	4	34	
674	024-12608-103	*Wire Harness PF Tray Inner	1	4	24	
675	024-15172-004	Spring;ONE-WAY Hook	1	2	42	
676	024-15172-004	Spring;ONE-WAY Hook	1	6	25	
677	024-15173-000	PF ONE-WAY Core Assy	1	2	43	
678	024-15187-109	ONE-WAY Hook	1	2	40	
679	024-17003-005	Hanger Plate; Screen	1	10	4	
680	024-17008-104	Drum Joint	1	10	18	
681	024-17009-003	Flange Gear	1	10	13	
682	024-17010-109	Boss;A-Positioning ADJ	1	10	19	
683	024-17011-008	Block Sheet Assy;A3W	1	10	5	
684	024-17027-001	S-Gap Cam	2	12	4	
685	024-17030-100	*Squeegee Roller; A3	1	12	17	
686	024-17035-004	*Ink Drive Shaft; A3	1	12	19	
687	024-17046-103	Stay;Drum Frame	2	9	34	
688	024-17048-009	Drum Frame Front	1	9	1	
689	024-17051-000	Lever;B Position Lock	1	9	27	
690	024-17060-009	Stay;Rail	1	13	6	
691	024-17063-105	Slide Rail	2	13	1	
692	024-17067-100	*Clamp Plate Base	1	10	20	
693	024-17068-107	*Clamp Plate	1	10	24	
694	024-17071-108	*Projection Plate	1	10	28	
695	024-17091-109	Cover;Front Frame	1	9	39	
696	024-17095-007	Drum Lever	1	9	8	
697	024-17111-100	Center Shaft	1	12	7	
698	024-17115-008	Screen Assy (S)	1	10	2	
699	024-17125-100	*Side Frame; Squeegee R Assy	1	12	28	
700	024-17126-107	*Side Frame; Squeegee F Assy	1	12	23	
701	024-17135-009	Cover;Drum Release	1	9	9	
702	024-17136-005	Drum Lock Plate	1	9	13	
703	024-17138-105	Shaft;Drum Lock Plate	1	9	11	
704	024-17149-000	Flange Handle	1	10	11	
705	024-17152-000	Shaft;B Position Release	1	9	29	
706	024-17154-003	Bracket;Drum Lock	1	9	10	
707	024-17161-107	Drum Lock Joint Plate	1	9	16	
708	024-17162-006	Shaft;Drum Lock	1	9	15	
709	024-17164-106	*Bracket; D-Lock Sensor	1	13	45	
710	024-17166-109	Base;B Position Release	1	13	12	
711	024-17171-102	Wire Harness; Drum Drawer	1	9	22	
712	024-17172-001	Wire Harness; Drum Inner	1	11	18	
713	024-17175-000	Bracket;Drum PCB	1	9	25	
714	024-17178-107	Drum PCB	1	9	26	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
715	024-17180-004	*Friction Sheet	1	10	22	
716	024-17181-000	*Clamp Magnet	1	10	21	
717	024-17203-004	Guide;Front Frame R	1	13	7	
718	024-17204-000	Guide;Front Frame L	1	13	8	
719	024-17256-000	Seal Tape; A3W	1	10	6	
720	024-17273-002	Lock Chip B-Position	1	9	31	
721	024-17278-101	Bracket; B-Release Base	1	13	11	
722	024-17329-008	*Doctor Roller; A3	1	12	18	
723	024-17400-004	Guide;Front Frame Cover	2	13	10	
724	024-17401-000	Bracket;Drum Lever R	1	9	7	
725	024-17402-007	Bracket;Drum Lever L	1	9	6	
726	024-17403-003	Drum Lock Arm	1	9	14	
727	024-17404-000	Drum Lock Joint Shaft	1	9	17	
728	024-17428-006	*Shaft;Projection Support	1	10	29	
729	024-17500-106	Slide Shaft R Assy	1	13	13	
730	024-17502-109	Pin Catch L Assy	1	9	5	
731	024-17503-105	Pin Catch R Assy	1	9	2	
732	024-17509-006	Collar B Position	1	9	30	
733	024-17511-000	Plate;Center Shaft	1	12	9	
734	024-17517-009	Plate;Drum ADJ	1	9	20	
735	024-17518-005	Slide Shaft L Assy	1	13	14	
736	024-17520-107	Plate;Slide Shaft ADJ	1	13	15	
737	024-17524-005	*Sub Movable Plate	1	13	25	
738	024-17525-001	*Detection Plate	1	13	47	
739	024-17527-101	Solenoid Cover	1	13	48	
740	024-18001-006	*Base;Horizontal Movement	1	13	22	
741	024-18002-002	*Base; Horizontal Motor	1	13	16	
742	024-18008-000	*Horizontal Screw	1	13	33	
743	024-18009-007	*Spring; Horizontal	1	13	32	
744	024-18010-005	*Guide; H-Pressure Spring	1	13	24	
745	024-18011-001	*Washer	1	13	19	
746	024-18012-008	*Shaft; Horizontal Guide	3	13	43	
747	024-18013-101	*Bracket; Horizontal Sensor	1	13	27	
748	024-18014-000	*Movable Plate	1	13	35	
749	024-18015-007	*Link Plate; Horizontal	1	13	44	
750	024-18017-000	*Slide Guide; Horizontal	1	13	31	
751	024-18019-002	*Shaft;D-Lock	1	13	42	
752	024-18020-108	*D-Lock Lever	1	13	40	
753	024-18021-007	*Spring; D-Lock	1	13	41	
754	024-18022-003	*SW Base Plate	1	13	36	
755	024-18025-100	Bracket;Drawer	1	9	21	
756	024-18027-005	*SW Plate	1	13	38	
757	024-18028-001	*Spring; Safety SW	1	13	37	
758	024-18029-008	*Catch; Horizontal Screw	1	13	34	
759	024-18030-006	*Catch; Horizontal Guide Shaft	4	13	23	
760	024-18031-002	*Plate; Horizontal Sensor Cover	1	13	28	
761	024-19004-009	*Shaft;Partial Pressure	1	8	3	
762	024-21038-000	Separator; MZ	1	15	8	
763	024-21306-101	*Drive Shaft Suction	1	16	16	
764	024-21309-100	*Belt Roller Plate	1	16	11	
765	024-21325-106	*Base; Wing Drive	1	16	27	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
766	024-21333-001	*Feed Plate F	1	16	41	
767	024-21334-008	*Feed Plate R	1	16	43	
768	024-21338-100	*Wing Shaft	2	16	6	
769	024-21341-004	*Belt Roller	1	16	12	
770	024-30002-107	Hinge Bracket; Flat Bed	2	18	12	
771	024-30007-001	*Flat Cable; ASM-Main I/F 600	1	18	35	
772	024-30008-008	*ASM-APS-Sensor-M	1	18	25	
773	024-30009-101	*Harness; ASM-Size Sensor-M	1	18	29	
774	024-30010-207	*Harness; ASM-SISESENS-MI	1	18	30	
775	024-37137-105	*Mode Key PCB	1	27	19	
776	024-37344-003	*Display Mode Key; Eng.	1	27	17	U,A
777	024-37345-000	*Display Mode Key; Pic.	1	27	17	E
778	024-37346-006	*Display Mode Key; Ch.	1	27	17	C
779	024-50008-209	Card Cover	1	30	6	
780	024-50025-200	Cover; NET-D	1	30	5	
781	024-50502-602	SH4F PCB	1	30	2	U,A,E
782	024-50504-206	SH4F PCB C	1	30	2	C
783	024-53035-100	Wire Harness; Front Upper	1	3	38	
784	024-74008-056	*Suiction Motor Assy	1	16	22	
785	024-75061-058	Drum Body A3	1	10	1	RZ97
786	024-75063-050	Drum Body LD	1	10	1	RZ99
787	024-75072-050	Stripper Unit (47-69)	1	8		
788	024-75073-056	Squeegee Unit Assy; A3 (17-31)	1	12		
789	024-75080-052	*Pressure Roller A3	1	8	6	
790	024-75089-050	PF Tray Assy (1-30)	1	4		
791	024-75100-053	Clamp Plate Base Assy (20-29)	1	10		
792	030-04034-006	Seal; P.-F.-T. Down	1	2	3	
793	030-12112-008	*Spring; Pressure Solenoid	1	7	33	
794	030-12114-108	*Lever; Pressure Solenoid	1	7	32	
795	030-12235-207	Support Plate; Main Motor	1	7	2	
796	030-14124-003	*Slider R; Paper Guide	1	4	9	
797	030-14126-006	*Slider F; Paper Guide	1	4	5	
798	030-14129-005	*Lock A; Paper Guide	2	4	7	
799	030-14130-003	*Lock B; Paper Guide	2	4	6	
800	030-14133-002	*Collar; Slide Rack; P-F-T	2	4	12	
801	030-14342-205	Support Plate B; Upper Limit	1	2	32	
802	030-14346-103	Upper Limit Adj. Screw	1	2	33	
803	030-14347-002	Base; Upper Limit Adj. Screw	1	2	34	
804	030-14458-300	Fix Plate; Load Spring	1	8	13	
805	030-14476-201	Load Spring	1	8	11	
806	030-14480-004	Tube; 3x5	1	8	12	
807	030-14521-002	*Lock;Fixing Block	1	8	52	
808	030-15249-004	*Roller (Inner); Transfer Belt	3	16	17	
809	030-16108-005	Shaft Holder; Right	1	20	22	
810	030-16108-005	*Shaft Holder; Right	1	23	1	
811	030-16109-001	Shaft Holder; Left	1	20	21	
812	030-16109-001	*Shaft Holder; Left	1	23	2	
813	030-16404-003	Ink Distributor	1	11	2	
814	030-16920-001	Connector Spring	2	9	23	
815	030-19205-001	*Support; Clamp Worm	1	3	32	
816	030-19205-001	**Support; Clamp Worm	1	14	6	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
817	030-19205-001	**Support; Clamp Worm	1	21	57	
818	030-19205-001	*Support; Clamp Worm	1	26	39	
819	030-19242-101	*Bracket A; Compression Gear	1	26	9	
820	030-19243-108	*Bracket B; Compression Gear	1	26	10	
821	030-19408-107	*Spring; Box Cover; Disposal Box	1	24	6	
822	035-14303-001	*Rubber; Pick-Up Roller	2	2	15	
823	045-10004-006	Stay; Master Making; Main Frame	1	1	7	
824	045-10005-002	Lower Stay; Drum	1	1	9	
825	045-10006-106	Main Stay; Main Frame	1	1	8	
826	045-10007-005	Bottom Plate; Main Frame	1	1	10	
827	045-10008-001	Reinforce Plate; Pressure Roller Frame	1	1	31	
828	045-10009-008	Support Bracket; FB Scanner	2	1	3	
829	045-10011-002	Cover; Main Motor	1	1	22	
830	045-10013-005	Lower Cover; Paper Feed	1	1	21	
831	045-10014-001	Guide Cover; Front	1	1	32	
832	045-10015-008	Guide Cover; Rear	1	1	33	
833	045-10017-000	Cover; Wire Harness	1	1	34	
834	045-12501-007	Timing Roller	1	8	9	
835	045-12502-100	Guide Plate (Lower)	1	8	45	
836	045-12504-103	*Guide Plate (Middle)	1	8	44	
837	045-12508-001	*Bracket; Multi. Feed Det. Sensor	1	8	42	
838	045-12509-008	Bracket F; Guide Plate M	1	8	30	
839	045-12510-006	Bracket R; Guide Plate M	1	8	31	
840	045-12511-002	*Cover L; Multi. Feed Det. Sensor	1	8	43	
841	045-12512-009	*Guide Plate (Upper)	1	8	33	
842	045-12517-000	Bracket; Guide Plate Lower	2	8	32	
843	045-12518-007	*Shaft; Guide Roller	1	8	28	
844	045-12601-001	Wire Harness; Paper Feed Upper	1	2	37	
845	045-12601-001	Wire Harness; Paper Feed Upper	1	8	38	
846	045-12602-008	*Wire Harness; Multi. Sensor U	1	8	37	
847	045-12603-004	*Wire Harness; Multi. Sensor L	1	8	39	
848	045-12611-007	*Wire Harness; Multi. Sensor J	1	8	40	
849	045-15002-001	*Main Shaft; Drive	1	7	9	
850	045-15003-008	*Shaft Joint; Drive	1	7	8	
851	045-15004-004	Shaft Bracket; Main Shaft	1	7	7	
852	045-15011-000	*Pressure Cam; A3	1	7	12	A3
853	045-15020-000	*Base Bracket; Pressure Solenoid	1	7	30	
854	045-15043-000	Sub Frame	1	7	37	
855	045-15048-001	*Bracket; Main Motor	1	7	22	
856	045-15050-006	Main Cover; Drive	1	7	1	
857	045-15056-004	*Timing Cam	1	5	15	
858	045-15066-000	*Spring; Vertical Gear	1	5	9	
859	045-15072-000	Cover Stay; Paper Feed Drive	1	5	26	
860	045-15098-009	*Gear Base Block; Vertical Gear	1	5	14	
861	045-15110-009	*Timing Plate; Air Damper	1	6	34	
862	045-15117-003	Hook Bracket; Print Pos. Base	1	5	27	
863	045-15118-000	Bracket; Ver. Print Pos. Base	1	5	25	
864	045-15121-108	*Main Gear; Drive	1	7	10	
865	045-15126-002	*Pressure Cam; Ledger	1	7	12	Ledger
866	045-15136-008	Pressure Lever Assy; Spring	1	7	20	
867	045-15140-005	Pressure Lever Assy; Cam	1	7	17	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
868	045-15145-007	Spring; Cam Follower	1	7	18	
869	045-15157-005	Bracket; Pressure Control Assy	1	6	16	
870	045-15162-009	Shock Absorber Pad; Pressure Lever	1	7	19	
871	045-15189-004	Sub Frame Stay	6	7	38	
872	045-15201-004	*Gear Base; Main Motor	1	7	23	
873	045-15204-003	*Cylinder Base Bracket; Air Damper	1	6	32	
874	045-15205-000	Damper Cover; Main Motor	1	7	28	
875	045-15206-006	*Set Plate; Adj. Valve	1	6	31	
876	045-15208-009	*Gear Boss ; Ver. Print Pos.	1	5	5	
877	045-15210-003	*Spring Collar	1	5	10	
878	045-15211-000	*Adj. Valve; Air Damper	1	6	43	
879	045-15501-008	Bracket; 1st Transmission	1	6	28	
880	045-15504-201	Hook Bracket; Spring	1	6	24	
881	045-15506-107	Bracket Base; Guide Roller Shaft	1	6	17	
882	045-15508-002	Release Lever	1	6	26	
883	045-15513-006	Hook Base;PF One-way	1	2	39	
884	045-15515-009	Base Bracket;PF One-way	1	2	38	
885	045-15517-001	Bracket; P.-F. Clutch	1	2	44	
886	045-15522-005	Gear Housing; Timing Gear	1	5	28	
887	045-15523-001	Timing Gear	1	5	29	
888	045-15524-008	Bracket; Timing Roller	1	5	1	
889	045-19012-001	*Stopper; Pressure Roller	2	8	2	
890	045-21002-005	Shaft; Separator	1	15	9	
891	045-21005-004	*Pressure Release Base; Air Pump	1	15	29	
892	045-21007-007	*Release Lever; Air Pump	1	15	30	
893	045-21009-000	*Spring; Release Lever	1	15	31	
894	045-21301-002	*Suction Base	1	16	40	
895	045-21302-009	*Suction Plate	1	16	42	
896	045-21305-008	*Pre-Suction Plate	1	16	44	
897	045-21306-101	*Duct; Suction Base	1	16	45	
898	045-21308-007	*Fan Base Plate	1	16	46	
899	045-21311-105	*Bracket; P-Ejection Sensor	1	16	37	
900	045-21312-004	Bracket; P-EJ Cover R	1	16	52	
901	045-21313-000	Bracket; P-EJ Cover F	1	16	51	
902	045-21315-003	*Bracket; Suction Motor	1	16	20	
903	045-21316-000	De-Electricity Brush; 180	1	16	47	
904	045-21701-000	*Wire Harness; Suction Unit	1	16	24	
905	045-21702-007	*Wire Harness; Separation Fun	1	15	5	
906	045-21703-003	*Wire Harness; P-Ejection Sensor	1	16	38	
907	045-21704-000	*Wire Harness; Pre.-Suction Unit	1	16	25	
908	045-24001-000	*Lock Lever; Disposal Box	1	24	4	
909	045-28001-004	*Master Making PCB 2	1	20	8	
910	045-28002-000	*Sub-Power Supply PCB	1	21	70	
911	045-28003-007	*Bracket; Sub-Power Supply PCB	1	21	69	
912	045-28004-003	*TPH Pressure Spring; 50	2	21	26	
913	045-28006-006	**TPH303R14	1	21	34	
914	045-28201-100	*TPH Drawer Connector U; M.-M Up	1	21	66	
915	045-28202-000	*Wire Harness; M.-M Upper Unit	1	21	59	
916	045-28203-006	*Wire Harness; Sub-Power Supply PCB	1	21	71	
917	045-30008-008	Bracket; Flat Cable Guide	1	18	42	
918	045-30100-001	*Lens Assy	1	18	33	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
919	045-34001-008	Front Cover	1	32	7	
920	045-34002-004	Bracket; Front Cover SW	1	27	28	
921	045-34003-000	Blind Cover	1	32	28	
922	045-34004-007	Cover; Scanner; P. Feeding Side	1	32	18	
923	045-34005-100	Rear Cover; Scanner	1	32	20	
924	045-34014-002	S.-Reduction Sponge; Drive	1	32	37	
925	045-34021-009	Side Cover; Rear R	2	32	19	
926	045-34022-005	Side Cover; Rear L	1	32	21	
927	045-34025-004	Bracket Upper L; Rear Cover	1	32	24	
928	045-34026-000	Bracket Upper R; Rear Cover	1	32	25	
929	045-34033-007	Emblem; RZ970E	1	32	2	
930	045-34034-003	Emblem; RZ971A	1	32	2	
931	045-34035-000	Emblem; RV9690C	1	32	2	
932	045-34036-006	Emblem; RZ990U	1	32	2	
933	045-34037-002	Emblem; RZ977E	1	32	2	
934	045-34038-009	Emblem; RZ977A	1	32	2	
935	045-34039-005	Emblem; RV9698C	1	32	2	
936	045-34040-003	Emblem; RZ997U	1	32	2	
937	045-34041-000	Seal; M.-M. Unit Release; Pic.	1	32	10	E
938	045-34042-006	Seal; M.-M. Unit Release; Eng.	1	32	10	U,A
939	045-34043-002	Seal; M.-M. Unit Release; Ch.	1	32	10	C
940	045-34045-005	S.-Reduction Sponge; Panel	1	32	34	
941	045-34046-001	S.-Reduction Sponge; Paper Ejection (Side)	2	32	30	
942	045-34047-008	S.-Reduction Sponge; Paper Ejection (F/R)	2	32	29	
943	045-34048-004	S.-Reduction Sponge; Paper Eje. Cover (L)	1	32	32	
944	045-34049-000	S.-Reduction Sponge; Paper Eje. Cover (R)	1	32	31	
945	045-34050-009	S.-Reduction Sponge; Bottom (Side)	2	32	33	RZ-xx0
946	045-34051-005	S.-Reduction Sponge; Rear Lower	1	32	36	RZ-xx0
947	045-34052-001	S.-Reduction Sponge; Front Lower	1	32	35	RZ-xx0
948	045-34112-004	S.-Reduction Sponge; MTPF Front Lower	1	32	35	RZ-xx7
949	045-34113-000	S.-Reduction Sponge; MTPF Rear Lower	1	32	36	RZ-xx7
950	045-34114-007	S.-Reduction Sponge; MTPF Bottom (Side)	2	32	33	RZ-xx7
951	045-37001-106	*SW PCB	1	27	21	
952	045-37002-005	*Panel Upper Cover	1	27	16	
953	045-37003-109	*Touch Panel Cover	1	27	15	
954	045-37004-105	*Print Control Key	1	27	11	
955	045-37005-101	*Numeric Key	1	27	12	
956	045-37006-108	*Print Position Center Key	1	27	13	
957	045-37007-104	*Print Position Adj. Key	1	27	14	
958	045-37013-007	*Sheet; Panel Mode Key Eng.	1	27	2	U,A
959	045-37014-003	*Sheet; Panel Mode Key Pic.	1	27	2	E
960	045-37015-000	*Sheet; Panel Mode Key Ch.	1	27	2	C
961	045-37017-002	*Sheet; Print Control Eng.	1	27	3	U,A
962	045-37018-009	*Sheet; Print Control Pic.	1	27	3	E
963	045-37019-005	*Sheet; Print Control Ch.	1	27	3	C
964	045-37020-003	*Numeric Display Cover	1	27	4	
965	045-37021-000	*Shield Mylar Sheet A; Sub-SW PCB	1	27	22	
966	045-37022-006	*Shield Mylar Sheet B; SW PCB	1	27	20	
967	045-37023-002	*Shield Mylar Sheet C; Mode Key	1	27	18	
968	045-37024-009	*Grounding Plate A; Panel	3	27	24	
969	045-37025-005	*Grounding Plate B; Panel	2	27	26	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
970	045-37026-109	*Frame; Panel	1	27	1	
971	045-37027-008	Panel Cover; Bottom	1	32	14	
972	045-37028-004	*Sub-SW PCB	1	27	23	
973	045-50002-103	M.-Motor Drive PCB	1	28	17	
974	045-50003-002	Junction PCB; Paper Feed	1	3	35	
975	045-50005-200	Power Supply; 17-HWW	1	28	18	
976	045-50007-202	RF-Tag PCB	1	27	34	
977	045-50008-004	*CCD Unit; PBA 600M	1	18	31	
978	045-50010-009	Secure Bracket; SH PCB	1	30	11	
979	045-50011-102	Hinge Bracket; Upper	1	30	10	
980	045-50013-008	Hinge Upper; PCB Bracket	1	28	13	
981	045-50014-004	Hinge Lower; PCB Bracket	1	28	14	
982	045-50015-000	Bracket Upper; Power Supply PCB	1	28	15	
983	045-50016-007	Noise Reduction Cover	1	30	3	
984	045-50017-208	Bracket; Option IF Connector	1	30	4	
985	045-50017-209	Bracket; Option IF Connector C	1	30	4	
986	045-50018-000	Bracket; SH4 PCB	1	30	1	
987	045-50019-006	Connector Mount	1	13	49	
988	045-50020-004	Bracket; Power Supply & Mech PCB	1	28	16	
989	045-50022-007	Bracket; SH Wire Harness	1	30	13	
990	045-50031-006	Wire Harness; Main Power SW	1	27	40	
991	045-50031-006	Wire Harness; Main Power SW	1	28	25	
992	045-50032-002	Main Power SW Assy	1	27	32	
993	045-53001-000	Wire Harness; FB Upper	1	2	49	
994	045-53001-000	Wire Harness; FB Upper	1	3	36	
995	045-53001-000	Wire Harness; FB Upper	1	5	24	
996	045-53001-000	Wire Harness; FB Upper	1	18	48	
997	045-53001-000	Wire Harness; FB Upper	1	19	41	
998	045-53001-000	Wire Harness; FB Upper	1	28	23	
999	045-53001-000	Wire Harness; FB Upper	1	30	7	
1000	045-53002-104	Wire Harness; TPH Drawer Connector H	1	20	26	
1001	045-53002-104	Wire Harness; TPH Drawer Connector H	1	28	34	
1002	045-53002-104	Wire Harness; TPH Drawer Connector H	1	30	8	
1003	045-53003-003	Wire Harness; Upper	1	29	2	
1004	045-53004-000	Wire Harness; Front Lower	1	13	50	
1005	045-53004-000	Wire Harness; Front Lower	1	20	45	
1006	045-53004-000	Wire Harness; Front Lower	1	27	35	
1007	045-53004-000	Wire Harness; Front Lower	1	29	4	
1008	045-53005-006	Wire Harness; Rear Lower	1	15	32	
1009	045-53005-006	Wire Harness; Rear Lower	1	16	54	
1010	045-53005-006	Wire Harness; Rear Lower	1	29	3	
1011	045-53006-002	Wire Harness; Paper Ejection Rear	1	6	11	
1012	045-53006-002	Wire Harness; Paper Ejection Rear	1	7	16	
1013	045-53006-002	Wire Harness; Paper Ejection Rear	1	28	21	
1014	045-53006-002	Wire Harness; Paper Ejection Rear	1	29	5	
1015	045-53008-005	Wire Harness; Panel Unit	1	27	27	
1016	045-53008-005	Wire Harness; Panel Unit	1	30	9	
1017	045-53009-001	Junction Wire Harness; M.-Motor	1	28	24	
1018	045-53010-000	Wire Harness; M.-Drive Power	1	28	32	
1019	045-53011-006	Wire Harness; Mech. CTL Drive	1	28	33	
1020	045-53013-009	*Wire Harness; D-Drawer H	1	13	30	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
1021	045-53013-009	*Wire Harness; D-Drawer H	1	13	39	
1022	045-53013-009	Wire Harness; D-Drawer H	1	27	36	
1023	045-53014-005	*Wire Harness; FB Pulse Motor	1	19	6	
1024	045-53028-006	*Wire Harness; Ver. Pos. Motor	1	5	23	
1025	045-75032-055	*Clamp Cam Assy	1	14	1	
1026	045-75034-058	Master Making Unit A3(Fig 20, Fig 21)	1	20		
1027	045-75280-051	Mech.-Control PCB; SU	1	28	19	
1028	045-75280-051	Mech.-Control PCB; SU	1	29	1	
1029	045-75286-050	Guide PLate (Upper) Assy	1	8		
1030	045-75287-056	Guide Plate (Middle) Assy (39-44)	1	8		
1031	045-75288-052	Guide Roller Assy (21-29)	1	8		
1032	045-75289-059	Main Motor Assy (21-27)	1	7		
1033	045-75290-057	Main Gear Assy; A3 (8-13)	1	7		A3
1034	045-75292-050	Air Damper Assy (31-43)	1	6		
1035	045-75293-056	Ver. Print Pos. Base Assy (3-23)	1	5		
1036	045-75294-052	Horizontal Motor Unit Assy (16-47)	1	13		
1037	045-75295-059	Pressure Roller Ass'y; A3	1	8		
1038	045-75297-051	Air Pump Assy (16-31)	1	15		
1039	045-75299-054	Suction Unit (1-46)	1	16		
1040	045-75300-052	Separation Fan Assy (1-5)	1	15		
1041	045-75301-059	Clamp Unit (1-10)	1	14		
1042	045-75303-051	**Cam Drive Shaft Assy	1	14	2	
1043	045-75307-057	*TPH Assy A3 600	1	21		
1044	045-75309-050	Pressure Solenoid Assy	1	7		
1045	045-75320--053	Main Gear Assy; Ledger (8-13)	1	7		Ledger
1046	045-75321-050	Panel Unit; RZ9 Eng.	1	27		U,A
1047	045-75322-056	Panel Unit; RZ9 Pic.	1	27		E
1048	045-75323-052	Panel Unit; RZ9 Ch.	1	27		C
1049	045-75324-059	*Pressure Shaft	1	8	1	
1050	045-97000-001	Scanner Unit; 600M II (Fig 18, Fig 19)	1	18		E,A,C
1051	045-97001-008	Scanner Unit; 600HB (Fig 18, Fig 19)	1	18		U
1052	408-02300-001	Battery;CR-2032	1	28	20	
1053	435-00047-004	*Ferrite Core	1	27	44	
1054	444-30002-101	Sensor GP1A75ER	1	20	44	
1055	444-30008-100	Sensor;LG-248NI1	3	2	36	
1056	444-30008-100	Sensor;LG-248NI1	3	3	16	
1057	444-30008-100	*Sensor; LG-248NI1	1	5	20	
1058	444-30008-100	*Sensor;LG-248NI1	1	6	10	
1059	444-30008-100	Sensor; LG-248NI1	1	7	15	
1060	444-30008-100	*Sensor; LG-248NI1	3	13	29	
1061	444-30008-100	*Sensor; LG-248NI1	2	14	9	
1062	444-30008-100	*Sensor; LG-248NI1	2	16	21	
1063	444-30008-100	*Sensor; LG-248NI1	2 (1)	18	5	
1064	444-30008-100	**Sensor; LG-248NI1	1	21	50	
1065	444-30008-100	*Sensor; LG-248NI1	2	23	49	
1066	444-30008-100	*Sensor; LG-248NI1	1	25	29	
1067	444-30008-100	*Sensor; LG-248NL1	2	26	47	
1068	444-30010-007	Sensor; LG285D1	1	27	31	
1069	444-33003-109	*Sensor; ON-171-A8	1	23	50	
1070	444-33006-000	*Sensor; PS-117ED1	2	4	23	
1071	444-33010-008	*PS119ED1	1	16	39	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
1072	444-39000-004	**Sensor; E-3674	1	23	40	
1073	444-41002-200	*Sensor; OS665633-703	1	25	28	
1074	444-42021-101	*Sensor; KH0686-10	1	8	41	
1075	444-42022-108	*Sensor; KH0686-11	1	8	36	
1076	444-42029-200	*Sensor (Send); KH0854-00	1	22	24	
1077	444-42030-305	*Sensor (Rcv); KH0854-01	1	21	20	
1078	444-43007-200	*Master Loading Sensor	1	25	26	
1079	444-51004-104	Sensor; YAA81-0070P	1	11	5	
1080	444-59002-208	RF-TAG Reader; Drum	1	11	16	
1081	444-59006-203	*RF-Tag Reader; Master	1	22	46	
1082	488-00047-105	Power Cord; RP3 UI	1	28	37	U
1083	488-00048-004	Power Cord; 220V EU (L)	1	28	37	A,E
1084	488-00049-108	Power Cord; Ch.	1	28	37	C
1085	488-90030-206	**Ground Wire; U3-55-R3	1	21	41	
1086	490-22020-004	*Main Motor; CWT03358G-30F-9K24A	1	7	21	
1087	490-31010-003	*Motor; KH42JM2B173	1	6	7	
1088	490-31013-002	*Motor; KH42JM2B231	1	13	21	
1089	490-33015-100	*Motor; PM42L-048-ZVS6	1	16	32	
1090	490-33015-100	**Motor; PM42L-048-ZVS6	1	20	2	
1091	490-33015-100	**Motor; PM42L-048-ZVS6	1	23	28	
1092	490-33016-106	*Motor; PM42L-048-ZVN5	1	5	22	
1093	490-41013-108	*Fan; D12F-24PLH1C13	2	15	2	
1094	490-41014-007	*Fan; E1033H24BYAZ-33	2	16	26	
1095	490-50006-106	Solenoid; Tds-10A-1056	1	20	37	
1096	490-50007-102	*Solenoid; TDS-09SL-59A	1	23	22	
1097	490-50009-008	*Solenoid; TDS-10AL-38	1	7	31	
1098	490-50010-006	Solenoid; TDS-08A-1030	1	2	48	
1099	490-50010-006	Solenoid; TDS-08A-1030	1	6	27	
1100	490-50010-006	*Solenoid; TDS-08A-4104	1	13	46	
1101	490-50010-006	*Solenoid; TDS-08A-1030	1	15	28	
1102	490-51018-108	MC-10-25	1	2	45	
1103	492-00001-108	Counter	2	27	39	
1104	550-21173-001	Seal; P.-Feed Pressure; Pic.	1	2	2	
1105	600-50057-006	Bearing; Flaw678ZZA	2	3	21	
1106	600-50057-006	*Bearing; Flaw678 ZZA	2	16	15	
1107	601-10195-004	Bearing; Ddlf-1910ZZR	2	8	15	
1108	601-10228-000	*Bearing; 6900ZZNR	2	22	28	
1109	607-03001-001	*Metal; S4X7X2	1	12	21	
1110	607-10003-001	Metal; F16X22/19X6; 26X2	1	7	36	
1111	607-10003-001	Metal; F16X22/19X6; 26X2	2	8	8	
1112	607-10005-004	**Metal; F8x10x3; 11.2x0.6	2	21	40	
1113	607-10006-000	*Metal; F6X8X4; 10X1	2	22	34	
1114	607-10006-000	**Metal; F6X8X4; 10X1	6	23	31	
1115	607-10008-003	*Metal; F10X14X10; 18X2	2	21	28	
1116	607-10009-000	*Metal; F6X10X6.5; 12X1.5	2	25	19	
1117	607-13000-402	*Metal; F6X10/9X6:12 X 1.5	4	16	30	
1118	607-13000-402	**Metal; F6X10/9X6:12 X 1.5	2	21	48	
1119	607-13000-402	*Metal; F6X10/9X6:12 X 1.5	2	26	34	
1120	607-15000-000	Metal; F8X13/12X5; 16X2	2	2	46	
1121	607-15000-000	Metal; F8X13/12X5; 16X2	1	3	22	
1122	607-15000-000	Metal; F8X13/12X5; 16X2	2	15	11	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
1123	607-15000-000	*Metal; F8X13/12X5;16X2	2	26	22	
1124	607-15000-400	*Metal; F8X12/11X10: 15X2	2	26	17	
1125	607-15001-503	Metal; F8X12/10.8X14; 16X2	1	2	47	
1126	607-15005-002	*Metal; F8X10X8; 12X1.5	2	23	17	
1127	607-15007-005	*Metal;F8X12X7;16X1.5	2	21	43	
1128	607-16001-000	Metal;F10X15/14X6;18X2	4	2	13	
1129	607-16001-000	Metal;F10X15/14X6;18X2	2	8	17	
1130	607-16001-000	*Metal;F10X15/14X6;18X2	2	26	7	
1131	607-40001-003	*Metal;F8X11/10X5.5;14X2	1	8	24	
1132	610-00022-003	**Damper; 2G50-C-10HG	1	22	62	
1133	610-00022-003	*Damper; 2G50-C-10HG	1	23	23	
1134	610-10009-005	*One-Way Hinge; OWNF6-1NRS	1	4	17	
1135	611-90006-009	Pulley; P18-5GT-12	1	7	6	
1136	611-90007-102	*Pulley; P42-5Gt	1	7	11	
1137	611-90008-109	*Pulley; P42-5GT-13	1	7	26	
1138	611-90010-006	**Pulley Ass'y; P40-2Gt-5	1	20	5	
1139	611-90012-009	*Pulley; P70-2Gt-5	1	22	30	
1140	611-90016-004	*Pulley; P18S2M6	1	16	18	
1141	612-03106-008	*Gear;M1X80X10	1	15	17	
1142	612-10001-009	*Gear;M1.25X22	1	25	22	
1143	612-10002-005	*Gear;M1.25X12	1	25	23	
1144	612-10003-001	*Gear;M1.25X9	1	25	24	
1145	612-10004-008	*Gear;M1.25X12X7	2	26	18	
1146	612-10005-004	*Gear;M0.8X54	1	26	31	
1147	612-10006-000	*Gear;M0.8X60+M0.8X16	1	26	30	
1148	612-10009-107	*Gear; M1X24	1	3	26	
1149	612-10010-008	**Gear;M1X20X6	1	21	46	
1150	612-10013-007	*Gear;M0.8X36X10	1	5	18	
1151	612-10017-002	*Gear;M1X80X10	1	7	25	
1152	612-10018-009	*Gear; M0.8X25	1	26	33	
1153	612-10019-005	*Gear; M1.25X16X4.5	1	26	36	
1154	612-10020-003	*Gear; M1.25X16X8.5	1	26	37	
1155	612-10021-107	Gear;M0.8X33X7.4	1	2	12	
1156	612-10024-106	*Gear; M1X25X8.5 OWC	1	12	31	
1157	612-10026-001	Gear;M1X45X6	1	12	8	
1158	612-10027-008	*Gear;M0.8X19X4	1	12	25	
1159	612-10028-101	*Gear;M0.8X43X3	1	12	27	
1160	612-10035-000	*Gear; M0.5x21x6	1	16	31	
1161	612-10036-007	*Gear;M1x20x7	1	4	16	
1162	612-10037-003	*Gear;M0.8X65X6	1	13	17	
1163	612-10038-000	*Gear;M0.8X41X6	1	13	18	
1164	612-10039-006	*Gear;M1X72X6	1	4	21	
1165	612-10047-009	*Gear;M1X80X10	1	7	24	
1166	612-10048-005	*Gear; M1X80X10	1	6	33	
1167	612-10050-000	*Gear;M1X126X7.5	1	5	13	
1168	612-10051-006	*Gear;M1X140X8	1	5	6	
1169	612-10103-006	*Gear;M0.8X13X5	1	23	9	
1170	612-10104-002	*Gear;M0.8X16X5	1	23	18	
1171	612-10105-009	*Gear;M0.8X16X4	1	23	26	
1172	612-10106-005	*Gear;M0.8X34X4	1	23	25	
1173	612-11103-000	*Gear; M0.8X15X7	1	26	45	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
1174	612-11300-107	Gear;M0.8X34X8.5	2	2	19	
1175	612-11304-005	**Gear; M0.8X37+M1X15	1	14	4	
1176	612-12103-003	*Gear;M1X16X3.2	1	4	10	
1177	612-12208-107	Gear; M1X28X8	1	6	30	
1178	612-12701-008	*Gear; M1X71X14	1	26	8	
1179	612-16040-006	*Gear;M1X40X18	2	7	27	
1180	612-30001-005	*Helical gear; M1x16x6	1	16	35	
1181	612-50005-007	*Worm gear; M1x12x1	1	16	28	
1182	612-80006-008	**Gear;M0.8X25+M0.8X14	1	21	52	
1183	612-80007-004	**Gear;M0.8X25+M1X14	1	21	54	
1184	612-80008-000	**Gear; M0.8X20+M0.8X14	1	21	55	
1185	612-80011-001	*Gear; M0.8X23+M0.8X14	1	3	27	
1186	612-80012-008	*Gear; M0.8X30+M0.8X14	1	3	28	
1187	612-80013-004	*Gear; M0.8X29+M1X14	1	3	29	
1188	612-80018-006	**Gear;M0.8X36+M0.8X18	2	23	30	
1189	612-80019-002	**Gear;Mx0.5X89+M0.8X34	1	23	29	
1190	612-80027-005	*Gear;M1X42+M1X28	1	5	8	
1191	612-81303-006	*Gear; M0.8X35+M0.8X15	1	5	19	
1192	612-81303-006	**Gear; M0.8X35+M0.8X15	1	14	5	
1193	612-81303-006	*Gear; M0.8X35+M0.8X15	1	26	41	
1194	612-81304-002	*Gear;M0.8X16+M0.8X36	1	13	20	
1195	612-81401-008	*Gear; M0.8X17+M0.8X49	1	26	44	
1196	612-81602-003	*Gear; M1X17+M0.8X61	1	26	43	
1197	612-82407-000	Gear; M1X41+M1X29	1	6	29	
1198	613-10002-002	**Gear Pulley; M0.5X130+17-2	1	20	3	
1199	613-10005-001	*Pulley Gear; 0.8X45+28S2M	1	16	23	
1200	613-11300-007	*Pulley Gear; 0.8X31+53S2M	1	26	28	
1201	620-00010-001	Belt; 645-5GT-10	1	7	29	
1202	620-80001-008	**Belt; 256-2GT-4	1	20	4	
1203	621-00001-000	*Belt; 40-S2M-290	1	26	29	
1204	621-00005-005	*Belt; 40-S2M-172	1	16	19	
1205	628-21401-009	*Transfer Belt 2; 2X140	4	25	16	
1206	629-00005-003	*Flat Belt; 15X0.65X502	3	16	3	
1207	634-10403-104	Collar; F10X60	1	8	20	
1208	634-10404-100	Collar; F10X48	1	8	18	
1209	635-10002-107	*Stepped Screw;F4X4.5;M3X4	2	21	65	
1210	635-10004-100	Stepped Screw;F5X5;M3X3	4	20	24	
1211	635-10005-203	**Stepped Screw;F6X7.2;M3X4	1	21	33	
1212	635-10006-102	*Stepped Screw;F5X10.8;M3X3	2	26	15	
1213	635-10007-109	*Stepped Screw;F5X3;M3X3	2	23	44	
1214	635-10010-100	Stepped Screw;F6X4;M4X6	2	9	3	
1215	635-10011-106	Stepped Screw;F5X2;M3X3:SG	4	9	18	
1216	635-17423-108	*Stepped Screw;F4X2.2;M3X4	2	22	11	
1217	635-17433-103	Stepped Screw;F4X3;M3X6	2	12	13	
1218	635-17493-106	Stepped Screw;F4X18.5;M3X6	2	9	24	
1219	635-17613-209	Stepped Screw;F6X1.8;M3X4	1	2	41	
1220	635-17613-209	*Stepped Screw;6X1.8;M3X4	2	8	7	
1221	635-17613-209	*Step Screw; D6X1.5; M3X4.5	1	22	49	
1222	635-17614-205	Stepped Screw;6X1.7;M4X4	1	15	14	
1223	635-17624-006	*Stepped Screw;6X2.2;M4X2.5	2	8	62	
1224	635-17634-001	Stepped Screw;F6X3;M4X4	2	12	6	

INDEX II (RZ9)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
1225	635-17814-107	Stepped Screw; 8X1.7;M4X4.3	1	7	5	
1226	635-17824-005	Stepped Screw;F8X2.3;M4X4.4	4	2	5	
1227	635-18513-100	*Stepped Screw;F5X1.5;M3X3	1	26	50	
1228	639-00002-000	*Sheet ;Squeegee Roller	2	12	26	
1229	639-00610-000	P Washer; 6X13.5X1		8	14	
1230	640-60040-000	*O Ring;P4-1.9	1	12	22	
1231	640-60060-000	O Ring;P6-1.9	2	9	4	
1232	640-60100-100	O Ring ; P10-2.4	1	11	3	
1233	640-67340-009	*O Ring;34-3.6	1	6	38	
1234	640-67340-009	*O Ring;34-3.6	1	15	24	
1235	660-01015-100	Rubber Foot	4	1	14	
1236	660-05000-018	Magnet Catch;SM-50P	1	4	35	
1237	660-05000-018	*Magnet Catch;SM-50P	1	17	23	
1238	660-05000-018	Magnet Catch;SM-50P	1	27	29	
1239	660-05105-006	Door Catch	1	32	5	
1240	660-05106-002	Cover Catch	1	32	4	
1241	665-00308-002	Edging Saddle;LES-25L	1	1	30	
1242	665-00308-002	Edging Saddle; LES-25L	2	28	26	
1243	665-00309-009	Edging Saddle; LES-1017	1	28	35	
1244	665-00309-009	Edging Saddle; LES-1017	1	30	15	
1245	665-00310-007	FFC Clamp; FC-45	1	18	43	
1246	665-00311-003	Wire Saddle; WS-4N-V0	2	28	36	
1247	665-01212-009	Reuse Band ; RSG-130	3	25	33	
1248	665-02021-606	Clip; NK-7N Nikko Nylon Clip	1	15	34	
1249	665-02043-006	Wire Saddle;LWS-1316	6	1	29	
1250	665-02043-006	*Wire Saddle;LWS-1316	2	21	67	
1251	665-02043-006	Wire Saddle;LWS-1316	20	28	28	
1252	665-02043-006	Wire Saddle;LWS-1316	2	30	14	
1253	665-02044-002	Wire Saddle;LWS-0711	1	12	33	
1254	665-02044-002	Wire Saddle;LWS-0711	1	20	46	
1255	665-02044-002	*Wire Saddle;LWS-0711	1	22	66	
1256	665-02044-002	*Wire Saddle;LWS-0711	2	23	52	
1257	665-02044-002	Wire Saddle;LWS-0711	6	27	41	
1258	665-02055-004	Wire Saddle; LWS-2218	5	28	27	
1259	665-02901-002	Power Band T10	2	15	7	
1260	665-04002-005	Square Bushing	1	27	42	
1261	665-04002-005	Square Bushing; SB4025	1	28	30	
1262	665-04054-005	Square Bushing;Sb-2718	1	9	12	
1263	665-04054-005	Square Bushing;Sb-2718	2	28	31	
1264	665-04055-001	SB-6025	1	27	43	
1265	665-04055-001	SB-6025	1	28	29	
1266	665-04068-006	*Edging Saddle;TSB-1909L	1	13	26	
1267	699-04003-107	Sheet; Front Door Det. Sensor	1	32	27	

III. INDEX

INDEX III (Auto Control Stacking Tray/ Multi Tray Paper Feeder)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
1	018-33151-203	Fence Cushion	1	33	17	
2	021-11317-103	SW Plate	1	42	2	
3	021-11318-002	Spring; SW	1	42	3	
4	021-15015-101	*Light Absorber Strip	1	37	63	
5	021-51030-109	Push Button SW Assy	1	33	4	
6	023-12223-000	Gear Cover; Elevator Motor	1	39	7	
7	023-12234-109	Motor Chassis; Elevator Motor	1	39	1	
8	023-12244-104	Elevator Motor Collar	2	39	2	
9	023-12247-006	Cover; Elevator Motor	1	39	8	
10	023-21606-205	Paper Guide F; P.-Rcv.-T.	1	33	14	
11	023-21607-201	Paper Guide R; P.-Rcv.-T.	1	33	15	
12	023-21608-003	Back Stopper; P.-RCV.-T	1	33	16	
13	023-21612-108	*Flap; P.-Rcv.-T.	12	33	10	
14	023-21613-007	*Balancer; Flap; P.-RCV.-T.	12	33	11	
15	023-21614-003	*Flap Cover; P.-Rcv.-T.	4	33	13	
16	023-21615-204	*Holder; Flap; P.Rcv.-T.	4	33	12	
17	023-21621-000	Lever; Paper Guide; P.-Rcv.-T.	3	33	18	
18	023-21634-004	Shaft; Fence	3	33	19	
19	023-74001-054	Motor Assy 445	1	39	9	
20	023-75147-052	Flap; P.-Rcv.-T. Assy	4	33		
21	030-04025-007	*Seal; Size	1	40	42	
22	030-04026-003	*Seal; MAX	1	40	75	
23	030-04038-109	*Seal; Lock	1	40	53	
24	030-04128-108	Seal; Side Guide Lock	1	40	54	
25	030-14347-002	*Base; Upper Limit Adj. Screw	1	37	54	
26	030-14347-002	*Base; Upper Limit Adj. Screw	1	38	54	
27	030-14376-002	*Stripper Pad; Foam	1	37	32	
28	030-14376-002	*Stripper Pad; Foam	1	38	32	
29	030-19205-001	Support; Clamp Worm	1	39	11	
30	030-21003-009	*Stepped Screw; 2.2	2	42	47	
31	030-21016-100	*Roller; Pick-up	2	37	1	
32	030-21016-100	*Roller; Pick-up	2	38	1	
33	030-21017-000	Joint; Elevator	2	39	20	
34	030-21020-000	*Wire; Tray	2	40	13	
35	030-21026-203	*Shaft; Pick-Up Roller	1	37	8	
36	030-21026-203	*Shaft; Pick-Up Roller	1	38	8	
37	030-21028-109	Shaft; Elevator 2	2	39	19	
38	030-21031-100	*Shaft; Latch	1	36	19	
39	030-21051-003	*Bracket; Side Guide F2	1	40	61	
40	030-21052-000	*Bracket; Side Guide R2	1	40	66	
41	030-21055-009	*Latch; Lock 1	1	40	58	
42	030-21056-005	*Latch; Lock 2	1	40	67	
43	030-21059-101	*Plate; Lock 1	1	40	55	
44	030-21060-100	*Plate; Lock 2	1	40	65	
45	030-21061-009	**Guide; Support	1	40	27	
46	030-21073-104	*Shaft; Drive	1	40	18	
47	030-21203-105	*Lock Ring; Roller	2	37	2	
48	030-21203-105	*Lock Ring; Roller	2	38	2	
49	030-21204-004	*Lever; Lock 2	2	40	59	
50	030-21205-108	*Holder; Guide 1	1	40	70	
51	030-21206-104	*Holder; Guide 2	1	40	63	
52	030-21207-003	*Bracket; Potentiometer Slide	1	40	46	
53	030-21208-000	*Holder; Drum Wire	1	40	19	
54	030-21209-006	Gear; Elevator 1	2	39	14	

INDEX III (Auto Control Stacking Tray/ Multi Tray Paper Feeder)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
55	030-21210-004	Gear; Elevator 2	2	39	15	
56	030-21238-103	Bracket; Tray Lock	2	39	31	
57	030-21240-000	Spring; Tray Lock	2	39	30	
58	030-21248-001	Spring; Gear	2	39	18	
59	030-21258-007	*Pulley; Wire F 12X5404	2	40	16	
60	030-21259-100	*Plate; Pulley Wire F12-5404	2	40	17	
61	030-21260-109	*Bracket; Wire 2	2	40	9	
62	030-21261-008	*Slider; Wire 2	2	40	8	
63	030-21262-101	*Bracket; Wire Fixation	4	40	10	
64	030-21263-108	*Bracket; Wire 1	2	40	21	
65	030-21264-007	*Slider; Wire 1	2	40	20	
66	030-21265-003	*Gear; Damper	1	40	23	
67	030-21266-000	*Idler Pulley	4	40	11	
68	030-21267-103	*Holder; Pulley F	2	40	22	
69	030-21270-104	*Holder; Pulley R	2	40	12	
70	030-21276-005	*Latch; Guide	2	40	72	
71	030-21278-105	*Guide Ass'y; Front	1	40	62	
72	030-21283-109	*Guide Ass'y; Rear	1	40	69	
73	030-21288-003	*Pulley; Potentiometer	2	40	49	
74	030-21289-107	*Plate; Belt Fixation	2	40	64	
75	030-21290-105	*Shaft; Slider	2	40	52	
76	030-21291-101	*Cover; Potentiometer	1	40	47	
77	030-21292-108	*Cover; Belt	1	40	48	
78	030-21295-000	*Spring; Latch	2	40	56	
79	030-21296-006	*Plate Spring; Lock F	1	40	57	
80	030-21297-002	*Lever; Lock 1	2	40	60	
81	030-21299-005	*Plate Spring; Lock R	1	40	68	
82	030-21300-100	*Stepped Screw; 2.2	4	40	71	
83	030-21301-107	*Stay; Guide	1	40	4	
84	030-21302-006	*Stopper; Table	3	40	5	
85	030-21303-100	*Bracket; Tray	1	40	31	
86	030-21304-106	*Base Plate; Tray	1	40	34	
87	030-21306-001	*L.O. Sheet	1	40	43	
88	030-21307-105	*Plate; Sensor	2	40	36	
89	030-21309-108	*Cushion; Tray	2	40	39	
90	030-21310-009	*Cushion; Tray 1	2	40	40	
91	030-21311-200	*Cover; Base Plate	2	40	41	
92	030-21312-109	*Bracket; Damper	1	40	24	
93	030-21314-101	*Bracket; Separation	1	40	2	
94	030-21315-108	*Lever; Tray Lock	1	40	3	
95	030-21316-104	**Lever; Ratchet	1	40	29	
96	030-21317-100	**Lever; Ratchet 1	1	40	28	
97	030-21318-000	**Spring; Lock	1	40	30	
98	030-21319-103	**Pin; Support	1	40	26	
99	030-21328-102	*Bracket; Pick-up Roller	1	37	6	
100	030-21328-102	*Bracket; Pick-up Roller	1	38	6	
101	030-21329-109	*Bracket; Paper Feed Shaft	1	37	5	
102	030-21329-109	*Bracket; Paper Feed Shaft	1	38	5	
103	030-21330-000	*Pulley; Paper Feed	2	37	10	
104	030-21330-000	*Pulley; Paper Feed	2	38	10	
105	030-21339-007	*Holder; Separation Pad	1	37	31	
106	030-21339-007	*Holder; Separation Pad	1	38	31	
107	030-21343-004	*Spring; Separation	1	37	29	
108	030-21343-004	*Spring; Separation	1	38	29	

INDEX III (Auto Control Stacking Tray/ Multi Tray Paper Feeder)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
109	030-21347-000	*Shaft; Paper Sensor	1	37	49	
110	030-21347-000	*Shaft; Paper Sensor	1	38	49	
111	030-21348-006	*Spring; Paper Sensor	1	37	50	
112	030-21348-006	*Spring; Paper Sensor	1	38	50	
113	030-21349-100	*Brush; Roller Cleaner 2	2	37	71	
114	030-21349-100	*Brush; Roller Cleaner 2	4	38	37	
115	030-21352-003	*Cushion; Rubber F12-5404	2	38	34	
116	030-21358-109	*Arm; SW	1	36	15	
117	030-21360-006	*Latch; Guide Bracket Ass'y	2	36	16	
118	030-21361-002	*Handle Latch	1	36	18	
119	030-21362-106	*Roller; Tension 1	2	36	20	
120	030-21363-005	*Plate; Tension	4	36	21	
121	030-21363-005	*Plate; Tension	2	42	18	
122	030-21364-206	*Spring; Tension	4	36	22	
123	030-21365-008	*Spring; Latch Front	1	36	17	
124	030-21376-000	*Guide Plate Lower 1	2	38	63	
125	030-21381-100	*Guide Plate Lower 2	1	38	36	
126	030-21385-009	*Plate; Passage Sensor	2	38	38	
127	030-21389-004	*Plate; Passage Sensor 2	1	37	67	
128	030-21395-004	*Link; JAM release 1	1	38	61	
129	030-21396-000	*Link; JAM release 2	1	38	62	
130	030-21397-007	*Hinge	2	36	12	
131	030-21407-002	*Bracket; Switch	1	38	40	
132	030-21409-005	*Bottom Stay	1	36	13	
133	030-21416-001	*Spring; Guide Front	2	38	64	
134	030-21417-008	*Spring; Guide Rear	2	38	65	
135	030-21418-004	*Spring; Pick-Up Roller	1	37	48	
136	030-21418-004	*Spring; Pick-Up Roller	1	38	48	
137	030-21419-000	*Stepped Screw; Guide Plate 4611	4	38	45	
138	030-21430-004	Bracket; Interlock	2	39	32	
139	030-21461-007	Stepped Screw 4.5	2	39	38	
140	030-21477-000	*Transfer Roller	1	42	49	
141	030-21478-007	*Guide Lock	2	42	41	
142	030-21479-003	*Bracket; Guide Lock	1	42	40	
143	030-21491-003	*Roller Tension Upper 1	2	42	29	
144	030-21492-000	*Roller Tension Upper 2	2	42	33	
145	030-21502-005	Lever; FL Guide Plate Release	1	42	27	
146	030-22002-006	Pulley; 2	1	34	4	
147	030-22002-006	Pulley; 2	1	35	10	
148	030-22003-002	Pulley; 3	1	35	11	
149	030-22004-106	Pulley; 4	2	34	8	
150	030-22006-001	Clamp; Belt	2	34	23	
151	030-22007-008	Flange	7	34	3	
152	030-22007-008	Flange	4	35	9	
153	030-22008-004	Tension Plate	2	34	6	
154	030-22008-004	Tension Plate	1	35	13	
155	030-22012-001	Shaft; 5 End	1	35	32	
156	030-22014-004	Gear; 1 End	1	35	27	
157	030-22015-000	Gear; 1 Side	1	34	19	
158	030-22016-007	Gear; 2 End	1	35	31	
159	030-22017-003	Gear; 2 Side	1	34	16	
160	030-22020-101	Bracket; Sensor 1	1	35	34	
161	030-22022-007	Clamp; Belt; End	1	35	17	
162	030-22027-009	Spring; End SW	1	35	5	

INDEX III (Auto Control Stacking Tray/ Multi Tray Paper Feeder)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
163	030-22029-001	Stepped Screw; M4X6	2	34	7	
164	030-22029-001	Stepped Screw; M4X6	1	35	14	
165	030-22030-107	Bracket; Harness Clamp	1	34	10	
166	030-22031-006	Tension Spring; Side	2	34	13	
167	030-22031-006	Spring; Tension Plate	1	35	15	
168	030-22039-007	Actuator; Fence SW	1	35	3	
169	030-22043-101	Lock Plate F; AS Tray	1	33	20	
170	030-22044-108	Lock Plate R; AS Tray	1	33	21	
171	030-22048-006	Plate; Actuator	1	35	4	
172	030-22058-001	Pulley; 5	4	34	5	
173	030-22058-001	Pulley; 5	2	35	12	
174	030-22061-002	Bracket; SW	1	33	3	
175	030-22067-205	Frame; End Fence	1	35	1	
176	030-22070-001	Gear Box; End	1	35	26	
177	030-22073-000	Metal; 1	1	34	18	
178	030-22073-000	Metal; 1	1	35	33	
179	030-22085-009	Bracket; AF-PCB	1	34	35	
180	030-22086-005	Gear Box; Side	1	34	20	
181	030-22088-008	Shaft5; Side	1	34	17	
182	030-51093-100	*Potentiometer A'ssy 2	1	40	51	
183	030-51168-100	*Wire Harness; FG	2	40	74	
184	033-12001-003	*Arm; Tension F	1	37	44	
185	033-12004-002	*Arm; Tension R	1	37	41	
186	033-12006-005	*Link; Solenoid	2	37	42	
187	033-12007-001	*Roller; Tension 2	1	37	45	
188	033-12008-008	*Spring; Roller Tension	2	37	38	
189	033-12009-004	*Stopper; Upper Unit	2	38	35	
190	033-12011-009	*Bracket; Paper Det. Sensor	2	40	38	
191	033-12014-008	Sheet; Separation Adj.	2	39	25	
192	033-12016-000	*Drawer Cover	1	40	6	
193	033-12050-004	Knob; Pressure	2	39	24	
194	033-12051-000	Knob; Angle	2	39	23	
195	033-12053-208	*Side Frame F	1	37	60	
196	033-12055-103	*Side Frame R	1	37	34	
197	033-12059-400	*Bracket Ass'y; Guide Lower	1	36	14	
198	033-12061-006	*Cover; Guide Lower	1	36	11	
199	033-12068-000	*Spacer 1	1	37	28	
200	033-12068-000	*Spacer 1	1	38	28	
201	033-12137-002	*Base Bracket; Separation	1	37	12	
202	033-12137-002	*Base Bracket; Separation	1	38	12	
203	033-12141-000	*Bracket; Separation	1	37	27	
204	033-12141-000	*Bracket; Separation	1	38	27	
205	033-12142-006	*Cam; Stripper	1	37	13	
206	033-12142-006	*Cam; Stripper	1	38	13	
207	033-12143-002	*Bracket; Separation 2	1	37	22	
208	033-12143-002	*Bracket; Separation 2	1	38	22	
209	033-12144-009	*Lever; P-Release	1	37	20	
210	033-12144-009	*Lever; P-Release	1	38	20	
211	033-12145-005	*Bracket; P-Release	1	37	24	
212	033-12145-005	*Bracket; P-Release	1	38	24	
213	033-12146-001	*Spring; P-Release	1	37	19	
214	033-12146-001	*Spring; P-Release	1	38	19	
215	033-12147-008	*Stay; Transfer Unit Lower	1	37	33	
216	033-12147-008	*Stay; Transfer Unit Lower	1	38	33	

INDEX III (Auto Control Stacking Tray/ Multi Tray Paper Feeder)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
217	033-12148-004	*Gear; Stripper Angle	1	37	21	
218	033-12148-004	*Gear; Stripper Angle	1	38	21	
219	033-12149-000	*Lever; P-Adjust	1	37	26	
220	033-12149-000	*Lever; P-Adjust	1	38	26	
221	033-12151-005	*Shaft; Stripper Angle	1	37	15	
222	033-12151-005	*Shaft; Stripper Angle	1	38	15	
223	033-12152-109	*Shaft; P-Adjust	1	37	14	
224	033-12152-109	*Shaft; P-Adjust	1	38	14	
225	033-12153-008	Shaft; Adjuster	4	39	27	
226	033-12154-004	*Base; Plunger	1	37	16	
227	033-12154-004	*Base; Plunger	1	38	16	
228	033-12155-000	*Spring; Plunger	1	37	17	
229	033-12155-000	*Spring; Plunger	1	38	17	
230	033-12156-007	*Plunger Pin	1	37	18	
231	033-12156-007	*Plunger Pin	1	38	18	
232	033-12161-302	*Frame; Tray	1	40	1	
233	033-12164-000	*End Fence; Fixed	1	40	7	
234	033-12168-005	*Bracket; Slide	1	40	73	
235	033-12188-103	*Shaft; Paper Feed	1	37	7	
236	033-12188-103	*Shaft; Paper Feed	1	38	7	
237	033-12191-007	*Bracket; Wire Harness	2	38	60	
238	033-12192-003	*Stay; Paper Feed	1	37	47	
239	033-12192-003	*Stay; Paper Feed	1	38	47	
240	033-12193-000	*Base Plate; Upper Limit Adj.	1	37	53	
241	033-12193-000	*Base Plate; Upper Limit Adj.	1	38	53	
242	033-12194-006	*Slide Plate; Upper Limit Adj.	1	37	56	
243	033-12194-006	*Slide Plate; Upper Limit Adj.	1	38	56	
244	033-12195-002	*Shaft; Upper Limit Adj.	1	37	58	
245	033-12195-002	*Shaft; Upper Limit Adj.	1	38	58	
246	033-12196-009	*Bracket; Paper Sensor	1	37	52	
247	033-12196-009	*Bracket; Paper Sensor	1	38	52	
248	033-12198-001	*Knob; Upper Limit Adj.	1	37	59	
249	033-12198-001	*Knob; Upper Limit Adj.	1	38	59	
250	033-12200-006	*Spacer 2	1	37	57	
251	033-12200-006	*Spacer 2	1	38	57	
252	033-12206-004	*Shaft; Stripper	1	37	30	
253	033-12206-004	*Shaft; Stripper	1	38	30	
254	033-12207-108	Cover; Stripper 2	1	39	26	
255	033-12208-104	Cover; Stripper 1	1	39	28	
256	033-12220-104	*Guide Plate Lower 4	1	37	61	
257	033-12225-106	*Guide Plate Lower 5	1	37	62	
258	033-12229-004	*Roller; Paper Feed	1	37	46	
259	033-12229-004	*Roller; Paper Feed	2	38	66	
260	033-12230-002	*Stopper; Clutch 1	2	37	37	
261	033-12231-009	*Stopper; Clutch 2	3	37	35	
262	033-12233-109	*Flange	1	36	27	
263	033-12242-000	Slide Rail	4	41	6	
264	033-12245-000	Cover; Elevator Motor Bracket	2	39	16	
265	033-12246-405	*Wire Harness; Tray 1	1	40	32	
266	033-12248-106	*Junction Wire Harness; Tray	1	40	33	
267	033-12255-005	*Junction Harness; Pick-up Sensor	1	37	70	
268	033-12255-005	*Junction Harness; Pick-up Sensor	1	38	42	
269	033-34010-006	Bracket; Front Cover	2	41	7	
270	033-34014-001	Side Cover; MTPF 1	1	36	5	

INDEX III (Auto Control Stacking Tray/ Multi Tray Paper Feeder)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
271	045-11020-102	Fixing Screw	1	42	12	
272	045-14001-001	Shaft; Elevator	2	39	21	
273	045-14005-007	Bracket; Elevator Motor	2	39	12	
274	045-14010-000	*Cover; Transfer Unit Upper	1	36	10	
275	045-14015-002	*Bracket; Transfer Motor	1	36	2	
276	045-14020-006	*Bracket; Sensor 3	1	37	66	
277	045-14021-002	*Base; Sensor 3	1	37	65	
278	045-14022-009	*Shaft; Roller Tension	1	42	34	
279	045-14023-005	*Nip Spring	2	42	19	
280	045-14024-001	*Holder; Nip Spring	2	42	20	
281	045-14025-008	*Pressure Adj. Plate	2	42	21	
282	045-14026-004	*Release Lever	2	42	31	
283	045-14027-000	*Base Plate F; Pressure Adj.	1	42	25	
284	045-14028-007	*Bracket; Solenoid	2	42	36	
285	045-14029-003	*Spring Stay	1	42	44	
286	045-14030-109	*Guide Plate 2	1	42	39	
287	045-14033-000	*Guide Plate 1	1	42	26	
288	045-14038-002	Shaft; Guide Plate Release Lever	1	42	28	
289	045-14039-009	*Plate Spring; Guide	1	42	43	
290	045-14040-104	*Bracket; Sensor	1	42	50	
291	045-14041-003	*Shaft; Hook	1	42	42	
292	045-14043-006	Bracket; Transfer Motor	1	42	15	
293	045-14046-005	Stopper Plate	1	42	14	
294	045-14047-001	Joint Shaft F; Transfer Guide	2	42	11	
295	045-14048-008	Joint Shaft R; Transfer Guide	2	42	10	
296	045-14049-004	Guide Plate 3	1	42	54	
297	045-14050-002	*Spring; Guide Plate	2	42	38	
298	045-14051-009	*Reinforce Plate; Guide Plate 2	2	42	48	
299	045-14052-005	*Reinforce Plate; Guide Plate 1	2	42	35	
300	045-14053-001	*Cover; Paper Feed Upper	1	36	8	
301	045-14055-004	Shaft; Release Lever	1	42	6	
302	045-14056-000	Bracket F; Transfer Guide Plate	1	42	8	
303	045-14057-007	*Plate; Light Absorber Strip	1	37	64	
304	045-14062-000	*Base Plate R; Pressure Adj.	1	42	22	
305	045-14067-002	*Lever Cam; Pressure Adj.	2	42	23	
306	045-14068-009	*Hold Plate; Lever Cam	2	42	24	
307	045-14069-005	Lever; Jam Release Cover	1	42	5	
308	045-14074-009	Bracket R; Transfer Guide Plate	1	42	9	
309	045-14075-005	Stay; Release Lever Shaft	1	42	7	
310	045-14076-001	*Wire Harness; Transfer Guide Unit	1	42	53	
311	045-14077-008	*Wire Harness H; MTPF	1	36	31	
312	045-14077-008	*Wire Harness H; MTPF	1	37	69	
313	045-14077-008	*Wire harness H; MTPF	1	38	43	
314	045-14078-004	*Sensor Cover	1	42	51	
315	045-22001-002	Paper Receiving Tray; AS	1	33	1	
316	045-22001-002	Frame M; AS Tray	1	33	7	
317	045-22003-001	Frame F; AS Tray	1	33	8	
318	045-22005-008	Frame R; AS Tary	1	33	9	
319	045-22006-004	Rail; End Fence	1	35	2	
320	045-22007-000	Actuator; SW Cam	1	35	18	
321	045-22008-007	Belt Slider M; AS	1	35	20	
322	045-22009-003	SW Cam; AS	1	35	19	
323	045-22010-001	Slide Plate U; AS	2	34	30	
324	045-22010-001	Slide Plate U; AS	1	35	25	

INDEX III (Auto Control Stacking Tray/ Multi Tray Paper Feeder)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
325	045-22011-008	Rail Slider M; AS	1	35	24	
326	045-22012-004	Slide Base; AS	2	34	26	
327	045-22012-004	Slide Base; AS	1	35	21	
328	045-22013-000	Spring; AS Slide Base	4	34	27	
329	045-22013-000	Spring; AS Slide Base	2	35	22	
330	045-22014-007	Slide Plate L; AS	2	34	28	
331	045-22014-007	Slide Plate L; AS	1	35	23	
332	045-22015-003	End Fence Bracket	1	35	6	
333	045-22020-007	Belt Slider F; AS	1	34	25	
334	045-22021-003	Rail Slider; AS	2	34	29	
335	045-22022-000	Rail; Side Fence	2	34	22	
336	045-22023-006	Belt Slider R; AS	1	34	31	
337	045-22026-005	Plate; Catch	1	33	2	
338	045-22027-001	Cover; AS Lower	1	33	5	
339	045-22028-008	Bracket; Magnet Catch	1	33	27	
340	045-22029-004	Support Bracket R; AS Tary	1	33	25	
341	045-22031-009	Support Bracket F; AS Tary	1	33	24	
342	045-22032-005	Frame; Side Fence	1	34	1	
343	045-22034-008	AS Tray Arm; RZ	2	33	22	
344	045-22035-004	Bracket; AS Lower Cover	2	33	6	
345	045-22043-007	Boss; AS Tray	1	33	23	
346	045-22201-001	AF-CTRL-PCB 2	1	34	34	
347	045-22202-008	Wire Harness; AF 1	1	34	33	
348	045-22202-008	AF Wire Harness 1	1	35	37	
349	045-22203-004	Wire Harness; AF 2	1	34	36	
350	045-22203-004	AF Wire Harness 2	1	35	39	
351	045-22204-205	AF-I/F Cable 2	1	34	37	
352	045-22801-009	Seal; AS Operation Pic.	1	33	29	
353	045-34101-100	Bracket; Jam Release Cover SW	1	42	4	
354	045-34103-005	Front Cover; MTPF	2	41	8	
355	045-34104-001	Left Cover; MTPF	1	41	1	
356	045-34105-008	Right Cover; MTPF	1	41	3	
357	045-34106-004	Rear Cover; MTPF	1	41	2	
358	045-34107-000	Upper Cover; MTPF	1	41	4	
359	045-34108-007	Bracket; Upper Cover	2	41	5	
360	045-34109-003	Seal; Tray	2	41	10	
361	045-34111-105	Paper Size Seal	2	41	9	
362	045-34115-003	S.-Reduction Sponge; MTPF Cover	1	36	9	
363	045-34116-000	S.-Reduction Sponge; MTPF Drive Rear	1	36	6	
364	045-34117-006	S.-Reduction Sponge; MTPF Bottom	1	39	45	
365	045-34118-002	S.-Reduction Sponge; MTPF F. Upper	1	39	44	
366	045-50006-109	FRONT-CNTL-PCB	1	39	35	
367	045-50100-008	Bracket; PCB	1	39	34	
368	045-50101-004	Mount Plate	1	39	36	
369	045-53016-008	Wire Harness K; MTPF	1	36	7	
370	045-53016-008	Wire Harness K; MTPF	1	39	41	
371	045-53017-004	Wire Harness; MTPF Upper	1	39	40	
372	045-53018-000	Wire Harness K; MTPF Power	1	39	42	
373	045-53019-007	Wire Harness H; MTPF Power	1	39	39	
374	045-53020-005	Wire Harness; MTPF Motor	1	39	43	
375	045-53022-008	Wire Harness; Tray	1	39	37	
376	045-53027-000	*Tray Safety SW	1	38	41	
377	045-53027-000	Tray Safety SW	2	39	33	
378	045-75310-058	Tray Unit; SU	1	40		

INDEX III (Auto Control Stacking Tray/ Multi Tray Paper Feeder)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
379	045-75311-054	*Guide Support Assy; SU	1	40		
380	045-75312-050	Transfer Unit Lower; MTPF	1	36		
381	045-75313-057	Transfer Motor Assy; SU	1	36		
382	045-75325-055	Transfer Guide Unit (18-26,29-53)	2	42		
383	443-32005-100	*Sensor; GP2A25J0000F	2	37	68	
384	443-32005-100	*Sensor; GP2A25J0000F	2	38	39	
385	443-32005-100	*Sensor; GP2A25J0000F	2	40	35	
386	444-10001-001	AM50031A431F1	2	42	1	
387	444-12000-002	D3M-01L2-3	2	34	24	
388	444-12000-002	D3M-01L2-3	1	35	38	
389	444-30000-109	*Sensor; GP1A73AJ0000F	1	37	55	
390	444-30000-109	*GP1A73AJ0000F	1	38	55	
391	444-30000-109	*Sensor; GP1A73AJ0000F	2	40	37	
392	444-30006-000	EE-SX1235A-P2	2	34	32	
393	444-30006-000	EE-SX1235A-P2	2	35	35	
394	444-33006-000	*Sensor; PS117ED1	1	42	52	
395	444-43006-106	KR1207-AALF	1	35	36	
396	490-20007-000	*TD3357-240	1	36	1	
397	490-20007-000	Motor; TD3357-240	1	42	13	
398	490-33013-204	17PM-K046-G1ST	1	34	21	
399	490-33013-204	17PM-K046-G1ST	1	35	28	
400	490-50008-109	*TDS-12E-5006A	2	37	43	
401	490-50008-109	Solenoid; TDS-12E-5006A	2	42	37	
402	490-51013-106	*Clutch; HI-MIC5-11	1	42	46	
403	490-51016-105	*Clutch; HI-MIC5-27	2	36	24	
404	490-51017-101	*Clutch; HI-MIC5-28	3	36	25	
405	601-10195-004	*Bearing; DDLF-1910ZZR	3	37	39	
406	601-10195-004	*Bearing; DDLF-1910ZZR	4	38	46	
407	601-10195-004	*Bearing; DDLF-1910ZZR	2	42	45	
408	607-13003-002	*Metal; F6X8X3;10X1	2	42	32	
409	607-60002-006	*Metal; 8	3	37	4	
410	607-60002-006	*Metal; 8	3	38	4	
411	607-60002-006	Metal; 8	8	39	13	
412	607-60002-006	*Metal; 8	2	40	14	
413	607-60003-002	*Metal 6	2	36	23	
414	609-00001-005	Bearing; A-19-B2	2	39	29	
415	609-00002-001	*Bearing; TPF-816ZZ-5	5	37	3	
416	609-00002-001	*Bearing; TPF-816ZZ-5	2	38	3	
417	609-00003-008	Bearing; TPF-613ZZ-5	1	34	15	
418	609-00003-008	TPF-613ZZ-5	1	35	30	
419	610-00015-007	Damper; AS Tray	1	33	26	
420	610-00020-000	*TM-189-4HG	1	40	25	
421	611-90019-003	*Pulley; P22+P27-S3M	1	36	26	
422	611-90021-008	*Pulley; P28S3M10	1	36	3	
423	612-10009-107	Gear; M1X24	1	39	3	
424	612-30002-001	Gear; M1X24X12	1	42	17	
425	612-30003-008	Gear; M1X34X9	1	42	16	
426	612-51001-005	Worm Gear; M0.8X1	1	39	10	
427	612-80011-001	Gear; M0.8X23+M0.8X14	1	39	6	
428	612-80012-008	Gear; M0.8X30+M0.8X14	1	39	5	
429	612-80013-004	Gear; M0.8X29+M1X14	1	39	4	
430	620-00004-001	Belt; 60S3M150	1	34	9	
431	620-00004-001	*Belt; 60S3M150	1	37	11	
432	620-00004-001	*Belt; 60S3M150	1	38	11	

INDEX III (Auto Control Stacking Tray/ Multi Tray Paper Feeder)

ID	Part No.	Part Name	Q'ty	Fig.	No.	Remark
433	620-00008-007	Belt; 60S3M825	1	35	16	
434	620-00011-008	*Belt; 80S3M312	1	36	28	
435	620-00012-004	*Belt; 80S3M336	1	36	29	
436	620-00013-000	*Belt; 80S3M195	1	36	30	
437	620-00015-003	Belt; 80S3M132	1	36	4	
438	620-00019-008	Belt; 60S3M438	2	34	11	
439	621-00002-006	*Belt; 40-S2M-630	1	40	50	
440	634-00002-004	*Clip JRE3	1	37	51	
441	634-00002-004	*Clip; JRE3	1	38	51	
442	634-00003-000	Lock Ring; JRE4	9	34	2	
443	634-00003-000	Lock Ring; JRE4	7	35	8	
444	635-17523-102	*Stepped Screw; 5X2;M3X3	1	37	25	
445	635-17523-102	*Stepped Screw; 5X2;M3X3	1	38	25	
446	635-17624-006	*Stepped Screw; 6X2.2;M4X2.5	1	37	23	
447	635-17624-006	*Stepped Screw; 6X2.2;M4X2.5	1	38	23	
448	660-01012-003	Rubber Foot; TK-26	2	39	22	
449	660-05107-106	Magnet Catch; CA-0147B	1	33	28	
450	665-02038-002	*Edging Saddle; EDS-2	2	37	40	
451	665-02043-006	Wire Saddle; LWS-1316	1	39	47	
452	665-02043-006	Wire Saddle; LWS-1316	8	39	48	
453	665-02065-000	*Cable Clamp; UAMS-05-0	13	37	36	
454	665-02066-006	*Wire Saddle; LWS-1SL	5	40	76	
455	665-02067-002	*Cable Clamp; UAMS-09-0	5	38	44	
456	665-04055-001	SB-6025	1	39	46	
457	665-04061-001	Edging Saddle; ES-0505-2	1	34	12	
458	665-04061-001	Edging Saddle; ES-0505-2	2	35	7	
459	665-04062-008	Edging Saddle; LES-1010	2	35	40	
460	665-04063-004	*Bushing; NB-9.5	2	40	44	
461	X-520	Pin; 2X12	2	34	14	
462	X-520	Pin; 2X12	2	35	29	
463	X-520	*Pin; 2X12	2	37	9	
464	X-520	*Pin; 2X12	2	38	9	
465	X-520	*Pin; 2X12	2	40	15	
466	X-520	*Pin; 2X12	4	42	30	